

RGB Disco Light

Art.no 18-1361 Model JC-3023-UK

Please read the entire instruction manual before using the product and then save it for future reference. We reserve the right for any errors in text or images and any necessary changes made to technical data. If you have any questions concerning technical problems please contact our Customer Services.

Product description

- RGB LED projector light with AC/DC adaptor and 5 m cable.
- Can be used both indoors and outdoors.
- Mounting plate for screw-fastening and ground spike for installing in the ground.

Safety instructions


- The product is not a toy. Keep it out of children's reach.
- Do not switch the product on while it is still in the packaging.
- For indoor and outdoor use.
- Use only the included AC/DC mains adaptor.
- The adaptor must be placed where it is protected from rain.
- Make sure that the screw cap is tightened over the connector to ensure that the connection is watertight.
- Discard the product if it or the mains adaptor is damaged in any way.
- The LEDs inside the product are not replaceable.
- Never look directly into the LED unit; it could damage your eyes.
- This product must not be modified or adapted in any way.

Specifications

LED	RGB type
Mains adaptor	In 100–240 V AC, 50/60 Hz Out 9 V DC, 2.25 W, Max. 250 mA
Cable length	5 m
Weight	350 g
Height	45 cm

Installation

- Bear in mind that the disco light must be placed less than 5 m from the mains adaptor in order for the connection cable to reach.
- When used outdoors, the adaptor must be placed where it is protected from rain.
- Extension cables may not be used when the disco light is used outdoors.
- Choose a location for the disco light. Use the ground spike if the light is to be located on soft ground, otherwise the mounting plate can be screwed directly onto firm surfaces.

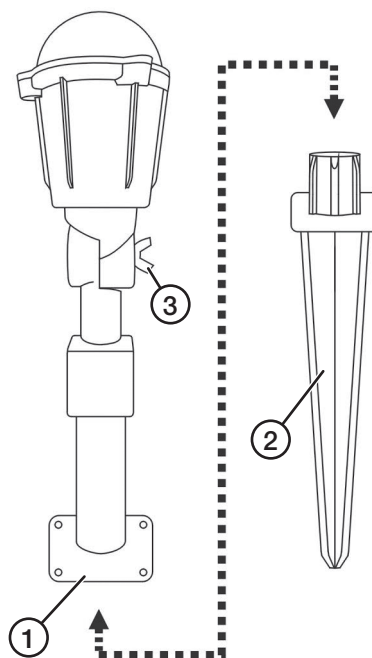

1. Mounting plate
2. Spike
3. Lamp head angle locking screw

Outdoor ground spike use:

1. Push the ground spike (2) into the ground in a suitable place. Push the disco light onto the ground spike.
2. Connect the free end of the cable to the mains adaptor and fasten it with the screw cap.
3. Plug the mains adaptor into an electrical socket.
4. Adjust the lamp head to the desired angle and tighten the locking screw (3).

Indoor use:

1. Fasten the mounting plate (1) to a suitable surface using four screws.
2. Connect the free end of the cable to the mains adaptor and fasten it with the screw cap.
3. Plug the mains adaptor into an electrical socket.
4. Adjust the lamp head to the desired angle and tighten the locking screw (3).

Care and maintenance

Clean the light with a soft sponge and warm soapy water.

Responsible disposal

This symbol indicates that this product should not be disposed of with general household waste. This applies throughout the entire EU. In order to prevent any harm to the environment or health hazards caused by incorrect waste disposal, the product must be handed in for recycling so that the material can be disposed of in a responsible manner. When recycling your product, take it to your local collection facility or contact the place of purchase. They will ensure that the product is disposed of in an environmentally sound manner.

