 


# Convector Heater with Timer

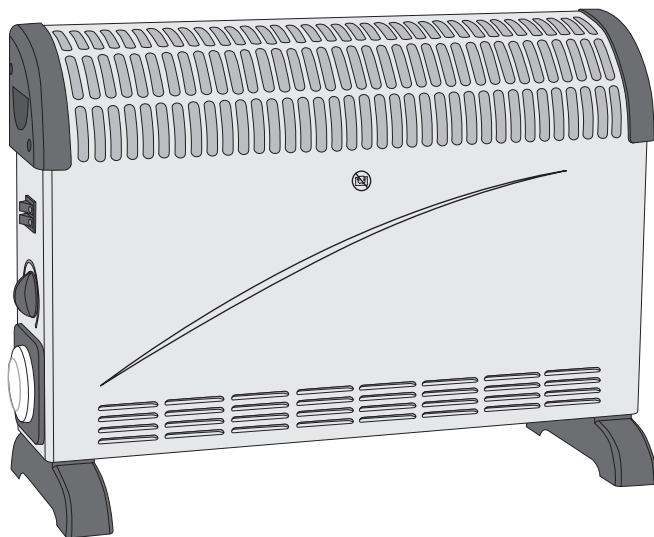

**Art.no**  
18-1271

**Model**  
DL01SC-UK

Ver. 20150806

# clas ohlson

# Convector Heater with Timer

Art.no 18-1271      Model DL01SC-UK

Please read the entire instruction manual before using the product and then save it for future reference. We reserve the right for any errors in text or images and any necessary changes made to technical data. In the event of technical problems or other queries, please contact our Customer Services (see address details on the back).

## Safety

**Warning!** The following safety instructions must be followed; for your safety and the safety of others. Carefully read through all the instructions before using the appliance.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- **Warning!** - Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- The convector heater should not be placed directly beneath a wall socket.

- Never place the convector heater close to a bathtub, shower or swimming pool.
- The convector heater must never be immersed in water for cleaning.
- Do not place the convector heater close to curtains and/or combustible materials which could ignite and start a fire. The convector heater must not be placed on a soft carpet, rug or similar surface which could block the air intake on the bottom of the heater. Fire hazard!
- The convector heater must not be covered over with anything whilst it is switched on or before it has cooled down after use.
- Do not coil the mains lead around the convector heater.
- The convector heater must never be used where flammable liquids or explosive gases are stored.
- The convector heater must not be used as a towel dryer or for drying clothes.
- Do not use the convector heater for heating greenhouses, saunas, drying rooms or similar locations.
- Do not use the convector heater for heating locations where livestock or animals are housed.
- The convector heater should be placed on a flat, level surface.
- The convector heater becomes very hot during use and will remain so for a while, even after being switched off. The convector heater should therefore never be touched until it has cooled sufficiently.
- The convector heater should be treated with care; it should not be subjected to impacts and vibrations.
- The convector heater must only be connected to an earthed electrical socket.
- If the convector heater is damaged it should be replaced by a qualified service technician.
- If the mains lead is damaged it must only be replaced by the manufacturer, retailer or other qualified service technician.

- The convector heater is only intended for domestic use. It must not be used on building sites, in greenhouses, barns or stables containing combustible dust.
- The convector heater becomes very hot during use. Pull out the plug and let the convector heater cool before cleaning.
- The convector heater should be plugged into an electrical socket which is visible and easy to access.
- Always unplug the convector heater when it is not in use.
- The convector heater is only designed for normal indoor use and must not be used outdoors.
- Never turn the convector heater off by unplugging it. Always turn the convector heater off by setting the on/off switch to the off position.
- Ensure that no foreign objects enter the convector heater as this may lead to short circuiting, electric shock, or a fire hazard.
- Never position the convector heater in such a way that the mains lead is directly in front of or touching the housing of the heater.
- Only use the convector heater with the feet attached. This model is not designed to be wall mounted.
- The convector heater must only be connected to an earthed electrical socket with a power supply of 220–240 V AC.
- Only use the convector heater as described in the instruction manual. Do not use the convector heater for any purpose other than that for which it was intended or modify it in any way.
- Make sure the convector heater is clean and is not covered with dust or residue.
- The convector heater is designed to be placed on a hard, even horizontal surface with the feet facing down.
- For extra safety, all electrical products connected to the mains should be run through an RCD for personal safety. The RCD should be rated to trip at: Tripping current 30 mA.

- Remove the plug from the electrical socket carefully, by gripping the plug; not by pulling the mains lead.
- Do not use an extension lead with the convector heater, the cable could overheat and cause a fire.
- Keep the mains lead of the convector heater away from the parts of the heater which become hot during use.
- **Caution:** Never cover the convector heater, doing so could cause overheating and fire.
- Do not use the convector heater if the mains lead or plug is damaged in any way. Do not use the convector heater if it is malfunctioning, if it has been dropped or if it is damaged in any way.




**Note:** Never cover the heater. If covered, there is a risk of overheating or even fire.

## Assembly

Securely attach both feet to the bottom of the convector heater using the supplied sheet metal screws.


**Note:** The convector heater must not be used if the feet are damaged or missing.

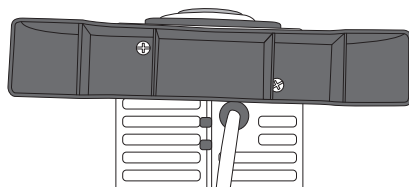


## Operating instructions

**Note:** The first time the heater is switched on it can emit a slight odour and smoke, this is completely normal.


1. Place the convector heater on a firm, level surface.
2. The heater has three power settings:

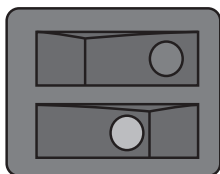

750 W

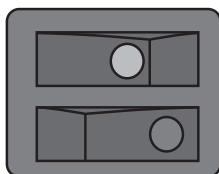

1250 W

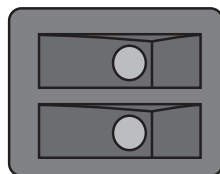

2000 W

## Setting the desired temperature

1. Set the timer mode switch to **I** (it is possible to have the heater switched on all the time, regardless of the timer).
2. Turn the thermostat knob to the maximum setting.
3. Select a power setting (experiment to find the best setting for the location).
4. When the desired temperature has been reached, slowly turn the thermostat knob back until it clicks and the heater is switched off.
5. The heater will maintain the set temperature by automatically switching on and off.
6. With the thermostat knob set to **MIN**, the heater will maintain a room temperature of around 5 °C.


**Note:** Bear in mind that factors such as the size of the room, the outside temperature and how well the building is insulated, all affect the ability of the heater to warm the room up. If the room is too big, the heater might not be powerful enough to reach the desired temperature or even keep the room above 5 °C.

## Overheating protection

- The heater is fitted with an over-temperature safety cut-off which switches the heater off if it overheats.
- To reset the over-temperature safety cut-off, unplug the heater and let it cool for 15–20 minutes.
- Then plug the heater back into a wall socket. The over-temperature safety cut-off should now be reset and the heater should work normally.

## Timer

1. Timer mode switch
2. Arrow for current time
3. Segments

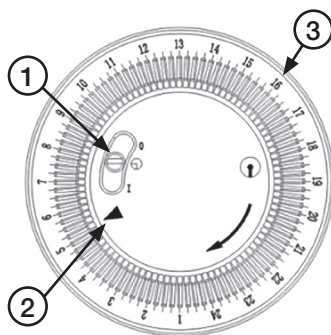


The convector heater is equipped with a 24-hour timer with pull-out segments for setting the on and off times. Each segment represents 15 minutes. The sliding timer mode switch can be set to 3 positions:


**0** – the timer runs but the heater cannot be switched on.

**I** – the timer switches the heater on/off in accordance with the timer settings.

**II** – the heater can be switched on and off manually, independently of the timer.

## Setting the timer

1. Slide the timer mode switch (1) so that it lines up with .
2. Turn the timer dial until the current time lines up with the arrow (2).
3. Pull out the segments (3) to set the time period/s during which you want the heater to be switched on for.

It is possible at any time to slide the timer mode switch to position **I** to keep the heater on all the time or to **0** to switch it off. Sliding the timer mode switch back to the  position again will cause the heater to be controlled by the timer again.

**Note:** Bear in mind that if the heater has been unplugged from the electrical socket or otherwise de-energised, the current time on the timer will need to be reset.

## Care and maintenance

- Switch the heater off, unplug it from the wall socket and let it cool before cleaning it and putting it away.
- Clean the heater using a lightly moistened cloth. Use only mild cleaning agents, never solvents or corrosive chemicals.
- Hoover the underneath of the heater regularly to prevent dust from building up in the air intake.
- Store the heater in its box in a cool and dry location, together with its instruction manual.

## Disposal

The product should be disposed of in accordance with local regulations. If you are unsure how to proceed, contact your local council.

## Specifications

|                         |                         |
|-------------------------|-------------------------|
| <b>Rated voltage</b>    | 220–240 V AC, 50 Hz     |
| <b>Power</b>            | 750 W, 1250 W or 2000 W |
| <b>Cable length</b>     | 1.5 m                   |
| <b>Size (w × h × d)</b> | 54 × 38 × 20 cm         |

## Sverige

---

Kundtjänst tel: 0247/445 00  
fax: 0247/445 09  
e-post: kundservice@clasohlson.se

Internet www.clasohlson.se

Post Clas Ohlson AB, 793 85 INSJÖN

## Norge

---

Kundesenter tlf.: 23 21 40 00  
faks: 23 21 40 80  
e-post: kundesenter@clasohlson.no

Internett www.clasohlson.no

Post Clas Ohlson AS, Postboks 485 Sentrum, 0105 OSLO

## Suomi

---

Asiakaspalvelu puh.: 020 111 2222  
sähköposti: asiakaspalvelu@clasohlson.fi

Internet www.clasohlson.fi

Osoite Clas Ohlson Oy, Maistraatinportti 4 A, 00240 HELSINKI

## Great Britain

---

Customer Service contact number: 020 8247 9300  
e-mail: customerservice@clasohlson.co.uk

Internet www.clasohlson.co.uk

Postal 10 – 13 Market Place  
Kingston Upon Thames  
Surrey  
KT1 1JZ

## Deutschland

---

Kundenservice Unsere Homepage [www.clasohlson.de](http://www.clasohlson.de) besuchen und auf Kundenservice klicken.

# clas ohlson