


VC720004MUK Rev1

morphy richards[®]
smart ideas for your home



Multifunction Steam Cleaner Tank

 Please read and keep these instructions for future use

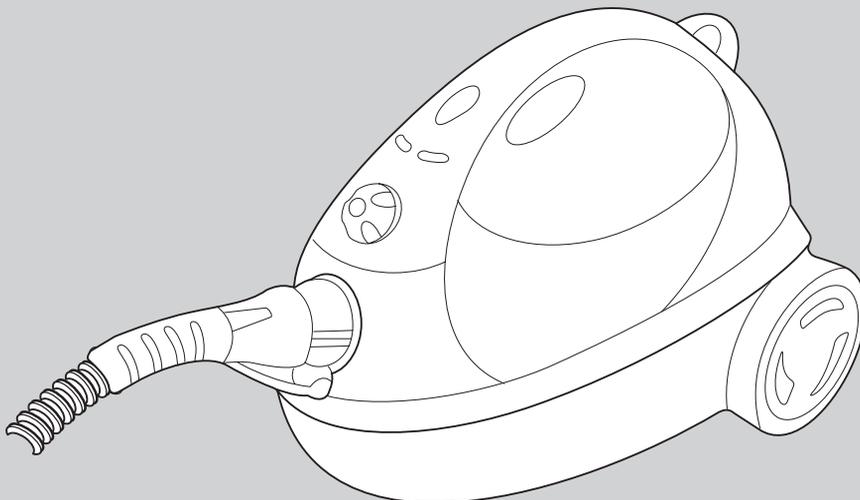

IMPORTANT: To prevent limescale problems which would not be covered by the guarantee, use only deionised, demineralised or distilled water (available from most large supermarkets), or **Morphy Richards' Water Softener** (for more information, call our UK spares helpline below).

SPARES:

All spares, eg. micro-fibre cloths and water softener, may be purchased by calling our UK spares helpline on: **0344 873 0710** or logging onto **www.morphyrichards.com**

For competitions, product hints and tips and more join us at



www.morphyrichards.co.uk/blog



www.facebook.com/morphyrichardsuk



[@loveyourmorphy](https://twitter.com/loveyourmorphy)

www.morphyrichards.com

* Register online for your 2 year guarantee. See back of this instruction book for details. (UK and Ireland customers only)


Health and Safety

The use of any electrical appliance requires the following common sense safety rules.
Please read these instructions carefully before using the product.

- **WARNING: Disconnect from the mains supply before carrying out any routine maintenance.**
- This appliance can be used by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Keep appliance out of the reach of children when it is energised or cooling down.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be undertaken by children without supervision.

Personal safety

- **WARNING: Never direct steam at electrical components or fittings. If in doubt about the suitability of steam for cleaning an appliance, contact the appliance manufacturer for advice prior to cleaning.**
- **WARNING: Never touch the plug or cable with wet hands.**
- **WARNING: Attachments and tools will be hot after use. Allow to cool before attempting to remove.**
- **WARNING: Do not discharge the steam towards people or animals. Danger of scalding.**

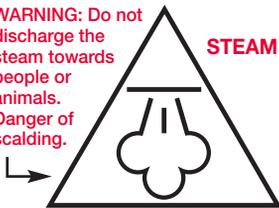

- **WARNING: Do not use the appliance without the filler cap in place.**
- **WARNING: In the event of a fault, excess pressure may be released from beneath the filler cap.**
- To protect against fire, electric shock and personal injury, do not immerse cord, plug or steam cleaner in water or other liquid.
- The plug should be removed from the wall socket after use, before cleaning, filling or changing the accessories, or carrying out user maintenance.

Location

- Do not use or keep this product outside.
- Do not store the appliance near hot surfaces eg. ovens or heating appliances.

Mains cable

- **WARNING: A damaged or severed mains cable fitted with a plug should never be connected to the mains supply. It must be destroyed, as a damaged cable becomes hazardous if connected to a power socket.**
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified person to avoid a hazard.
- Do not allow the mains lead to become strained.

Product safety

- **WARNING: Always test on an inconspicuous area first. Never use on materials that can not resist high temperature, such as dralon, natural fur etc.**
- Never modify the steam cleaner in any way.
- Never operate the steam cleaner without water in the tank.
- Never fill the steam cleaner's tank with anything other than deionised, demineralised or distilled water.

- The appliance is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.

Other safety considerations

- Do not use any chemical detergents, perfumes, alcohol or descaler etc in water.
- Repairs to electrical appliances are only to be undertaken by trained personnel.
- Unprofessional repairs can be dangerous for users.
- Use only genuine Morphy Richards spare parts and accessories.
- The appliance must not be left unattended while connected to the supply mains.
- This steam cleaner is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.


Electrical requirements

- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).
- **WARNING: This appliance must be earthed.**
- Should the fuse in the mains plug require changing, a 13 amp BS1362 fuse must be fitted.

Contents

Health and safety	2
Electrical requirements	2
Product overview / Features	4
Operating the appliance	5
Steam cleaning floors	5-7
Using the accessories	7
List of attachments (excluding floorhead)	8
Refilling during use	9
Anti-scale	9
After use	9
Storage	9-10
Maintenance	10
Contact us	10
Notes	11
Guarantee	12

Product overview

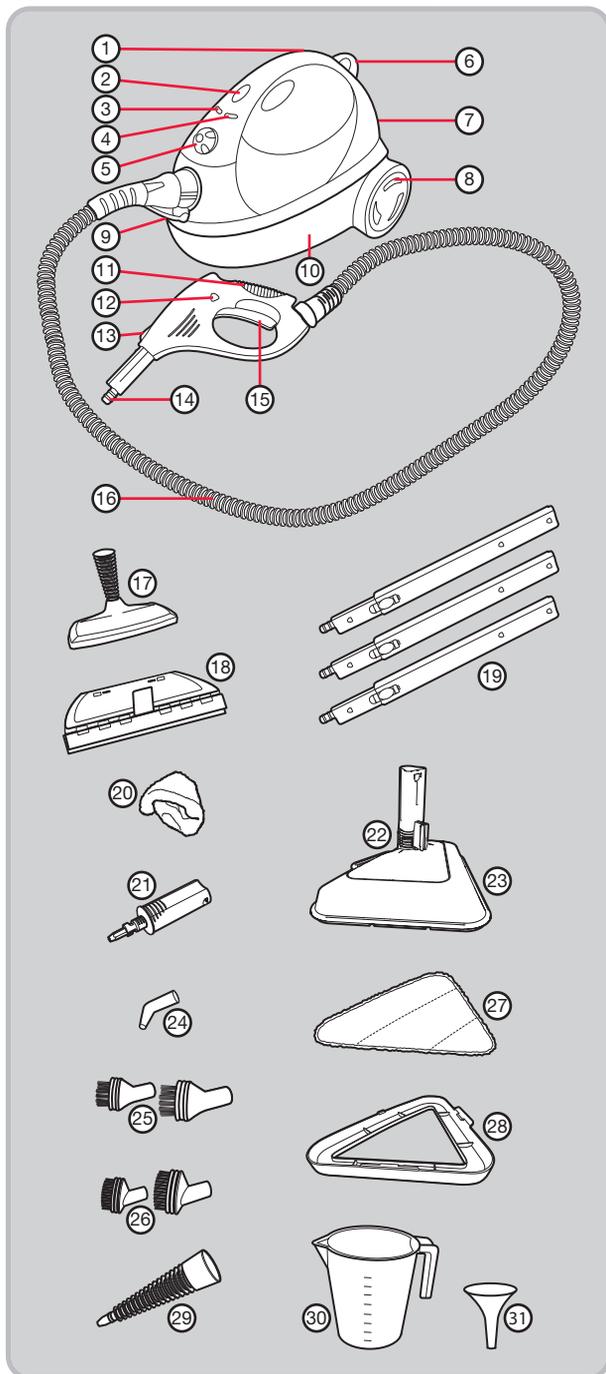

Features

- (1) Carrying handle
- (2) On/off power switch
- (3) Power indicator light
- (4) Steam ready light
- (5) Variable steam control
- (6) Filler cap
- (7) Tube park
- (8) Wheels
- (9) Hose inlet and flap
- (10) On-board tool storage cart
- (11) Hose handle
- (12) Steam trigger lock
- (13) Accessory release button
- (14) Handle steam nozzle
- (15) Steam trigger
- (16) Hose

Accessories

- (17) Upholstery nozzle
- (18) Window squeegee attachment
- (19) Extension tubes (x3)
- (20) Upholstery nozzle cloth
- (21) Accessory adaptor
- (22) Stiff floor brush (shown fitted into floorhead)
- (23) Floorhead
- (24) Angled nozzle
- (25) Small and large nylon brushes
- (26) Small and large brass brushes
- (27) Floor cloth
- (28) Carpet glider
- (29) Jet nozzle
- (30) Measuring jug
- (31) Funnel

Operating the appliance

IMPORTANT: The pressurised steam is at a high temperature. Always test on an inconspicuous area first. Never use it on objects or surfaces which cannot resist this temperature, or on surfaces with coatings or polishes, or on delicate materials such as dralon, plastic, natural fur or antique items etc. If in doubt, check carefully on a part of the material where minor marks will not matter.

Steam cleaning floors

IMPORTANT: The steam cleaner should not be used on:

- bare wooden floors or any surfaces where wood is exposed (as the surface will absorb moisture and may distort).
- damaged hardfloors or hardfloors with gaps present (as the flooring will absorb moisture and may distort).


Additionally, do not keep the floorhead (23) in one place for an extended period because the continual heat may cause damage to carpets and some hardfloor types such as laminate flooring.

- Use the **low steam setting** on sealed wood and laminate flooring, do not make the floor overly wet.
- Use the **medium steam setting** on tiled flooring, do not make the floor overly wet.
- Use the **high steam setting** on stubborn marks and dirt.

Lock the trigger (see step 6 of “Steam Cleaning Floors” on page 6) and allow the cloth or attachment to cool before removing.

Thoroughly sweep or vacuum floors before steam cleaning.


The stiff floor brush (22) should only be used on hard ceramic type floors.

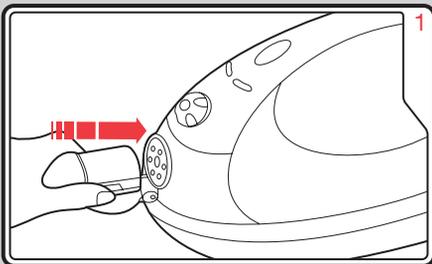

Pull the hose inlet flap (9) down at the front of the cleaner.

Push the hose connector firmly and fully into the cleaner socket.

WARNING: Please allow the product to cool and release any pressure before removing the hose.

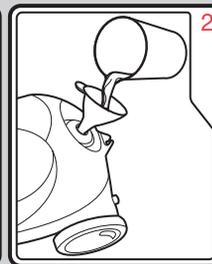

Unscrew the filler cap (6) by turning anti-clockwise.

NOTE: If there is pressure in the boiler, the filler cap cannot be removed. Switch off, release any pressure via the hose trigger and press the red button on the filler cap to allow the cap to turn.



Fill the boiler with a maximum of 1 litre of water by using the jug and funnel provided.

IMPORTANT: To prevent limescale problems in the product, only use deionised, distilled or demineralised water (or Morphy Richards' Water Softener). Any problems arising from limescale will invalidate the product guarantee.

Refit the filler cap and fully tighten by turning clockwise. If the filler cap will not tighten, press down the red button.

NOTE: If there is pressure in the product, the red button cannot be pushed down.

Steam cleaning floors (continued)

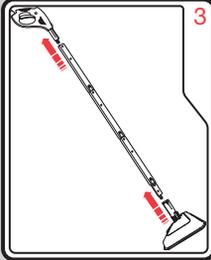
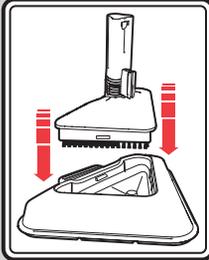


Ensure the stiff floor brush (22) is fitted into the floorhead (23), or use the stiff floor brush separately on tough areas. Press the pedal to remove the stiff floor brush.

Attach the floorhead to the extension tube(s) (19) or directly onto the hose handle (11).

If using the extension tubes, push them onto the handle steam nozzle (14) as far as they will go until you hear a click.


To clean very dirty areas, move the floorhead over the surface more slowly in order to increase the cleaning action of the steam.

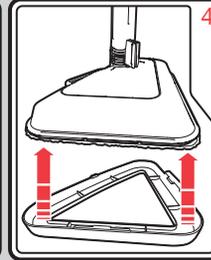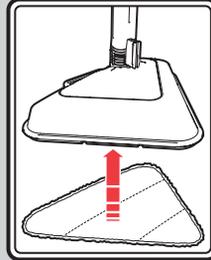

Fit the cloth to the floorhead using the grips on the underside of the floorhead. If cleaning carpets, the carpet glider (28) should be attached to the floorhead.

The cleaning power of the cloth can be optimised by flipping, changing and washing the cloth regularly.


Additional cloths can be ordered through our helpline.

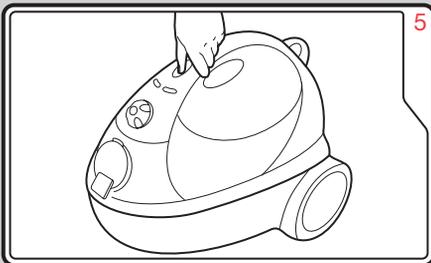

WARNING: Before switching ON, ensure the steam outlet is located safely away from persons or animals.

Plug in at the mains outlet and switch on the steam cleaner at the on/off power switch (2). The red power indicator light (3) will illuminate. When the steam is up to pressure, the green steam ready light will illuminate. This will take approximately six minutes. The steam cleaner is now ready to use.

The green steam ready light will cycle on-and-off during operation to show that the steam cleaner is maintaining the steam pressure.

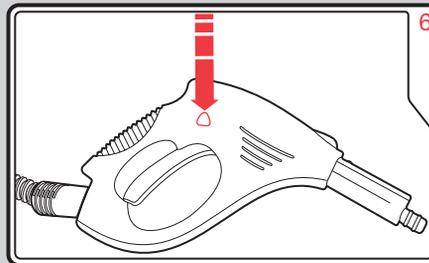


Press the steam trigger lock (12) to allow the steam trigger (15) to be operated. When not in use, press the lock 'on' to prevent accidental release of steam.


WARNING: When the trigger is first pressed, hot water may be ejected, especially if the water tank has been overfilled. Release the first steam safely into a sink or bucket.

WARNING: If you leave the working area, apply the trigger lock, switch the steam cleaner off and unplug.

Steam cleaning floors (continued)

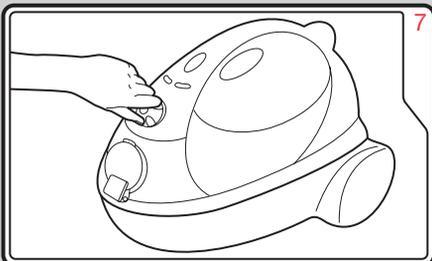

The variable steam control (5), varies the steam output. Turn the knob anti-clockwise as far as it will go for the maximum amount of steam, or clockwise to decrease steam output.

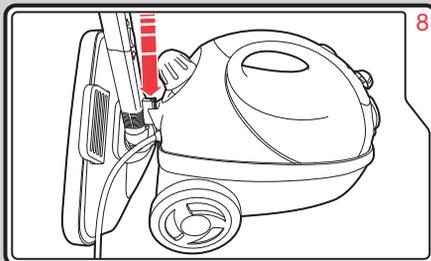


During use, the tubes and nozzle can be stored in the park position for short breaks whilst cleaning.

Using the accessories

For a variety of cleaning tasks, alternative accessories can be used. Follow steps 1-2 & 5-7 from 'Steam cleaning floors' on pages 5-7, but use the accessory adaptor (21) with other accessories attached in place of the floorhead (23) at step 3.


WARNING: Unplug the steam cleaner and allow to cool before fitting or changing attachments or cloths as they become hot during use.

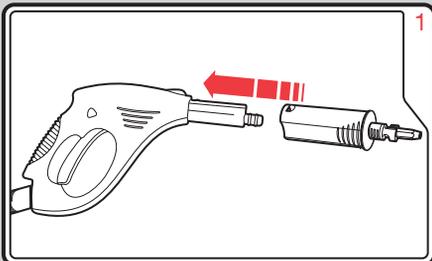

Push the accessory adaptor (21) as far as it will go onto the handle steam nozzle (14) until you hear it click into place.

The accessory adaptor can be removed again by pressing the accessory release button (13) to release it.

The extension tube(s) (19) can be used between the hose handle (11) and the accessory adaptor for additional reach if required.

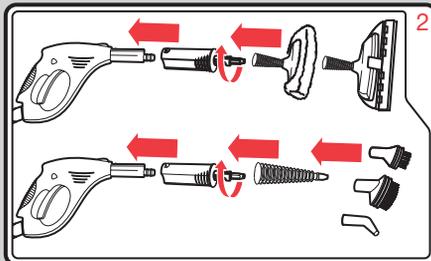

Push the upholstery nozzle (17) or jet nozzle (29) onto the accessory adaptor (21) and turn in a clockwise direction to lock into place.

If using the window squeegee attachment (18), it must be clipped onto the upholstery nozzle, which in turn must be fitted onto the accessory adaptor as described above.

If using the angled nozzle (24) / small and large nylon brushes (25) / small and large brass brushes (26), these must be pushed onto the jet nozzle (29), which in turn must be fitted onto the accessory adaptor (21) as described above.

List of attachments (excluding floorhead)


Accessory adaptor (21) this attachment is the base attachment for all accessories supplied with the product (excluding the floorhead and the extension tubes).

Jet nozzle attachment (29) this attachment can be used alone to clean places or crevices that are not easily accessible. Also, this attachment is the base attachment if using the small and large nylon brushes (25) / small and large brass brushes (26) / angled nozzle (24).


Small and large nylon brush attachments (25) to remove stains on room-temperature surfaces, such as tiles, wheel trims, mirrors and windows.

Small and large brass brush attachments (26) to remove stubborn stains. Use only on hard metal surfaces, eg. draining boards, BBQs etc.

Angled nozzle attachment (24) to clean sanitary ware such as toilet bowls, taps or sinks. Point it directly at non-permanent stains on carpets or upholstery whilst holding a clean cloth near the stained area to capture any loosened dirt.

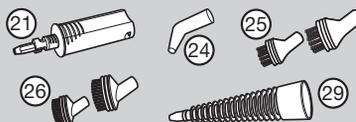


Upholstery nozzle attachment (17) once attached to the accessory adaptor (21), the utility attachment is the base attachment for attaching the following accessories:

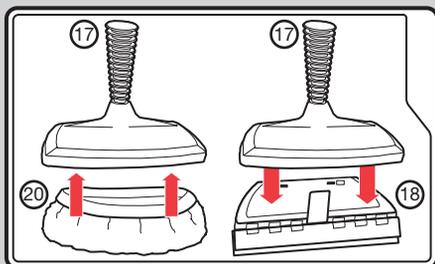


Upholstery nozzle cloth (20) for covering the utility attachment when freshening up upholstery, garments and bedding.

Squeegee attachment (18) is ideal for cleaning tiled or glass areas such as windows or mirror panels. To clean windows, start at the top, press the squeegee to the surface and drag downwards in straight passes from top to bottom. Wipe the rubber blade and the bottom edge of the window dry after each pass. For small window panels, remove the squeegee tool and spray the steam directly onto the surface. Use the squeegee separately to wipe away the moisture.

The squeegee attachment can be attached to the utility attachment by inserting the hooks at the back of the squeegee attachment into the loops on the back of the utility attachment, then securing the front of the utility attachment into the locking clip on the top of the squeegee attachment (as shown).

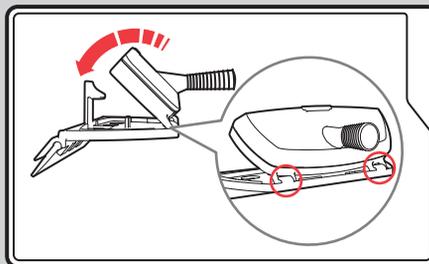

Remove the squeegee after use by holding the locking clip forward. Pivot the utility attachment up and unhook from the loops to lift it away.

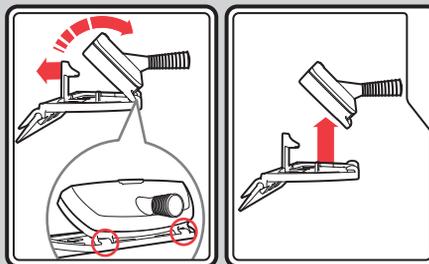


WARNING: Do not use on very cold glass, as the sudden temperature change may crack the glass.

Refilling during use

To refill the boiler during use, follow the procedure below:

WARNING: Always switch off, unplug from the mains supply and release all steam before opening and removing the filler cap (6).

Release the steam pressure by pressing the steam trigger (15) on the handle until all the steam has been expelled. Leave the steamer to cool down for a few minutes.

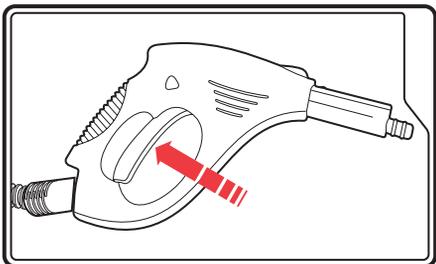

Fill the boiler as previously (please see 'Anti-scale' section below for further information).

Anti-scale

Limescale

To prevent limescale build-up in the boiler, never fill the steam cleaner's water tank with anything other than deionised, demineralised or distilled water (available from most leading supermarkets), or Morphy Richards' Water Softener (790002) - for more information or to purchase, call our UK spares line on 0344 873 0710.

The use of the correct water is an additional precaution that should be taken to ensure the performance of the boiler is maximised and the product is not damaged.

IMPORTANT: The use of any other fluids can be dangerous and can lead to damage of the heating element.

Rinsing the water tank

To clean the water tank fill it with clean water and shake vigorously. This will release any limescale deposits that have collected on the bottom of the tank. Pour the water out by holding upside down.

After use

Follow the maintenance steps below after every use.


1. Switch the cleaner off and unplug from the socket. Wait until the cleaner has cooled down completely.
2. Release any steam pressure by pressing the steam trigger on the handle.
3. Apply the steam safety lock.
4. Remove the filler cap.
5. Empty the water tank. Allow the inside of the water tank to dry out before replacing filler cap.

Storage


On-board tool storage

The cleaner may be used with or without the on-board tool storage cart (10).

Press the button at the rear of the cleaner and lift to remove the boiler from the cart.

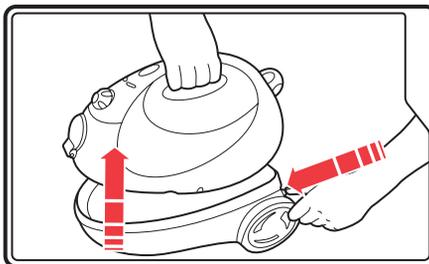


The accessories for your steam cleaner can be neatly stored in the cart.

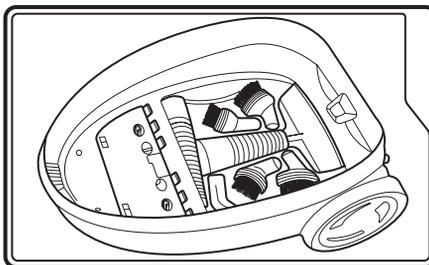

When replacing the steam cleaner on the cart, put hose inlet (9) end in first, then with a firm downward motion push until you hear the button at the back of the cart click to lock in place.

Cord storage

There is a cord storage facility on the bottom of the cart. With the cleaner on its heel, pull-out the lower portion and rotate half a turn. Pull the latch in the centre downwards to allow the upper portion to move out. Wrap the cable around the two hooks.

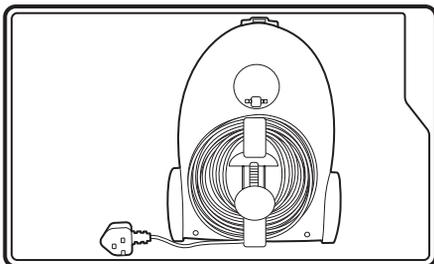

For quick release of the cable, rotate the lower portion back half a turn.

Make sure cord storage is returned to its flattened position before using your steam cleaner.

Maintenance

WARNING: Always unplug the Steam cleaner from the mains supply before undertaking any maintenance procedures.

Overall maintenance

Your cleaner is manufactured to withstand normal day-to-day use, but an occasional wipe over with a damp cloth will help maintain it. Abrasive cleaners should not be used.

Cleaning the cloths

The floor cloth (27) and the upholstery nozzle cloth (20) can be machine washed (40°C max). For heavy soiling, soak the cloths in warm water and detergent or a mild stain remover.

IMPORTANT: Do not use bleach or fabric softener.

Allow cloths to completely dry before storing.

Replacement cloths can be purchased by calling our UK helpline directly on: 0344 873 0710 or logging onto www.morphyrichards.com.

Maintaining the attachments

Dirt and blockages should be regularly removed from the attachments to help prolong their usage.

Contact us

Helpline

If you are having a problem with your appliance, please call our Helpline, as we are more likely to be able to help than the store you purchased the item from.

Please have the product name, model number and serial number to hand when you call to help us deal with your enquiry quicker.

UK Helpline: 0344 871 0944

IRE Helpline: 1800 409 119

Spares: 0344 873 0710

Talk To Us

If you have any questions or comments, or want some great tips to help you get the most out of your products, join us online:

Blog: www.morphyrichards.co.uk/blog

Facebook: www.facebook.com/morphyrichardsuk

Twitter: www.twitter.com/loveyourmorphy

Website: www.morphyrichards.com

VC720004MUK Rev1 09/14

Registering your 2 year guarantee

Your standard 1 year guarantee is extended for an additional 12 months when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 1 year. To validate your 2 year guarantee, register with us online at

www.morphyrichards.co.uk

Or call our customer registration line

UK 0344 871 0242

IRE 1800 409 119

N.B. Each qualifying product needs to be registered with Morphy Richards individually.

Please note that the 2 year guarantee is only available in the UK and Ireland. Please refer to the 1 year guarantee for more information.

Your 1 year guarantee

To qualify for the 1 year guarantee, the appliance must have been used according to the instructions supplied.

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 12 months (2 years if registered) of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown.

You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

If you suspect a fault, follow the simple checks detailed below before retrying the appliance or calling the helpline.

- Check the steam outlet is not blocked.
- Check the plug is firmly in the socket.
- Check the socket is working by trying another appliance.
- Check the fuse in the plug.

If, for any reason, this item is replaced during the 1 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

This appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
 - 2 The appliance has been used on a voltage supply other than that stamped on the products.
 - 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
 - 4 The appliance has been used for hire purposes or non domestic use.
 - 5 The appliance is second hand.
 - 6 Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.
 - 7 The guarantee excludes consumables such as cloths and brushes.
 - 8 Any problems arise as a result of limescale build-up.
- This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.



For electrical products sold within the European Community. At the end of the electrical products useful life, it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

**IF YOU ARE HAVING A PROBLEM
WITH ONE OF OUR PRODUCTS,
CALL OUR HELPLINE:**

**UK: 0344 871 0944
EIRE: 1800 409 119
SPARES: 0344 873 0710**

morphyrichards

The After Sales Division
Morphy Richards Ltd
Mexborough,
South Yorkshire,
England, S64 8AJ

www.morphyrichards.com

