

morphy richards®
smart ideas for your home



Perfecttempⁱⁱⁱ Steam iron steam/spray/shot/press



Please read and keep these instructions

Getting the best from your new iron....

Safety first

Caution must be used when handling this appliance as it does get very hot. Always switch off the unit and allow to cool before cleaning or storing.

Self-clean

Your iron will give the best ironing results and will last longer if you clean the soleplate once a month, see 'Maintenance' on pages 6.



To improve the life of your new product and to ensure the cleanliness of your clothes, we strongly recommend the use of distilled or demineralised water.

RN300002 MUK Rev2

For competitions, product hints and tips and more join us at



www.morphyrichards.co.uk/blog



www.facebook.com/morphyrichardsuk



[@loveyourmorphy](https://twitter.com/loveyourmorphy)

If you have a problem or complaint, please call our dedicated UK based helpline before returning your product to the retailer from where it was purchased.



UK Helpline: 0344 871 0944

Replacement Parts: 0344 873 0710

Ireland Helpline: 1800 409 119



For details of other Morphy Richards products, plus replacement parts and accessories, please see our website:

www.morphyrichards.com

* Register online for your 3 year guarantee. See back of this instruction book for details. (UK and Ireland customers only)

IMPORTANT SAFETY INSTRUCTIONS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Keep the iron and its cord out of reach of children less than 8 years of age at all times.
- The iron must not be left unattended while it is connected to the supply mains.
- The plug must be removed from the socket before filling the iron with water.
- The iron must be used and rested on a stable surface.
- When placing the iron on its heel, ensure that the surface on which the heel is placed is stable.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or it is leaking.
- The filling aperture must not be opened during use.



CAUTION - HOT: Burns can occur from touching hot parts, hot water or steam.

• **WARNING:** To avoid electric shock, do not immerse appliance in water / liquid.

Electrical requirements and mains cable

- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating current).
- Do not operate with a damaged supply cord or grommet, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.





 
 
- Do not let the mains lead come into contact with the hot soleplate of the iron.
- Should the fuse in the mains plug require changing, a 13 amp BS1362 fuse must be fitted.
- **WARNING:** This appliance must be earthed.




PLEASE READ ALL INSTRUCTIONS AND KEEP FOR REFERENCE

INSTRUCTIONS FOR USE

Temperature guide


Heat setting markings on the adjustable control dial of all Morphy Richards irons match those of the International Textile Care Labelling Code.

| Symbol |  |  |  |  | |
|------------------------|---|--|---|---|---------------|
| | | (120°C Max) Cool | (160°C Max) Warm | (210°C Max) Hot | 'Max' Setting |
| Control knob positions | Do not iron at all | ● | ●● | ●●● | |
| Fabric | | Nylon, Acetates e.g. Acrilan Courtelle, Orlon Triacetates, e.g. Tricel/Polyester | Wool, Polyester mixtures e.g. Polyester/Cotton | Cotton, Linen Rayon, Rayon mixtures, e.g. Rayon/Linen | |
| Ironing | | Iron on wrong side, if moisture required use damp cloth (Not Acetate) | | Fabrics requiring this setting usually require steam pressing for heavy cotton, denim etc. | |
| With water in tank | |  | | | |
| Without water in tank | |  | | | |

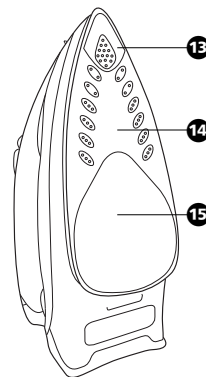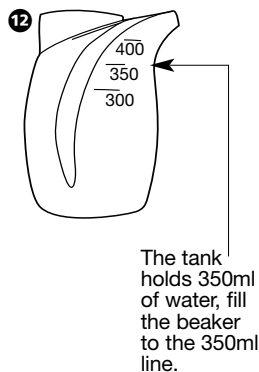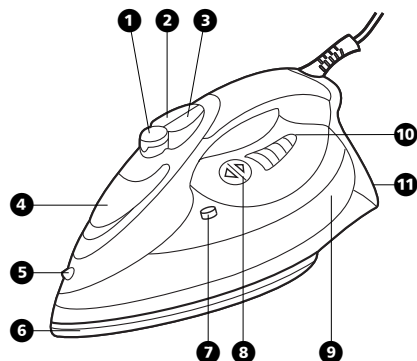   

COMPONENTS OF YOUR IRON

- | | | |
|-------------------------|---|---|
| 1 Variable steam dial | 7 Self-Clean button | 13 Stubborn crease boost for hard to reach creases |
| 2 Shot of steam button | 8 Temperature console | 14 Constant Steam relaxes fibres for easy crease removal |
| 3 Water spray button | 9 Illuminated water tank | 15 Pressing plate removes excess water to avoid re-creasing |
| 4 Filling hole with cap | 10 Auto shut-off indicator | |
| 5 Spray nozzle | 11 Life long anti-scale (certain models only) | |
| 6 Soleplate | 12 Filling beaker | |

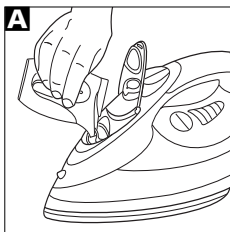 

BEFORE USE

 
Sort out the items to be ironed according to the type of fabric. This will minimise the frequency of temperature adjustment for different garments.

NOTE: The steam facility should only be used on garments which are suitable for ironing at the 2 and 3-dot settings (see 'Temperature guide' on page 3).

Textiles and clothes are supposed to carry ironing instructions. If they don't, you should follow the Temperature guide on page 3, but be sure to test the temperature by ironing the hem of the garment or similar discreet area first.

If you turn the temperature down from a hot setting to a cooler setting, wait until the iron temperature has stabilised before you continue ironing.

Delicate fabrics such as silk, wool, velour, etc, are best ironed with an ironing cloth to prevent shine marks.

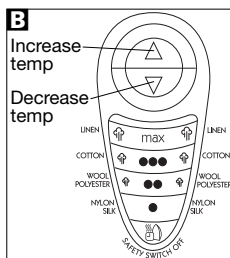

WARNING: When filling your iron with tap water, always use the beaker provided. Never fill directly under the tap.

TEMPERATURE CONTROL 8 B

- Default setting + 3-dot (cotton)
- To increase temperature press the top button.
- To decrease temperature press the bottom button.
- The light panel will flash to indicate that the iron has not yet reached the correct temperature.
- Once the correct temperature has been reached, the light will stop flashing and there will be one 'beep' to signal that the iron is now ready for use.

FEATURES OF YOUR IRON

Fast heat up

This iron has a high wattage for quick heat-up. Once the correct temperature is reached, the indicator light will stop flashing and there will be one 'beep' to signal the iron is ready for use.

NOTE: To prevent burning, do not use iron before the indicator light has stopped flashing.

Dry ironing

You can use your iron as a dry iron only. Make sure the variable steam dial 1 is set to the '0' symbol.

Any temperature setting may be used depending on the garment. The spray feature 5 may be used, provided there is water in the tank (see 'Filling' section). You do not need to put any water in the tank when dry ironing only.

FILLING

- 1 Make sure that the iron is not plugged in, then set the variable steam dial 1 to '0' position before filling the iron with water.
- 2 Lift up the filler cap 4 and fill the water through the filling hole into the water tank 9, using the beaker provided 12 A. The tank holds 350ml of water. After filling, replace the filler cap.


IN HARD WATER AREAS, WE RECOMMEND A MIX OF 50% TAP WATER AND 50% DISTILLED OR DEMINERALISED WATER.

WARNING: Never use battery topping up fluid or water containing any substances like starch, sugar, fragrant additives or defrosted water from a refrigerator.

NOTE: Please see point 2 of 'Exclusions' on page 8.

- 3 Always pour out the remaining water after use.


Water Spray

Press the spray button  and aim the spray of water at stubborn creases. You can do this whilst dry ironing providing there is water in the tank. When using the water spray it may be necessary to push the button a few times to get the spray pump primed.

Variable steam

 
Fill the iron with water as described in 'Filling', page 4, and insert the plug into the electrical socket.



The steam output can be varied from low to high by turning the variable steam dial . When using the iron at the bottom of the steam range, the steam output should be adjusted to the low setting.

The steam facility should only be used on garments which are suitable for ironing at 2, 3-dot and MAX setting.

Shot of steam

Press the shot of steam button  to obtain a burst of extra steam for ironing out creases in heavy material such as denim etc.


 


The shot of steam can be used whilst dry ironing, providing there is water in the tank, and the temperature control is set within the steam range.

Do not use shot of steam at temperatures below the steam range shown on the control dial.


NOTE: For optimum steam quality, do not operate the shot more than three times in succession.

Vertical steam

Hold the iron in a vertical position between 1cm and 2cm away from the item . Press the shot of steam button , this will create vertical steam. This feature is especially useful for removing creases from hanging clothes, curtains, wall hangings, etc.


NOTE: For optimum steam quality, do not operate the shot more than three times in succession.

No drip system

Your iron is fitted with a no drip system which is designed to prevent water escaping from the soleplate  when the iron is too cold.

During use, the no drip system may emit a loud click, particularly during heat-up or whilst cooling down. This is perfectly normal and indicates that the system is functioning correctly.

Auto shut-off

Your iron is fitted with the auto shut-off function, it will automatically shut down after a set period. The 'safety switch off' L.E.D.  will flash on the function panel.

 
 
 
 
If the iron is left unattended in the horizontal position, it will shut down after 1 minute.

 
If it is left in the vertical position, it will shut down after 8 minutes.

To reactivate the iron, gently shake it and wait for the iron to heat-up as normal.

Life long anti-scale system

The life long anti-scale system reduces scale deposits and helps prolong the life of the iron.

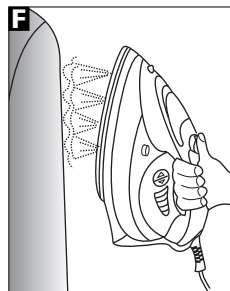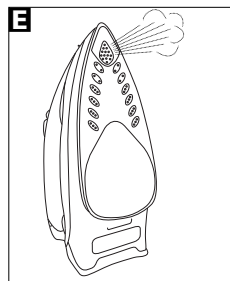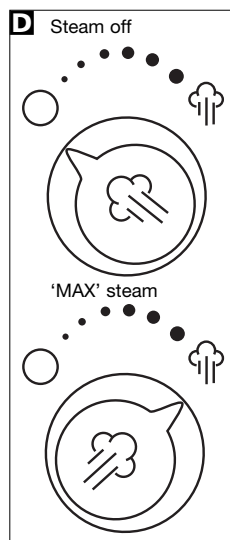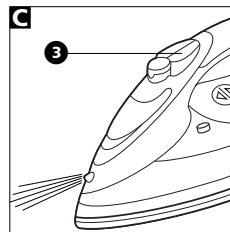

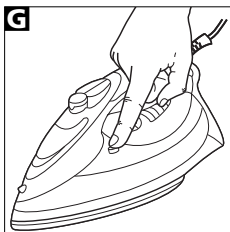

MAINTENANCE

Self cleaning ☐

Your iron has a built in cleaning system designed to keep the water valve, steam chamber and steam vents clear of lint and loose mineral deposits.

- 1 Half fill the iron with water.
- 2 Place the iron on its heel.
- 3 Connect to a mains supply outlet.
- 4 Set the temperature control to 'MAX'. See 'Temperature control' on page 4.
- 5 The indicator light will flash until the required temperature is reached.
- 6 The indicator light remains 'on' when the selected temperature is attained.
- 7 Disconnect the iron from the mains supply outlet.
- 8 Hold the iron horizontally over a sink.

CAUTION: The soleplate will still be hot, so ensure the power cord and plug are kept away from it and the sink.

- 9 Press and hold down the Self-Clean button ⑦.
- 10 **WARNING: Steam and boiling hot water will drain from the holes in the soleplate.** This washes away the scale and minerals that have built up inside the Steam Chamber.
- 11 Gently move the iron back and forth until the water tank is empty.
- 12 When cleaning is complete, release the Self-Clean button ⑦.
- 13 Rest your steam iron back on its heel and allow to fully cool down.
- 14 Wipe the soleplate with a cold, damp cloth.

After this cleaning operation, empty out any remaining water.

WARNING: Keep hands and body away from the hot water.

WARNING: Do not attempt to descale the soleplate with descaling products.

To clean a ceramic coated soleplate

In the unlikely event of any man-made fibre fusing to the soleplate, set the iron at the MAX position and pass it over a clean piece of cotton which will draw the deposit off the surface.

Do not use scouring powder or solution as this could cause damage to the coating.

To clean the exterior

 
 
Allow the iron to cool and wipe over with a damp cloth and mild detergent, then wipe with a dry cloth.

Emptying and storing

When you have finished ironing, unplug your iron. Ensure that the variable steam control is set at the '0' position, lift up the filler cap and empty any remaining water out of the filling hole ⑪. Do not store in the box, but in an upright position, so that any drops of water remaining cannot leak out and discolour the soleplate.

IMPORTANT: The flex can be damaged if wound too tightly around the iron after use. Make a loose loop with the flex and wrap it around the iron. The iron must be cool before winding the flex and storing on its heel ①.

NOTE: Please see point 3 of 'Exclusions' on page 8.

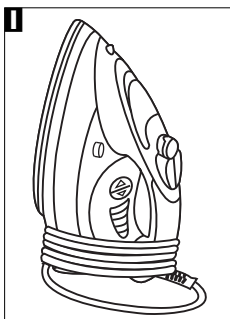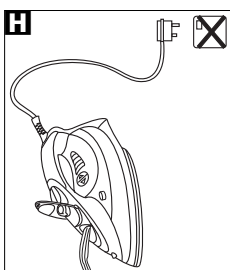

HELPLINE

If you have any difficulty with your appliance, do not hesitate to call us.

We are more likely to be able to resolve any issues than the store from where you bought it.

Please have the following information ready to enable our staff to deal with your query quickly:

- Name of the product.
- Model number and Serial number as shown on the underside of the appliance.

UK Helpline 0344 871 0944
Replacement Parts 0344 873 0710
Ireland Helpline 1800 409 119

WEBSITE

You may also contact us through our website, or visit the site to browse and purchase appliances, spare parts and accessories from the extensive Morphy Richards range.

NOTES

REGISTERING YOUR THREE YEAR GUARANTEE

Your standard one year guarantee is extended for an additional 2 years when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 1 year. To validate your 3 year guarantee register with us online at

www.morphyrichards.co.uk

Or call our customer registration line

UK: 0344 871 0242

IRE: 1800 409 119

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Retailer's receipt should be kept as proof of purchase.

Please note that the 3 year guarantee is only available in the UK and Ireland. Please refer to the one year guarantee for more information.

YOUR ONE YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 12 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown.

You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced, as appropriate, and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 1 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 1 year guarantee, the appliance must have been used according to the instructions supplied. For example, water should be emptied after each use.

EXCLUSIONS

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2 The fault is caused by limescale build-up.
- 3 The cables are damaged due to wrapping too tightly or excessive kinking.

- 4 The appliance has been used on a voltage supply other than that stamped on the products.
 - 5 Repairs have been attempted by persons other than our service staff (or authorised dealer).
 - 6 The appliance has been used for hire purposes or non domestic use.
 - 7 The appliance is second hand.
 - 8 Morphy Richards reserves the right not to carry out any type of servicing or repair work, under the guarantee, at its discretion.
- This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.



For electrical products sold within the European Community. At the end of the electrical products useful life, it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

morphy richards®

**The After Sales Division
Morphy Richards Ltd**
Mexborough, South Yorkshire,
England, S64 8AJ

Helpline (office hours)
UK 0344 871 0944
Spare Parts 0344 873 0710
Republic of Ireland 1800 409 119

Morphy Richards products are intended for household use only.

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore, reserves the right to change the specification of its models at any time.

For details of other Morphy Richards products, plus replacement parts and accessories, please see our website:

www.morphyrichards.com

