Ver. 20130624

Bluetooth Tower Speaker

Art.no 18-8372 Model FWIP-108


Please read the entire instruction manual before using the product and save it for future reference. We reserve the right for any errors in text or images and any necessary changes made to technical data. If you have any questions regarding technical problems please contact our Customer Services.

Safety

- The tower speaker may be used by persons with reduced physical, sensory
 or mental capability, lack of experience or knowledge which could jeopardize
 their safety, provided they have been given supervision or instruction
 concerning the safe use of the product and understand the hazards involved.
- · Never let children play with the product.
- The tower speaker is intended for indoor use only.
- Never subject the speaker to high temperature, dust, heavy vibration, impacts, humidity or moisture.
- Do not expose the speaker to direct sunlight or high temperatures.
- Never try to open the speaker s housing or modify the speaker in any way.
 Certain exposed parts inside the speaker casing carry dangerous current.
 Contact with these can lead to fire or electric shock.
- Repairs must be carried out by a qualified tradesman or workshop.
- Unplug the mains lead during thunderstorms or if the product is not to be used for a long time.
- The speaker should only be connected to a wall outlet with a 230 V, 50 Hz power supply.
- The product is designed exclusively for domestic use.
- Do not use the speaker if it or its mains lead is damaged in any way.
- Place the product on a steady level surface to prevent the risk of it tipping over.
- Protect your hearing. Listening to the speaker on high volume for prolonged periods can lead to permanent hearing damage.

Buttons and functions


Top

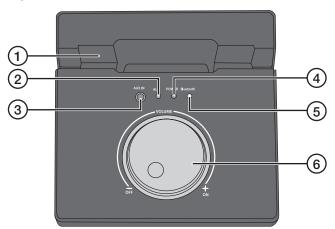

- 1. iPad/iPhone holder.
- The "AUX" LED comes on whenever an external device is connected to the 3.5 mm AUX IN port.
- "AUX IN" AUX socket.
- 4. The "POWER" LED lights whenever the speaker is turned on.
- 5. The "BLUETOOTH" LED shines or flashes during Bluetooth operations.
- [Volume, ON/OFF]. Dial the volume control back anticlockwise to the OFFposition to put the speaker into standby mode. Dial the volume control clockwise from the OFF-position to turn the speaker on.

Back




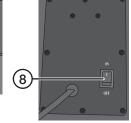

- 7. USB charge port (only for iPad/iPhone).
- 8. [ON/OFF] On/off switch

Mounting the base

Use the included screws and washers to mount the base onto the speaker.

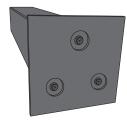

Operating instructions

Connecting an external Bluetooth

- Plug the mains lead into a wall socket and turn the speaker on using the [ON/OFF] (8) switch. Turn the volume control dial clockwise away from the OFF position (standby mode).
- The blue LED Bluetooth indicator will begin flashing, indicating that it is ready for synchronisation with other Bluetooth devices. If no pairing takes place within 30 seconds the indicator will shine constantly. The speaker will still be available for pairing with other devices.
- 3. Activate Bluetooth on the device to be paired and place it into search mode.
- The speaker dock will appear as "speaker" on your device. Select this as the device to be connected. Refer to your device's instruction manual if you are unsure.
- Once contact has been established, the blue LED indicator will begin flashing slowly.
- 6. Start and check the playback on the paired device.
- Adjust the volume both on the device and speaker to achieve the desired volume level.

Note: If you are prompted to enter a PIN code, you should enter 0000 (four noughts). Certain devices may even require you to approve the connection.

Auxiliary input

- Plug the mains lead into a wall socket and turn the speaker on using the [ON/OFF] (8) switch. Turn the volume control dial clockwise away from the OFF position (standby mode).
- 2. Connect a device to the speaker's 3.5 mm AUX IN socket (2).
- 3. Start and check the playback on the device.
- Adjust the volume both on the device and speaker to achieve the desired volume level.

iPad/iPhone charging

- Connect the device to the speaker's USB port (7) on the speaker's back panel.
 Use the USB cable that came with the device.
- Turn the speaker on with the [ON/OFF] (8) switch. The volume control can be left in the OFF (standby) position.

Care and maintenance

- Unplug the adaptor from the wall socket if the product is not be used for an extended period.
- Unplug the mains lead from the wall socket before cleaning or servicing.
- Clean the product using a lightly moistened cloth. Only use mild cleaning agents, never solvents or corrosive chemicals.

Troubleshooting guide

The Bluetooth	•
speaker will	•
not switch on.	
	•
	•

- Make sure that the [ON/OFF] switch is set to ON.
- Is the volume control turned up from the OFF (standby) position?
- Make sure the mains lead is undamaged and is securely connected to both the wall outlet and speaker.
- Is there power at the wall socket being used?

No sound from the connected device

- Check the volume.
- Make sure that there is no cable connected to the 3.5 mm AUX IN jack when using Bluetooth.
- Make sure that the Bluetooth connection is functioning properly.
- Test the playback from your external device before connecting it.
- Try playback using another file or format e.g. MP3.
 The file you are attempting to play may be incompatible or damaged.
- Pull the plug from the wall socket to disconnect the Bluetooth speaker completely from the mains.
 Insert the plug back into the wall socket.

Disposal

This product should be disposed of in accordance with local regulations. If you are unsure how to proceed, contact your local authority.

Specifications

Mains power supply230-240 VSpeaker $4 \times 3''$ Subwoofer $1 \times 4.5''$

Size $100 \times 15 \times 15 \text{ cm}$

Declaration of Conformity



Hereby, Clas Ohlson AB declares that following product(s):

Wireless Speaker 18-8372 FWIP-108

is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

EC Council EMF/SAR 99/519 Recommendation (Health): 3.1a

ticle 3.1a (Safety): En 60065

3.1b (EMC): EN 301489-1 EN 301489-17

Article

Article 3.2 (Radio): EN 300328

C € 0200

Insjön, Sweden, June 2013

Klas Balkow, President.

Clas Ohlson, 793 85 Insjön, Sweden