

SIEMENS



Issued by
Siemens Home and Office Communication Devices GmbH & Co. KG
Schlavenhorst 66
D-46395 Bocholt

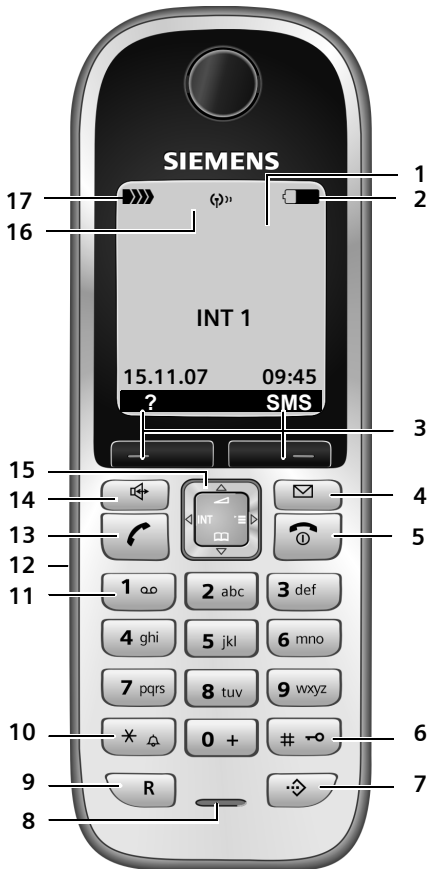
© Siemens Home and Office Communication Devices GmbH & Co. KG 2007
All rights reserved. Subject to availability.
Rights of modification reserved.

www.siemens.com/gigaset

Gigaset S670-S675

Gigaset

Handset at a glance



- 1 **Display (screen)** in idle status
- 2 **Charge status of the batteries**
 (flat to full)
 flashes: batteries almost flat
 flashes: batteries charging
- 3 **Display keys** (page 10)
- 4 **Message key**
Access to calls and message lists;
Flashes: new message or new call
- 5 **End call key, On/Off key**
End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)
- 6 **Hash key**
Keypad lock on/off (press and hold in idle status),
Toggle between upper/lower case and digits (press and hold)
- 7 **Call-by-call list key**
Open call-by-call list
- 8 **Microphone**
- 9 **Recall key**
- Confer (flash)
- Insert a dialling pause (press and hold)
- 10 **Star key**
Ringer tones on/off (press and hold);
With an open connection: switch between dial pulsing/touch tone dialling (press briefly)
Open special characters table
- 11 **Key 1**
Dial network mailbox (press and hold)
- 12 **Connection socket** for headset
- 13 **Talk key**
Answer a call, open last number redial list (press briefly), start dialling (press and hold)
When writing an SMS: send SMS
- 14 **Handsfree key**
Switch between earpiece and handsfree mode;
Lights up: handsfree activated;
Flashes: incoming call
- 15 **Control key** (page 10)
- 16 **Eco mode** activated (page 12)
- 17 **Signal strength**
 (high to low)
 flashes: no reception

The base station at a glance



Registration/paging key (page 35)

Contents

Handset at a glance	1
The base station at a glance	1
Safety precautions	4
Gigaset S670 – More than just a telephone	6
First steps	6
Pack contents	6
Installing the base station and charging cradle	6
Setting up the handset for use	7
Operating the handset	10
Control key	10
Display keys	10
Reverting to idle status	11
Menu guidance	11
Correcting incorrect entries	12
ECO DECT	12
Menu tree	13
Making calls	15
Making an external call	15
Ending a call	15
Accepting a call	15
Calling Line Identification	15
Handsfree talking	16
Muting	16
Making calls easily using network services	17
Setting functions for all subsequent calls	17
Functions during a call	17
Functions after a call	18
Using the directory and lists ..	19
Directory/call-by-call list	19
Last number redial list	22
Opening lists with the message key ..	23
Making cost-effective calls	24
Linking call-by-call numbers with one number	24
Automatic network provider preselection (Preselection)	24
SMS (text messages)	26
Writing/sending an SMS	26
Receiving an SMS	28
Notification by SMS	30
SMS mailboxes	30
Setting SMS centres	31
SMS info services	32
SMS on a PABX	32
Activating/deactivating the SMS function	32
SMS troubleshooting	33
Using the network mailbox ...	34
Configuring fast access for the network mailbox	34
Viewing the network mailbox report	34
Using several handsets	35
Registering handsets	35
Deregistering handsets	36
Locating a handset ("paging")	36
Changing the base station	36
Making internal calls	36
Listening in to an external call	37
Changing the name of a handset	38
Changing a handset's internal number	38
Using a handset as a room monitor	38

Handset settings 39
Shortcuts for functions
and numbers 39
Changing the display language 40
Setting the display 40
Setting the screensaver 41
Setting the display backlight 41
Activating/deactivating
auto answer 41
Changing the handsfree/
earpiece volume 42
Changing ringer tones 42
My stuff 43
Activating/deactivating
advisory tones 44
Setting the alarm clock 44
Setting an appointment
(calendar) 45
Displaying missed appointments
and anniversaries 46
Setting your own area code 47
Restoring the handset to the
factory settings 47
Base station settings 47
Protecting against unauthorised
access 47
Activating/deactivating
music on hold 48
Repeater support 48
Restoring the base station to
the factory settings 48
**Connecting the base station
to PABX 49**
Recall 49
Saving an access code
(outside line code) 49
Setting pauses 49
Switching temporarily to touch
tone dialling (DTMF) 50

Appendix 51
Care 51
Contact with liquid 51
Questions and answers 51
Service (Customer Care) 53
Authorisation 54
Specifications 54
Notes on the user guide 55
Example of a menu input 55
Example of multiple line input 56
Writing and editing text 56
Accessories 58
Index 61

Safety precautions

Warning:

Read the safety precautions and the user guide before use.

Explain their contents and the potential hazards associated with using the telephone to your children.



Only use the mains adapter supplied, as indicated on the underside of the base station or charging cradle.



Fit only the **recommended, rechargeable batteries** (page 54), i.e. never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury.

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, which you can find out about by contacting your local authority or the dealer you purchased the product from.



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.



Do not hold the rear of the handset to your ear when it is ringing or when the handsfree function is activated. Otherwise you risk serious and permanent damage to your hearing.

The handset may cause an unpleasant humming noise in hearing aids.



Do not install the base station or charging cradle in bathrooms or shower rooms. The base station and charging cradle are not splashproof (page 51).



Do not use your phone in environments with a potential explosion hazard (e.g. paint shops).



If you give your Gigaset to someone else, make sure you also give them the user guide.



Please remove faulty base stations from use or have them repaired by Siemens, as they could interfere with other wireless services.



All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.

If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from.

Please note:

Not all of the functions described in this manual are available in all countries.

Gigaset S670 – More than just a telephone

Your phone, which has a clearly laid out colour display (65K colours) doesn't just offer you the option of sending and receiving SMS messages via the fixed network and of saving up to 250 phone numbers and e-mail addresses (page 19) – it can do much more besides:

- ◆ You can reduce the transmission power by activating the eco mode (page 12).
- ◆ You can programme the keys of your phone with important numbers or frequently used functions. The number is then dialled or the function started by simply pressing a key (page 39).
- ◆ You can easily make calls using network services (page 17).
- ◆ You can designate important people as VIPs so you can tell important calls from the ringer tone (page 20).
- ◆ You can assign pictures to your contacts. You can then tell who is calling you from the picture on your handset's display.
Precondition: Calling Line Identification (CLIP, page 15).
- ◆ You can save appointments (page 45) and anniversaries (page 21) in your phone and it will remind you of them in advance.

Enjoy using your new telephone!

First steps

Pack contents

- ◆ one Gigaset S670 base station with mains adapter,
- ◆ one Gigaset S67H handset,
- ◆ one phone cord,
- ◆ two batteries,
- ◆ one battery cover,
- ◆ one belt clip,
- ◆ one user guide.

Installing the base station and charging cradle

The base station and charging cradle are designed for use in enclosed dry rooms with a temperature range of +5 °C to +45 °C.

Set up the base station at a central point in the apartment or house.

You can find instructions on how to mount the base station on the wall at the end of this user guide.

Please note:

- ◆ Never expose the telephone to heat sources, direct sunlight or other electrical appliances.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and vapours.

Range and reception strength

Range:

- ◆ Outdoors: up to 300 m
- ◆ Indoors: up to 50 m

The range is reduced when eco mode is activated (see page 12).

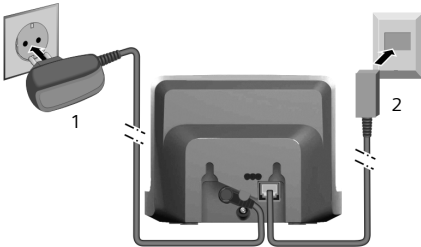
Reception strength:

The display shows the quality of the radio range between the base station and handset:

- ◆ Good to poor: ▬▬▬ ▬▬▬ ▬▬▬ ▬▬▬
- ◆ No reception: ▬▬▬ flashes

Connecting the base station

- ▶ **First** connect the power supply unit and **then** the phone jack as shown below and place the cables in the cable recesses.

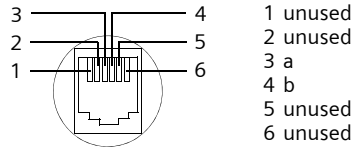


- 1 Mains adapter 230 V
- 2 Phone jack with phone cord

Please note:

- ◆ The mains adapter must **always be connected**, as the phone will not operate without mains connection.
- ◆ Only use the mains adapter and phone cord **supplied**.
- ◆ If you buy a replacement phone cord, make sure that the phone jack has the correct type of wiring.

Correct phone jack assignment



Setting up the handset for use



The display is protected by a plastic film.

Please remove the protective film!

Inserting the batteries

Warning:

Use only the rechargeable batteries recommended by Siemens (page 54). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. For example, the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

- ▶ Insert the batteries the right way round (see figure).

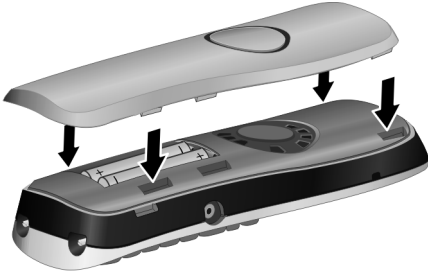
The polarity is indicated in/on the battery compartment.



First steps

Closing the battery cover

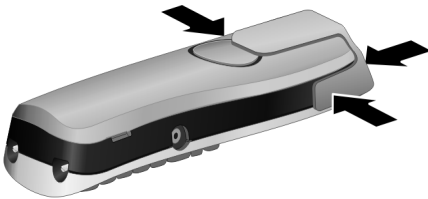
- ▶ First, align the notches on the side of the battery cover with the protrusions on the inside of the housing.
- ▶ Then press the cover until it clicks into place.



Attaching the belt clip

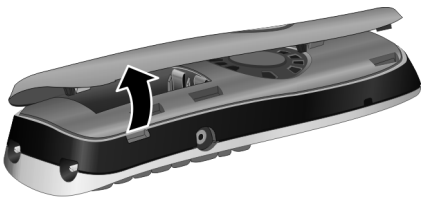
There are notches for attaching the belt clip on the side of the handset at the same height as the display.

- ▶ Press the belt clip onto the back of the handset so that the protrusions on the belt clip engage with the notches.



Opening the battery cover

- ▶ If fitted, remove the belt clip.
- ▶ Place your fingertip in the cavity in the casing and lift the battery cover upwards.



Placing the handset in the base station and registering

- ▶ Place the handset in the base station with its **display facing upwards**.

The handset registers automatically. Registration can take up to 5 minutes. During this time **Regstr.Procedure** appears in the display and the name of the base station flashes, e.g. **Base 1**. The handset will be assigned the lowest unassigned internal number (1–6).

This will appear in the display when registration is complete, e.g. **INT 1**. This means that the number 1 has been assigned. If the internal numbers 1–6 are already assigned to other devices, the number 6 is overwritten.

Please note:

- Automatic registration is only possible while no one is making calls using the base station.
- Each key press interrupts the automatic registration.
- If automatic registration does not work the handset will have to be registered manually (page 35).
- You can change the name of the handset (page 38).

To charge the batteries, leave the handset in the base station.

Please note:

- If the handset has turned itself off because the batteries are flat and if it is then placed in the charging cradle, it will turn itself on automatically.
- Only place the handset in the base station or charging cradle that is intended for it.

For questions and problems see page 51.


Headset socket

You can connect various headset types (with 2.5 mm jack connector), including: HAMA Plantronics M40, MX100 and MX150.

You can access a list of headsets that have been tested for compatibility on the Internet at

www.plantronics.com/productfinder.

Initial charging and discharging of batteries

If the handset is activated, the flashing battery icon  in the top right of the display indicates that the batteries are being charged.

During handset operation, the battery icon indicates the charge status of the batteries (page 1). The correct charge level can only be displayed if the batteries are first fully charged **and** discharged.

- ▶ To do this, leave the handset in the base station or charging cradle **continuously** for **seven** hours. Your handset need not be turned on for it to charge.
- ▶ Afterwards, remove the handset from the base station and do not put it back again until the batteries are fully discharged.

Please note:

After the first battery charge **and** discharge you may replace your handset in its base station after every call.

Please note:

- ◆ Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them.
- ◆ The batteries may warm up during charging. This is not dangerous.
- ◆ After a while the charge capacity of the batteries will decrease for technical reasons.

Setting the date and time

The date and time must be set in order to, for example, have the correct time for incoming calls and be able to use the alarm clock and calendar.

- ▶ If you have not yet set the date and time, press the display key **Time** to open the input field.

To change the time, open the input field with:

 →  → **Date/Time**

- ▶ Change multiple line input:

Date:

Enter the day, month and year in 8-digit format.

Time:

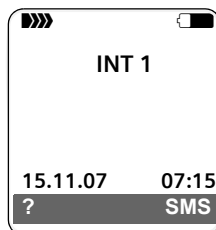
Enter hours and minutes as 4 digits, e.g.     for 07:15 a.m.

Save

Press the display key

Display in idle status

Once the phone is registered and the time set, the idle display is as shown here (example)




Your phone is now ready for use.

 

If you have any queries about using your phone, please read the tips on troubleshooting ("Questions and Answers", page 51) or contact our customer service department (Customer Care, page 53).

Operating the handset

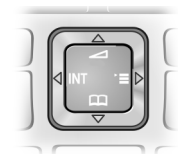
Activating/deactivating the handset


-  In idle status, press and hold the end call key (confirmation tone).

Activating/deactivating the keypad lock

-  Press and **hold** the hash key. You will hear the confirmation tone. The  icon appears in the display when the keypad lock is activated. The keypad lock is deactivated automatically if someone calls you. It is re-activated when the call is finished.





Control key







In the description below, the side of the control key (up, down, right, left) that you have to press in the different operating situations is marked in black, e.g.  for "press right on the control key".

The control key has a number of different functions:





When the handset is in idle status

-  Open the directory.
-  Open the main menu.
-  Open the list of handsets.
-  Call up the menu to set the call volume (page 42), ringer tones (page 42) and advisory tones (page 44) for the handset.




In the main menu and in input fields

You can use the control key to move the cursor up , down , right  or left .

In lists and submenus

-  /  Scroll up/down line by line.
-  Open submenu or confirm selection.
-  Go back one menu level or cancel.

During an external call

-  Open the directory.
-  Initiate internal consultation call and mute
-  Adjust the loudspeaker volume for earpiece and hands-free mode.





Display keys

The function of the display keys changes depending on the particular operating situation. Example:



- 1 Current display key functions are shown in the bottom display line.
- 2 Display keys

The most important display icons are:

-  Left display key, as long as it has not been assigned a function (page 39).
-  Open the main menu.
-  Open a context-dependent menu.
-  Delete key: deletes one character at a time from right to left.



Go back one menu level or cancel operation.

E-Mail

Fetch e-mail address from the directory.



Copy number into directory.



Open the last number redial list.

Reverting to idle status

You can revert to idle status from anywhere in the menu as follows:

- ▶ Press and **hold** the end call key

Or:

- ▶ Do not press any key: after 2 minutes the display will **automatically** revert to idle status.

Changes that you have not confirmed or saved by pressing **OK**, **Yes**, **Save**, **Send** or **Save Entry** **OK** will be lost.

An example of the display in idle status is shown on page 1.

Menu guidance

Your telephone's functions are accessed using a menu that has a number of levels.

Main menu (first menu level)

- ▶ Press with the handset in idle status to open the main menu.

The main menu functions are shown in the display with colour icons and names.

To access a function, i.e. to open the corresponding submenu (next menu level):

- ▶ Navigate to the function using the control key /. The name of the function is displayed in the display header. Press the display key **OK**.

Submenus

The functions in the submenus are displayed as lists.

To access a function:

- ▶ Scroll to the function with the control key and press **OK**.

Or:

- ▶ Enter the corresponding digit combination (page 13).

Briefly press the end call key once to return to the previous menu level/cancel the operation.

Illustration in the user guide

The operating steps are shown in abbreviated form.

Example

The illustration:

→ → Date/Time

means:



Press the key to display the main menu.



Use the control key to scroll through submenu **Settings** and press **OK**.

Date/Time Scroll to the function with the control key and press **OK**.

Other types of illustrations:

/ / etc.

Press the matching key on the handset.



Enter digits or letters.

You will find detailed examples of menu entries and multiple line input in the appendix to this user guide, page 55.

Correcting incorrect entries

You can correct incorrect characters in the text by navigating to the incorrect entry using the control key. You can then:

- ◆ press **⏪** to delete the character to the left of the cursor
- ◆ insert characters to the left of the cursor
- ◆ overwrite the character (flashing) when entering the time and date etc.

ECO DECT

ECO DECT reduces power consumption by using a power supply with low power consumption and also reduces the transmission power of the base station.



If only **one** handset is registered and it is in the base station, eco mode is always **activated automatically**. In this case, the transmission power of the base station is reduced to the minimum.

 
You can use your handset to reduce the transmission power on the base station **manually** even when the handset is not in the base station.

 
By doing so, you will reduce the transmission power even if you have several handsets registered.

Your handset also reduces the transmission power depending on the distance to the base station.

Activating/deactivating eco mode:

 →  → Base → Add. Features
→ Eco Mode

OK Press the display key
( = on).

If eco mode is activated manually, the  icon is displayed at the top of the screen. If eco mode is **activated** automatically (only one handset is registered and it is on the base station) and eco mode has **not** been activated via the menu, then the icon is **not** displayed.

Please note:

- Activating eco mode reduces the range of the base station.
- Eco mode and any repeater support (see page 48) cancel each other out, i.e. both functions cannot be used at the same time.
- If external handsets (GAP) and handsets from earlier Gigaset versions are used, your handset will **not** automatically reduce the transmission power to the base station.

Menu tree

Instead of scrolling to locate a menu function, you can select a function more quickly by opening the menu and keying in a digit combination (or shortcut).

Example: 8 tuv 2 abc 2 abc 1 aa for "Set ringer tone for external calls".

With the telephone in **idle status**, press (open main menu):

1 SMS

You have activated an SMS mailbox (general or private) without a PIN

1-1	New SMS	(page 26)
1-2	Incoming 0	(page 29)
1-3	Outgoing 0	(page 27)

You have activated an SMS mailbox with a PIN or 2-3 mailboxes

1-1	Mailbox	1-1-1	New SMS	(page 26)
		1-1-2	Incoming 0	(page 29)
		1-1-3	Outgoing 0	(page 27)
1-2 to 1-4	Mailbox 1 Mailbox 2 Mailbox 3	1-2-1 to 1-4-1	New SMS	(page 26)
		1-2-2 to 1-4-2	Incoming 0	(page 29)
		1-2-3 to 1-4-3	Outgoing 0	(page 27)
1-5	SMS Service	(page 32)		
1-6	Settings	1-6-1	Service Centres	(page 31)
		1-6-2	SMS Mailboxes	(page 30)
		1-6-3	Notify Number	(page 30)
		1-6-4	Notify Type	(page 30)
		1-6-5	Status Report	(page 27)

2 Sel. Services

2-6	All Calls	2-6-1	Call Divert	(page 17)
		2-6-3	Call Waiting	(page 17)
2-7	Ringback Off	(page 18)		

3 Calls List (page 23)

Menu tree

4 Add. Features

4-3	Room Monitor	(page 38)	
4-4	Data Transfer	4-4-3	Directory (page 21)
4-6	Missed Alarms	(page 46)	

5 Alarm Clock

(page 44)

6 Calendar

(page 45)

7 Resource Dir.

7-1	Screensavers	(page 43)	
7-2	Caller Pictures	(page 43)	
7-3	Sounds	(page 43)	


 
8 Settings

8-1	Date/Time	(page 9)	
8-2	Audio Settings	8-2-1	Handset Volume (page 42)
		8-2-2	Ringer Settings (page 42)
		8-2-3	Advisory Tones (page 44)
8-3	Display	8-3-1	Screen Saver (page 41)
		8-3-2	Colour Scheme (page 40)
		8-3-3	Contrast (page 40)
		8-3-4	Backlight (page 41)
8-4	Handset	8-4-1	Language (page 40)
		8-4-2	Auto Answer (page 41)
		8-4-3	Register H/Set (page 35)
		8-4-4	Select Base (page 36)
		8-4-5	Area Codes (page 47)
		8-4-6	Reset Handset (page 47)
8-5	Base	8-5-2	Music on hold (page 48)
		8-5-3	System PIN (page 47)
		8-5-4	Base Reset (page 48)
		8-5-5	Add. Features (page 12, page 37, page 49)
		8-5-6	Preselection (page 25)
		8-5-7	Calls List Type (page 23)
		8-6	Voice Mail




Making calls


Making an external call

External calls are calls using the public telephone network.

  Enter the number and press the talk key.

Or:

  Press and **hold** the talk key  and then enter the number.


You can cancel the dialling operation with the end call key .

You are shown the duration of the call while the call is in progress.


Please note:

Dialling using the directory, the call-by-call list (page 1, page 19) or the calls and last number redial list (page 23/page 22) saves you from having to re-enter numbers and network provider prefixes ("call-by-call numbers").



Ending a call

 Press the end call key.

Accepting a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing handsfree key .

You can accept the call by:

- ▶ Pressing the talk key .
- ▶ Pressing the handsfree key .
- ▶ Press the display key **Accept**.

If the handset is in the charging cradle and the **Auto Answer** function is activated (page 41), the handset will take a call automatically when you lift it out of the cradle.

If the ringer tone is intrusive, press the display key **Silence**. You can take the call as long as it is displayed on the screen.

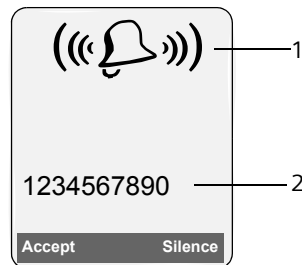
Calling Line Identification

When you receive a call, the caller's number is displayed on the screen if the following conditions are met:

- ◆ Your network provider supports CLIP, CLI.
 - CLI (Calling Line Identification): the caller's number is transmitted.
 - CLIP (Calling Line Identification Presentation): the caller's number is displayed.
- ◆ You have arranged CLIP with your network provider.
- ◆ The caller has arranged CLI with the network provider.

Call display with CLIP/CLI

If the number of the caller is saved in your directory, you will see their name, and if you have assigned a CLIP picture to that caller, this will also be displayed.



- 1 Ringer tone icon
- 2 Number or name of caller

The following is displayed in place of the number:

- ◆ **External**, if no number is transmitted.
- ◆ **Withheld**, if the caller has withheld Calling Line Identification.
- ◆ **Unavailable**, if the caller has not arranged Calling Line Identification.

Handsfree talking

In handsfree mode, instead of holding the handset to your ear you can put it down, for example on the table in front of you. This allows others to participate in the call.

Activating/deactivating handsfree mode

Activating while dialling



Enter the number and press the handsfree key.

- ▶ You should inform your caller before you use the handsfree function so that they know someone else is listening.

 

Switching between earpiece and handsfree mode



Press the handsfree key.

During a call, activate or deactivate handsfree.

If you wish to place the handset in the charging cradle during a call:

- ▶ Press and hold the handsfree key  while placing the handset in the base station. If the handsfree key  does not light up, press the key again.

For how to adjust the loudspeaker volume, see page 42.

Muting

You can deactivate the microphone in your handset during an external call. The other party hears hold music.



Press the control key on the left to mute the handset.



Press the display key to reactivate the microphone.

You can turn the hold music on and off (page 48).


Making calls easily using network services

Network services are functions that your network provider makes available to you. You have to request these services from your network provider.

- ▶ If you require assistance, please contact your network provider.

Setting functions for all subsequent calls

If you have completed one of the following procedures, a code is sent.

- ▶ After confirmation from the telephone network, press the end call key .

You can set the following features:

General call diversion

 →  → All Calls → Call Divert

- ▶ Change multiple line input:


When:

All Calls / No Answer / When Busy.

Call No.:

Press the display key **Edit**. Enter the number to which the call is to be diverted

Or:

Press . Select number from the directory and press **OK**.

Press **Save** to save.

Status:

Activate/deactivate call diversion

- ▶ Press the display key **Send**.



After the announcement, press the end call key.

Status:

Activating/deactivating parallel ringing.

- ▶ Press the display key **Send**.

Activating/deactivating call waiting

 →  → All Calls → Call Waiting

Status: Activate/deactivate.

Send Press the display key.

Functions during a call

Initiating ringback

You hear the busy tone.

Options → Ringback



Press the end call key.

Consultation

During a call:


Ext.Call Press the display key.




Enter the number.

You have the following options:

◆ Toggling:

- ▶ Use  to toggle between the participants.

End the call with one participant:

- ▶ Use  to switch to the participant.
- Then:

Options End Active Call.

◆ Conference call:

- ▶ Press the display key **Conf**.

End the conference call (toggle):

- ▶ Press **EndConf**.

◆ End call with both participants:

- ▶ Press the end call key .

Accepting a waiting call

Accept Press the display key.

You have the option of toggling or holding a conference call.

Please note:

Without CLIP a waiting call is only announced with a beep.

Making calls easily using network services

Accepting a waiting call



Options → Accept waiting call

Rejecting a waiting call

Options → Reject waiting call

Functions after a call

Cancelling ringback

 →  → Ringback Off

Using the directory and lists

The options are:

- ◆ Directory
- ◆ Call-by-call list
- ◆ Last number redial list
- ◆ SMS list
- ◆ Call history
- ◆ List of missed calls

You can save a total of 250 entries in the directory and call-by-call list.

You create the directory and call-by-call list for your own individual handset. You can also send lists/entries to other handsets (page 21).


Directory/call-by-call list

Please note:

For quick access to a number from the directory or the call-by-call list (quick dial), you can assign the number to a key.

Directory

In the **directory** you can save

- ◆ Up to three numbers and associated first names and surnames
- ◆ VIP designation and VIP ringer tone (optional)
- ◆ E-mail address (optional)
- ◆ CLIP pictures (optional)
- ◆ Anniversaries with reminder
 - ▶ With the handset in idle status, open the directory by pressing the  key.

Length of the entries (directory)

3 numbers:

each max. 32 digits

First name and surname:

each max. 16 characters

E-mail address:

max. 60 characters

Call-by-call list

The **call-by-call list** is used to store the access codes for network providers ("call-by-call numbers").

- ▶ Open the call-by-call list in idle status by pressing the  key.

Length of entries

Number: max. 32 digits

Name: max. 16 characters

Saving a number in the directory

→ New Entry

- ▶ Change multiple line input:

First Name / Surname:

Enter a name in at least one of the fields.

Phone (Home) / Phone (Office) / Phone (Mobile)

Enter a number in at least one of the fields.

E-mail

Enter e-mail address.

Annivers.:

Select **On** or **Off**.

With setting **On**:

Enter **Anniversary (Date)** and **Annivers. (Time)** (page 21) and select reminder type: **Annivers. (Signal)**.

Caller Picture

If required, select a picture to be displayed when the caller calls (see My stuff, page 43).

Precondition: Calling Line Identification (CLIP).

- ▶ Save changes: (page 56).

Saving a number in the call-by-call list

→ New Entry

- ▶ Change multiple line input:

Name:

Enter name.

Number:

Enter number.

Using the directory and lists

Order of directory entries



Directory entries are generally sorted alphabetically by surname. Spaces and digits take first priority. If only the first name was entered in the directory, this is incorporated into the sort order instead of the surname.

The sort order is as follows:



1. Space
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To get round the alphabetical order of the entries, insert a space or a digit in front of the first letter of the surname. These entries will then move to the beginning of the directory.





Selecting entries in the directory and call-by-call list

 /  Open directory or call-by-call list.

You have the following options:

- ◆ Use  to scroll through the entries until the required name is selected.
- ◆ Enter the first character of the name (in the directory: first character of the surname or of the first name if **only** the first name has been entered), or scroll to the entry using .

Dialling with the directory/call-by-call list

 /  →  (select entry)
 Press the talk key. The number is dialled.

Managing entries in the directory/call-by-call lists

 /  →  (select entry)

Viewing entries

View Press the display key. The entry is displayed.

Back with **OK**.


Editing entries

View **Edit** Press display keys one after the other.



- ▶ Carry out changes and save.

Using other functions

 /  →  (select entry)
→ **Options** (open menu)

The following functions can be selected with .

Display Number

To edit or add to a saved number, or to save it as a new entry, press  →  after the number is displayed.

Edit Entry

Edit selected entry.

Delete Entry

Delete selected entry.

VIP Entry (directory only)

Mark a directory entry as a **VIP** (Very Important Person) and assign a specific ringer tone to it. You can then recognise important calls from the ringer tone.

Precondition: Calling Line Identification (page 15).

Copy Entry

Send a single entry to a handset (page 21).

Delete List

Delete **all** entries in the directory/call-by-call list.

Copy List

Send complete list to a handset (page 21).

Available Memory

Display the available entries in the directory and call-by-call list (page 19).




Using quick dial keys


- ▶ Press and **hold** the required quick dial key (page 39).

Sending the directory/call-by-call list to another handset

Preconditions:

- ◆ The sending and receiving handsets must both be registered on the same base station.
- ◆ The other handset and the base station can send and receive directory entries.

 /  →  (select entry)
→ **Options** (open menu) → **Copy Entry / Copy List** → **to Internal**

 Select the internal number of the receiving handset and press **OK**.

You can transfer several individual entries one after the other by responding **Yes** to the **Copy next entry?** prompt.

A successful transfer is confirmed by a message and confirmation tone on the receiving handset.

Please note:

You can also send the complete **directory** via data transfer, without opening the directory:

 →  → **Data Transfer** → **Directory**

Please note:

- ◆ Entries with identical numbers are not overwritten on the receiving handset.
- ◆ The transfer is cancelled if the phone rings or if the memory of the receiving handset is full.

Copying a displayed number to the directory

You can copy numbers displayed in a list, e.g. the call history or the last number redial list, in an SMS or during a call to the directory.




A number is displayed:


Options → **Copy to Directory**

- ▶ Complete the entry, see page 19.

Copying a number or e-mail address from the directory

In many operating situations, you can open the directory to copy a number or e-mail address, for example. Your handset need not be in idle status.

- ▶ Depending on the operating situation, open the directory with  or  or  **Directory**.

 Select an entry (page 20).


Saving an anniversary in the directory


For each number in the directory, you can save an anniversary and specify a time at which a reminder call should be made on the anniversary (delivery status: **Annivers.: Off**).

Anniversaries are automatically recorded in the calendar (page 45).

 →  (select entry; page 20)

View **Edit** Press display keys one after the other.

 Scroll to the **Annivers.:** line.

 Select **On**.

- ▶ Change multiple line input:

Anniversary (Date)

Enter day/month/year in 8-digit format.

Annivers. (Time)

Enter the hour/minute for the reminder call in 4-digit format.

Annivers. (Signal)

Select the type of signal for the reminder.



- ▶ Save changes: (page 56).

Please note:


A time must be specified for reminder calls. If you select a visual signal, a time is not required and is automatically set to 00.00.


Using the directory and lists

Deactivating anniversaries

 →  (select entry; page 20)

View **Edit** Press display keys one after the other.

 Scroll to the **Annivers.:** line.

 Select **Off**.

Save Press the display key.

Reminder call on an anniversary

A reminder call is signalled on the handset using the selected ringer tone.

You now have the following options:

SMS Write an SMS

OFF Press the display key to acknowledge and end the reminder call.

Viewing missed anniversaries


In idle status, you are reminded of an elapsed and unacknowledged anniversary by the **one-off** display of **Appoint.**

▶ View appointment:

Appoint. Press the display key.

You now have the following options:

SMS Write an SMS


Delete Delete the reminder.
After deleting, press the  or **Go Back** display key:
Back in idle status, **Appoint.** is no longer displayed.


You can also view missed anniversaries afterwards (see page 46).


Last number redial list

The last number redial list contains the twenty numbers last dialled with the handset (max. 32 digits). If a number is in the phone book or the call-by-call list, then the appropriate name will be displayed.

Manual last number redial


 Press the key **briefly**.


 Select entry.

 Press the talk key again.
The number is dialled.


When a name is displayed, you can display the corresponding phone number by pressing the display key **View**.

Managing entries in the last number redial list

 Press the key **briefly**.

 Select entry.

Options Open menu.

 
The following functions can be selected with :

Copy to Directory

Copy an entry to the directory (page 19).

Automatic Redial

The selected number is automatically dialled at fixed intervals (at least every 20 seconds). The handsfree key flashes and "open listening" is activated.


- Called party answers: press the talk key . The function is ended.
- Called party does not answer: the call is terminated after approx. 30 seconds. The function is ended after pressing any key or after ten unsuccessful attempts.

Display Number (as in the directory, page 20)


Delete Entry (as in the directory, page 20)

 
 

Delete List (as in the directory, page 20)

Opening lists with the message key

You can use the message key  to open the following list selection:


- ◆ SMS list
 - If **several** mailboxes are set up (page 30), several lists are displayed.
- ◆ network mailbox, if your network provider supports this function and the fast access is set for the network mailbox (page 34).
- ◆ Call history

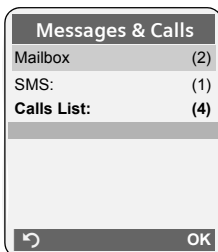
An advisory tone sounds as soon as a **new message** arrives in a list. The  key flashes (it goes off when the key is pressed). In **idle status**, the display shows an icon for the new message:



Icon	New message...
	...on the network mailbox
	... in the call history
	... in SMS list

The number of new entries is shown beneath the corresponding icon.

List selection

If you press the message key , only the lists that contain messages are shown (exception: network mailbox). Lists with new messages are identified in bold:



Select a list with . To open, press  or **OK**.

If only one list contains entries, no list selection is offered and the relevant list is displayed immediately.


Incoming SMS message list

All received SMS messages are saved in the incoming message list, page 28.

Call history

Precondition: Calling Line Identification (CLIP, page 15)

Depending on the type of list set, the call history contains

- ◆ accepted calls ()
- ◆ missed calls

Depending on the type of list set, all numbers of the last 30 incoming calls are saved or just the missed calls are saved. The list of missed calls does not contain calls that were answered.


You can also call up the call history via the menu:

 → **Calls List**

Setting the calls list type

 →  → **Base** → **Calls List Type**

Missed Calls / All Calls

Select and press **OK** ( = on).



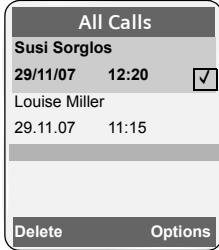
Press and **hold** (idle status).

The calls list entries are retained when you change the list type.

List entry


New messages are displayed at the top.

Example of list entries:



- ◆ List type (in header)
- ◆ Status of entry
Bold: new entry
- ◆ Number or name of caller
You can add the caller's number to the directory (page 21).
- ◆ Date and time of call (if set, page 9)
- ◆ Type of entry:
 - accepted calls ()
 - missed calls

Pressing the display key **Delete** deletes the marked entry.

After pressing the display key **Options** you can select more functions with :

Copy to Directory

Copy number to the directory.

Delete List

Delete complete list.

When you quit the call history, all entries are set to the status "old", i.e. the next time you call the list up they will no longer be shown in bold.

Making cost-effective calls

Sign up with a network provider who offers particularly low-cost call rates (call-by-call). You can manage the numbers in the call-by-call list.

Linking call-by-call numbers with one number

You can insert the dialling code of a network provider ahead of the number ("linking").



Open call-by-call list.



Select entry (call-by-call number).



Press the display key.

Display Number

Select and press **OK**.



Enter number or select number from the directory (page 21).



Press the talk key. Both numbers are dialled.

Automatic network provider preselection (Preselection)

You can specify a call-by-call number (preselection number) which is **automatically** placed in front of numbers when you dial them.

- ◆ The "**with preselection**" list contains the "rule" for dialling code numbers or the first digits of dialling code numbers with which you wish the preselection number to be used.
- ◆ The "**without preselection**" list contains the "exception to the rule".

Example:



You have entered 08 for "with preselection". Consequently, all numbers that start with 08 are dialled with preselection.


If, for example, you want 081 to still be dialled without preselection, enter 081 for "without preselection".

When dialling, the **first** digits of the selected numbers are compared with both lists after the talk/handsfree key is pressed:


- ◆ The preselection number is not prefixed if the dialled number
 - **does not** match any entries in the two lists
 - matches an entry in the "**without preselection**" list
- ◆ The preselection number is prefixed if the first digits of the dialled number match with **only** one entry in the list "**with preselection**".

Saving preselection numbers

 →  → Base → Preselection
→ Preselect No.

 Enter or change the preselection number (call-by-call number).



Save Press the display key.


 Press and **hold** (idle status).

Save or change entries in the preselection lists


Each of the two lists can contain 20 entries, each with 6 digits.

Numbers may be prefixed according to the country in the "**with preselection**" list. This means e.g. that all national calls or calls to the mobile network are **automatically** linked to the preselection number you have saved previously.


 →  → Base → Preselection
→ With Preselect / Without Presel.

 Select entry.

Edit Press the display key.

 Enter or edit first digits of number.

Save Press the display key.

 Press and **hold** (idle status).

Temporarily cancelling preselection

 (press and hold) → **Options**
→ Aut Preselect off

Permanently deactivating preselection

- ▶ Delete the preselection number (page 25).

SMS (text messages)

Your unit is supplied ready for sending SMS messages immediately.

Preconditions:

- ◆ Calling Line Identification is enabled for your phone line.
- ◆ Your network provider supports SMS in the fixed network (information on this can be obtained from your network provider).
- ◆ You are registered with your service provider to send and receive SMS.

SMS messages are exchanged between SMS centres operated by service providers. You must enter the SMS centre through which you wish to send and receive SMS messages into your phone. You can receive SMS messages from **every** SMS centre that is entered, provided you have registered with your service provider.

Your SMS messages are sent through the SMS centre that is entered as the active send service centre (page 31). Only one SMS centre can be the active send service centre at any one time.

If no SMS Service Centre is entered, the SMS menu only contains the entry **Settings**. Enter an SMS Service Centre (page 31).

Information on writing an SMS can be found in the appendix:

- ◆ For how to enter text, see page 56.
- ◆ Writing using the predictive text tool EATONI, see page 57.

Rules

- ◆ An SMS can be up to 612 characters.
- ◆ If there are more than 160 characters, the SMS is sent as a **linked** SMS (up to 4 SMS messages with 153 characters each).

Please note:

- ◆ If your phone is connected to a PABX, please read page 32.
- ◆ To receive SMS messages you must be registered with your service provider.

Writing/sending an SMS

Writing an SMS



Mailbox 2 Select mailbox if necessary and press **OK**.



Enter mailbox PIN if necessary and press **OK**.

New SMS Select and press **OK**.



Write an SMS.

Please note:

- Instructions on entering text can be found at page 56 and on writing with EATONI predictive text at page 57.
- EATONI is activated as a default setting. Activating/deactivating EATONI see page 57.

Sending an SMS



Press the talk key

Or:



Press the display key.

Send Select and press **OK**.

SMS Select and press **OK**.



Select number with area code (even if you are in that area) from the directory or call-by-call list, or enter number directly. For SMS to an SMS mailbox: add the mailbox ID to the **end** of the number.



Press the display key. The SMS is sent.

Please note:

- If you are interrupted by an external call while writing an SMS, the text is automatically saved in the draft message list.
- If the memory is full, or if the SMS function on the base station is being used by another handset, the operation is cancelled. An appropriate message appears in the display. Delete SMS messages you no longer require or send the SMS later.


Setting input language


- ▶ You are writing an SMS (page 26).

Options Press the display key.

Select Language

Select and press **OK**.

 Select input language and press **OK**.

 Press the end call key **briefly** twice to return to the text panel.



The input language setting only applies to the current SMS.

SMS status report

 
Precondition: Your network provider supports this feature.

If you have activated the status report, you will receive an SMS with a confirmation message after sending.

Activating/deactivating a status report


 →  → **Settings**

Status Report

Select and press **OK** ( = on).

Reading/deleting status report/saving number to directory

- ▶ Open the incoming message list (page 28) and then:

 Select SMS with the **State OK** or **State not OK** status.

Read Press the display key.

- ◆ **Delete:**
Options **Delete Entry** **OK**.

- ◆ **Save to directory:**
Options **Copy to Directory** **OK**.
- ◆ **Delete entire list:**
Options **Delete List** **OK**.

Draft message list

You can save an SMS in the draft message list and edit and send it later.

Saving an SMS in the draft message list

- ▶ You are writing an SMS (page 26).

Options Press the display key.

Save Entry Select and press **OK**.

Opening the draft message list


 →  → (mailbox, mailbox PIN)
→ **Outgoing** (3)


The first list entry is displayed, e.g.:

```
1234567890
21.11.07 09:45
```

Reading or deleting individual SMS messages

- ▶ Open the draft message list and then:

 Select SMS.

Read Press the display key. The entry will be displayed. Scroll line by line using .

Or delete the SMS with

Options **Delete Entry** **OK**.

Writing/changing an SMS

- ▶ You are reading an SMS in the draft message list.

Options Open menu.

You have the following options:

New SMS

Write a new SMS and then send (page 26) or save it.

Edit

Edit the text of the saved SMS and then send (page 26).


Character Set

Text is shown in the selected character set.

SMS (text messages)

Deleting draft message list



► Open the draft message list and then:

- Options** Open menu.
- Delete all** Select, press **OK** and confirm with **Yes**. The list is cleared.
-  Press and **hold** (idle status).

Sending SMS messages to an e-mail address

If your service provider supports the **SMS as e-mail** feature, you can also send your SMS messages to e-mail addresses.

The e-mail address must be at the beginning of the text. You must send the SMS to the e-mail service of your SMS send centre.

 →  → (mailbox, mailbox PIN)

→ **New SMS**

 / 

Load the e-mail address from the directory or enter it directly. End the entry with a space or colon (depending on the service provider).



Enter the SMS text.

Options

Press the display key.

Send

Select and press **OK**.

E-mail

Select and press **OK**. If the number of the e-mail service is not entered (page 31), enter the number of the e-mail service.

Send

Press the display key.

Receiving an SMS

All received SMS messages are saved in the incoming message list. Linked SMS messages are displayed as **one** message. If this is too long or is not transferred completely, it is split into individual messages. Since an SMS remains in the list even after it has been read, you should **regularly delete SMS messages from the list**.

 

The display tells you if the SMS memory is full.

- Deleting SMS messages you no longer require (page 29).

Incoming message list

The incoming message list contains:

- ◆ All received SMS messages, starting with the most recent.
- ◆ SMS messages that could not be sent due to an error.

New SMS messages are signalled on all Gigaset S67H handsets by the  icon in the display, the flashing message key  and an advisory tone.

Opening the incoming message list with the key

 Press.

Select mailbox if necessary and enter mailbox PIN.

The incoming message list is displayed as follows (example):

SMS:	(2)	1
		2



- 1 **bold:** number of new entries
- regular:** number of read entries
- 2 Name of mailbox, here: general mailbox

Open list with **OK**.

An entry in the list is displayed as in the following example:

1234567890
21.11.07 09:45

Opening the incoming message list via the SMS menu

-  →  → (mailbox, mailbox PIN)
→ Incoming (2)

Reading or deleting individual SMS messages

- ▶ Open the incoming message list.
- ▶ Continue as described in "Reading or deleting individual SMS messages", page 27.

After you have read a new SMS, it is given the status "Old" (is no longer shown in bold).

Deleting the incoming message list

All **new and old** SMS messages in the list are deleted.

- ▶ Open the incoming message list.

Options Open menu.

- ▶ To continue, see "Deleting draft message list", page 28.

Replying to or forwarding SMS messages

- ▶ Read the SMS (page 29):

Options Press the display key.

You have the following options:

Reply

Write and send a reply SMS directly (page 26).

Edit

Edit the text in the SMS and then send it (page 26).

Forwarding an SMS

- ▶ You are reading an SMS (page 29):

Options Press the display key.

Forward Select and press **OK**. For further information, see page 26.

Adding numbers to the directory

Adding the sender's number

- ▶ Open incoming message list and select entry (page 28).

Options Press the display key. For further information, see page 21.


Please note:

- You can create a special directory for SMS messages within your main directory by putting a star (*) before the names.
- An attached mail box identifier is added to the directory.

 
Copying/dialling numbers from an SMS text

- ▶ Read the SMS (page 29) and scroll to the telephone number.

The digits are reverse-highlighted.

 Press the display key. For further information, see page 21.

Or:

 Press the talk key to dial the number.

If you wish to use the number to send an SMS:

- ▶ Save the number with the local area code (dialling code) in the directory.

Changing the character set

- ▶ Read the SMS (page 29):

Options Press the display key.

Character Set

Text is shown in the selected character set.

Notification by SMS

You can be notified about missed calls.


Precondition: For missed calls, the caller's number (CLI) must have been transmitted.


Notification is sent to your mobile phone or another phone with SMS functionality.


You only need to set the phone number to which notification should be sent (notification number) and the notification type.

Saving the notification number

 →  → **Settings** → **Notify Number**

 Enter the number to which the SMS should be sent.

 Press the display key.

 Press and **hold** (idle status).

Warning:

Do **not** enter your own fixed network number for the notification of missed calls. This can lead to chargeable endless looping.

Setting the notification type

 →  → **Settings** → **Notify Type**

▶ Change multiple line input if necessary:

Missed Calls:

Set **On** if you require SMS notification.

▶ Save changes (page 56).

SMS mailboxes

The **general mailbox** is the default setting. Anyone can access this mailbox and it cannot be protected by a PIN. You can additionally set up three **personal mailboxes** and protect these with a **PIN**. Each mailbox is identified by a name and a "mailbox ID" (a kind of extension number).


Please note:

- ◆ If you operate a number of devices (base stations) with SMS functionality on a single phone line, then each SMS mailbox ID may only occur once. In this case you must also change the preset ID of the general mailbox ("0").
- ◆ You can only use personal mailboxes if your service provider supports this function. You can tell whether this is the case by the addition of a star (*) to the number of a (preset) SMS centre.
- ◆ If you have forgotten your mailbox PIN, you can reset it by restoring the base station's default settings. This will **delete all SMS messages from all mailboxes**.

Setting up and changing a personal mailbox

Setting up a personal mailbox

 →  → **Settings** → **SMS Mailboxes**

 Select mailbox, e.g. **Mailbox 2** and press **OK**.

▶ Change multiple line input:

On/Off:

Activate or deactivate mailbox.

ID:

Select mailbox ID (0–9). You can only select the available numbers.

 
 
Protection:

Activate/deactivate PIN protection.

PIN

If necessary, enter 4-digit PIN.

▶ Save changes (page 56).

Active mailboxes are marked with  in the mailbox list. They are shown in the SMS list and can, if necessary, be displayed by pressing the message key .

Deactivating a mailbox

- ▶ Set **On/Off:** to **Off**. Confirm message with **Yes** if necessary.

All SMS messages saved in this mailbox will be deleted.

Deactivating PIN protection

- ▶ Set **Protection:** to **Off**.

The mailbox PIN is reset to "0000".

Changing the name of a mailbox

-  →  → **Settings** → **SMS Mailboxes**
→  (Select mailbox)

Edit Press the display key.

 Enter new name.

Save Press the display key.

 Press and **hold** (idle status).

Changing a mailbox's PIN and ID

-  →  → **Settings** → **SMS Mailboxes**
→  (Select mailbox)

 Enter mailbox PIN if necessary and press **OK**.

- ▶ Set **ID;** **Protection:** and **PIN** (page 30).

Sending an SMS to a personal mailbox

To send an SMS to a personal mailbox, the sender must know your ID and enter it after your number.

- ▶ You can send your SMS contact an SMS via your personal mailbox.


Your SMS contact will receive your SMS number with current ID and can save it in their directory. If the ID is invalid, the SMS will not be delivered.

Setting SMS centres

Entering/changing SMS centres

- ▶ You should find out about the services and special functions offered by your service provider **before you make a new application** and/or before you delete pre-configured call numbers.

 →  → **Settings** → **Service Centres**

 Select SMS centre (e.g. **Service Centr. 1**) and press **OK**.

- ▶ Change multiple line input:

Active Send:

Select **Yes** if SMS messages are to be sent via the SMS centre.

SMS:

Press the display key **Edit**. Enter the number of the SMS service and insert a star if your service provider supports personal mailboxes.

E-mail:

Press the display key **Edit**. Enter the number of the e-mail service.

- ▶ Save changes (page 56).

Please note:

Ask your service provider for details on how to enter service numbers if you wish to use personal mailboxes (precondition: your service provider supports this function).

Sending an SMS through another SMS centre

- ▶ Activate the SMS centre (2 to 4) as the active send service centre.
- ▶ Send the SMS.

SMS info services

You can have your service provider send you specific information by SMS (e.g. weather forecast or the lottery numbers). A total of up to 10 info services can be saved. You can obtain information about the info services available and their costs from your service provider.

Setting up/ordering an info service

Ordering an info service



→ → SMS Service



Select info service.



Press the display key.

Setting up an info service

- ▶ Select an empty entry, delete beforehand if necessary. Then:



Press the display key.



If necessary, enter code, designation and destination number.



Press the display key.

Editing the entry of an info service

- ▶ Select the info service (see above). Then:



Open menu.



Select and press **OK**.



If necessary, change the code, designation, or destination number.



Press the display key.

Deleting an info service

- ▶ Select the info service (see above). Then:



Open menu.



Select and press **OK**.

SMS on a PABX

- ◆ You can only receive an SMS when the **Calling Line Identification is forwarded to the extension of the PABX (CLIP)**. The CLIP evaluation of the number of the SMS centre happens in your **Gigaset**.
- ◆ If required, you must prefix the number for the SMS centre with the access code (depending on your PABX).
If in doubt, test your PABX, e.g. by sending an SMS to your own number: once with and once without the access code.
- ◆ When you send SMS messages, your sender number may be sent without your extension number. In this case the recipient cannot reply to you directly.

Sending and receiving SMS messages on **ISDN PABXs** is only possible via the MSN number assigned to your base station.

Activating/deactivating the SMS function

If you deactivate the SMS function, you cannot send or receive any SMS messages with your phone.

The settings which you have made for sending and receiving SMS messages (e.g. the call numbers of the SMS centres) and the entries in the incoming and draft message lists are saved even after you turn off your phone.



Open menu.



Enter the digits.



Deactivate SMS function.

Or:



Activate SMS function (default setting).

SMS troubleshooting

Error codes when sending

EO	Calling Line Identification permanently withheld (CLIR) or Calling Line Identification not activated.
FE	Error occurred during SMS transfer.
FD	Connection to SMS centre failed, see self-help.

Self-help with errors

The following table lists error situations and possible causes and provides notes on troubleshooting.

<p>You cannot send messages.</p> <ol style="list-style-type: none"> 1. You have not requested the CLIP service (Calling Line Identification Presentation). <ul style="list-style-type: none"> ▶ Ask your service provider to enable this service. 2. SMS transmission has been interrupted (e.g. by a call). <ul style="list-style-type: none"> ▶ Re-send the SMS. 3. Network provider does not support this feature. 4. No number or an invalid number is entered for the SMS centre set as the active send service centre. <ul style="list-style-type: none"> ▶ Enter the number (page 31).
<p>You receive an incomplete SMS.</p> <ol style="list-style-type: none"> 1. Your phone's memory is full. <ul style="list-style-type: none"> ▶ Delete old SMS messages (page 29). 2. The service provider has not yet sent the rest of the SMS.
<p>You have stopped receiving SMS messages.</p> <ol style="list-style-type: none"> 1. You have changed the ID of your mailbox. <ul style="list-style-type: none"> ▶ Give your SMS contacts your new ID or undo the change (page 31). 2. You have not activated your mailbox. <ul style="list-style-type: none"> ▶ Activate your mailbox (page 31). 3. Call diversion is activated with When: All Calls or the All Calls call diversion is activated for the network mailbox. <ul style="list-style-type: none"> ▶ Change the call diversion

The message is played back.

1. The "display call number" service is not activated.
 - ▶ Ask your service provider to activate this function (chargeable).
2. Your mobile phone operator and your fixed network SMS service provider have not agreed on a co-operation.
 - ▶ Obtain information from your fixed network SMS service provider.
3. Your terminal is recorded by your SMS provider as having no fixed network SMS functionality, i.e. you are no longer registered with the provider.
 - ▶ Have the device (re-)registered to receive SMS messages.

Messages are only received during the day.

- The terminal is recorded in your SMS provider's database as having no fixed network SMS functionality, i.e. you are no longer registered with the provider.
- ▶ Obtain information from your fixed network SMS service provider.
 - ▶ Have the device (re-)registered to receive SMS messages.

Using the network mailbox

The network mailbox is your network provider's answer machine within the network. You cannot use the network mailbox unless you have **requested** it from your network provider.

Configuring fast access for the network mailbox

 
With fast access, you can dial the network mailbox directly.

Fast access is set for the network mailbox. You only need to enter the number of the network mailbox.

Configuring fast access for the network mailbox and entering the network mailbox number

 →  → Voice Mail → Set Key 1

Network Mailb.

Select and press **OK** ( = on).



Enter the number for the network mailbox.

Save

Press the display key.



Press and **hold** (idle status).


The setting for fast access applies to all Gigaset S67H handsets.

Calling the network mailbox



Press and **hold**. You are connected straight to the network mailbox.



Press handsfree key  if required. You will hear the network mailbox announcement.

Viewing the network mailbox report

When a message is recorded, you receive a call from the network mailbox. If you have requested Calling Line Identification, the network mailbox number will be displayed. If you take the call, the new messages are played back. If you do not take the call, the network mailbox number will be saved in the missed calls list and the message key flashes (page 23).

Using several handsets

Registering handsets

You can register up to six handsets to your base station.

A Gigaset S67H handset can be registered to up to four base stations.

Automatic registration of Gigaset S67H to Gigaset S670

Precondition: The handset must not already be registered to a base station.

Registering the handset to the base station occurs automatically.

- ▶ Place the handset in the base station with its display facing forward.

Registration can take up to 5 minutes. During this process, the registration procedure appears in the display and the name of the base station flashes, e.g. base station 1. When the handset has registered successfully, its screen displays its internal number, e.g. INT 2 for internal number 2. The handset is assigned the lowest available internal number (1–6). If all internal numbers 1–6 have been assigned, number 6 is overwritten, provided the handset with the internal number 6 is in idle status.

Please note:

- Automatic registration is not possible when the base station to which you wish to register the handset is being used to make a call.
- Each key press interrupts the automatic registration.
- If automatic registration does not work, you will have to register the handset manually.
- You can change the name of the handset (see page 38).

Manual registration of Gigaset S67H to Gigaset S670

You must activate manual registration of the handset on both the handset and the base station.

Once it has been registered, the handset returns to idle status. The handset's internal number is shown in the display e.g. INT 1. If not, repeat the procedure.

On the handset

 →  → **Handset** → **Register H/Set**



Select base station, e.g. **Base 1** and press **OK**.



Enter the system PIN of the base station (the default is 0000) and press **OK**. You will see flashing on the display e.g. **Base 1**.

On the base station

Within 60 sec. press and **hold** the registration/paging key on the base station (page 1) (approx. 3 sec.).

Registering other handsets

You can register other Gigaset handsets and handsets for other devices with GAP functionality as follows.

On the handset


- ▶ Start to register the handset as described in its user guide.


On the base station

Press and **hold** the registration/paging key on the base station (page 1) (approx. 3 sec.).

Deregistering handsets


You can deregister any other registered handset from any registered Gigaset S67H handset.

 Open list of internal parties. The handset you are currently using is indicated by < .

 Select the internal party you wish to deregister.

Options Open menu.

De-reg. H/Set No.
Select and press **OK**.

 Enter the current system PIN and press **OK**.

 
Yes Press the display key.

Locating a handset ("paging")

You can locate your handset using the base station.

- ▶ **Briefly** press the registration/paging key on the base station (page 1).
- ▶ All handsets will ring simultaneously ("paging"), even if the ringer tones are switched off.


Ending paging

- ▶ **Briefly** press the registration/paging key on the base station or press the talk key  on the handset.

Changing the base station

If your handset is registered to more than one base station, you can set it to a particular base station or to the base station that has the best reception (**Best Base**).

 →  → **Handset** → **Select Base**


 Select one of the registered base stations or **Best Base** and press **OK**.

Making internal calls

Internal calls to other handsets registered on the same base station are free.

Calling a specific handset

 Initiate internal call.

 Enter the number of the handset.


Or:


 Initiate internal call.

 Select handset.


 Press the talk key.

Calling all handsets ("group call")

 Initiate internal call.


 Press the star key. All handsets are called.


Ending a call

 Press the end call key.

Transferring a call to another handset


You can transfer an external call to another handset (connect).

 Open list of handsets. The external participant hears hold music if activated (see page 48).

 Select a handset or **Call All** and press **OK**.


When the internal participant answers:

- ▶ If necessary announce the external call.

 Press the end call key.

The external call is transferred to the other handset.


If the internal participant does **not** answer or the line is busy, press the display key **End**, to return to the external call.


When transferring a call you can also press the end call key  before the internal participant answers.

Then, if the internal participant does not answer or the line is busy, the call will automatically return to you (the display will show **Recall**).

Internal consultation calls

When you are speaking to an **external** participant you can call an **internal** participant at the same time for consultation.

 Open list of handsets.
The external participant hears hold music if activated (see page 48).

 Select handset and press **OK**.

Ending a consultation call

End Press the display key.

You are reconnected with the external participant.

Accepting/rejecting call waiting

If you receive an **external** call during an **internal** call, you will hear the call waiting tone (short tone). The caller's number will appear in the display if Calling Line Identification is enabled.

Ending an internal call, accepting an external call

Accept Press the display key.

The internal call is **ended**. You are connected to the external caller.

Rejecting the external call

Reject Press the display key.



The call waiting tone is turned off. You remain connected with the internal participant. The ringer tone can still be heard on other registered handsets.


Listening in to an external call


Precondition: The **Listening In** function must be activated.

You are conducting an external call. An internal participant can listen in on this call and take part in the conversation. All the participants are made aware of the "listening in" by a signal tone.

Activating/deactivating internal listening-in

 
 →  → **Base** → **Add. Features**
→ **Listening In**

Press **OK** to activate/deactivate the function ( = on).

 Press and **hold** (idle status).


Internal listening in

The line is engaged with an external call. Your screen will display information to that effect. You want to listen in to the external call.


 Press and **hold** the talk key.

You are linked into the call. All participants hear a signal tone. During this time, this handset displays the **Conference** message and it is not possible to dial another number from this handset.

Ending listening in






 Press the end call key.

All participants hear a signal tone.

If the **first** internal participant presses the end call key () , the handset that has "listened in" remains connected to the external participant.


Changing the name of a handset

The names "INT 1", "INT 2" etc. are assigned automatically at registration. You can change these names. The name must be no more than 10 characters. The changed name is displayed in every handset's list.

-  Open list of handsets. Your own handset is indicated by <.
-  Select handset.
-  Press the display key.
-  Enter name.
-  Press the display key.

Changing a handset's internal number


A handset is **automatically** assigned the lowest free number on registration. If all slots are occupied, number 6 is overwritten if this handset is in idle status. You can change the internal number of all registered handsets (1–6).


-  Open list of handsets. Your own handset is indicated by <.

 
 Open menu.

Edit H/Set No.

Select and press **OK**. The list of handsets is displayed.

-  The current number flashes. Select a handset.

-  Enter the new internal number (1–6). The handset's old number is overwritten.

 Press the display key to save the input.

-  Press and **hold** (idle status).

You will hear the error tone (descending tone sequence) if you assign an internal number twice.

- ▶ Repeat the procedure with a free number.

Using a handset as a room monitor

If the room monitor is activated, a previously saved destination number is called as soon as a set noise level is reached. You can save an internal or external number in your handset as the destination number.

The room monitor call to an external number stops after around 90 seconds. The room monitor call to an internal number (handset) stops after approx. 3 minutes (depending on the base station). When the room monitor is activated, all keys are locked except the end call key. The handset's speaker is muted.

When the room monitor is activated, incoming calls to the handset are indicated **without a ringer tone** and are only shown on the screen. The display and keypad are not illuminated and advisory tones are also turned off.



If you accept an incoming call, the room monitor mode is suspended for the duration of the call, but the function **remains** activated.

The room monitor mode is retained if you turn the handset off and on again.

Caution!

- You should always check the operation of the room monitor before use. For example, test its sensitivity. Check the connection if you are diverting the room monitor to an outside number.
- When the function is activated the handset's operating time is severely reduced. If necessary, place the handset in the charging cradle. This ensures that the batteries do not run down.
- Ideally the handset should be positioned 1 to 2 metres away from the baby. The microphone must be directed towards the baby.
- The connection to which the room monitor is diverted must not be blocked by an activated answer machine.

Activating the room monitor and entering the destination number


 →  → Room Monitor


▶ Change multiple line input:

Room M.:

Select **On** to activate.

Call to:

External number: Select the number from the directory (press display key ) or enter it directly. Only the **last 4 digits** are displayed.

Internal number: **Options** → **INT** → **OK** →  (select handset or **Call All**, if all registered handsets are to be called) → **OK**.


Level:


Set noise level sensitivity (**Low** or **High**).

▶ Press **Save** to save the settings.

Changing set destination numbers

 →  → Room Monitor

 Scroll to the **Call to:** line.

 or **Delete**
Delete existing number.

▶ Enter number as described in "Activating the room monitor and entering the destination number" (page 39).

Deactivating the room monitor remotely

Preconditions: The phone must support touch tone dialling and the room monitor should be set for an external destination number.

▶ Accept the call from the room monitor and press keys  .



 
The room monitor function will deactivate after the call ends. There will be no further room monitor calls. The other room monitor settings (e.g. no ringer tone) on the handset will remain activated until you press the display key **OFF** on the handset. To reactivate the room function with the same phone number:

▶ Turn on the activation again and save with **Save** (page 39).

Handset settings

Your handset is preconfigured, but you can change the settings to suit your individual requirements.


Shortcuts for functions and numbers

You can assign the left display key and each of the digit keys  and  to  a number or a function. The right-hand display key has already been assigned a function. You can change the assignment.

The number is then dialled or the function started by simply pressing a key.

Assigning a digit key/left display key

Precondition: The digit key or the left display key has not yet been assigned a number or a function.

▶ Press the display key  or press and **hold** the digit key.

The list of possible key assignments is opened. The following can be selected:

Quick Dial / Call-by-Call

Assign key to a number from the directory or call-by-call list.

The directory or call-by-call list is opened.

▶ Select an entry and press **OK**.

If you delete or edit an entry in the directory or call-by-call list, this has no effect on the assignment to the digit/display key.

Room Monitor

Assign key to the menu for setting and activating the room monitor (see page 38).

Handset settings

Alarm Clock

Assign key to the menu for setting and activating the alarm clock (see page 44).

Calendar

Open calendar/enter new appointment.

More Features...

More functions are available:

INT

Internal calls (see page 36).

SMS

Assign the menu for SMS functions to a key (see page 26).

SMS Service

Assign key with the menu for ordering info services (page 32).

SMS Notific.

Assign key with the menu for activating SMS notification (page 30).

If the left display key has been assigned a shortcut, the selected function or name of the phone number in the directory or call-by-call list is displayed (abbreviated if necessary) in the bottom display line via the display key.

Starting the function, dialling the number

If the handset is in idle status, press and **hold** the digit key or press the display key **briefly**.

Depending on the key assignment:

- ◆ Numbers are dialled directly.
- ◆ The function menu is opened.

Changing key assignments

Display key

- ▶ Press and **hold** the left or right display key.

The list of possible key assignments is opened.

- ▶ Proceed as is described when first assigning the key with a shortcut (page 39).

Digit key

- ▶ Press the digit key **briefly**.


Change Press the display key. The list of possible key assignments is displayed.


- ▶ Proceed as is described when first assigning the key with a shortcut (page 39).


Changing the display language

You can view the display texts in different languages.

 →  → **Handset** → **Language**

The current language is indicated by .


 Select a language and press **OK**.

 Press and **hold** (idle status).

If you accidentally choose a language you do not understand:



 **8** **4** **1**

Press keys in sequence.

 Select the correct language and press **OK**.


 
Setting the display

You have a choice of four colour schemes and several different contrasts.

 →  → **Display**

Colour Scheme

Select and press **OK**.

 Select a colour scheme and press **OK** ( = current colour).

 Press **briefly**.

Contrast Select and press **OK**.

 Select contrast.

Save Press the display key.

 Press and **hold** (idle status).

Setting the screensaver

You can set a picture from the Resource Dir. (page 43) to be displayed as a screensaver when the handset is in idle status. This will replace the idle status display. It may conceal the date, time and name.

The screensaver is not displayed in certain situations, e.g. during a call or if the handset is deregistered.

If a screensaver is activated, the **Screen Saver** menu option is marked with .

 →  → **Display** → **Screen Saver**

The current setting is displayed.

▶ Change multiple line input:


Activation:

Select **On** (screensaver is displayed) or **Off** (no screensaver).

Selection:


If required, change the screensaver (see below).

▶ Save changes: (page 56).


If the screensaver conceals the display, **briefly** press  to show the idle display with time and date.

Changing the screensaver

 →  → **Display** → **Screen Saver**

 Scroll to the **Selection** line.

View Press the display key. The active screensaver is displayed.

 Select screensaver and press **Change**.

▶ Save changes: (page 56).

Setting the display backlight

Depending on whether or not the handset is in the charging cradle, you can activate or deactivate the backlight. If the base station is turned on, the display is permanently dimmed.

 →  → **Display** → **Backlight**

The current setting is displayed.

▶ Change multiple line input:

In Charger

Select **On** or **Off**.

Without Charger

Select **On** or **Off**.

Please note:

With the **On** setting, the standby time of the handset can be significantly reduced.


Save



Press the display key.



Press and **hold** (idle status).

Activating/deactivating auto answer

If you activate this function, when you receive a call you can simply lift the handset out of the charging cradle without having to press the talk key .

 →  → **Handset**

Auto Answer

Select and press **OK** (= on).



Press and **hold** (idle status).

Changing the handsfree/earpiece volume

You can set the loudspeaker volume for handsfree talking to five different levels and the earpiece volume to three different levels.

In idle status:



→ **Handset Volume**



Set the earpiece volume.



Scroll to the **Speaker**: line.



Set the handsfree volume.



Press display key if necessary to save the setting permanently.

Setting the volume during a call:



Press the control key.




Select volume.



Press display key if necessary to save the setting permanently.

The setting will automatically be saved after approx. 3 seconds, if not then press the display key **Save**.

If  is assigned to another function, e.g. toggling (page 17):



Open menu.

Volume Select and press **OK**.


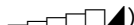
Configure setting (see above).

Please note:

You can also set the call volume, the ringer tones and the advisory tones via the menu (see page 14).

Changing ringer tones

◆ **Volume:**

You can choose between five volumes (1–5; e.g. volume 2 = ) and the "crescendo" ring (6; volume increases with each ring = ).

◆ **Ringer tones:**

You can select various ringer tones, melodies or any sound from My stuff (page 43).

You can set different ringer tones for the following functions:

◆ **Ext. Calls:** for external calls

◆ **Internal Calls:** for internal calls

◆ **Appointments:** for set appointments (page 45)

◆ **All:** the same ringer tone for all functions

Settings for individual functions

Set the volume and melody depending on the type of signalling required.

In idle status:



→ **Ringer Settings**



Select setting, e.g. **Ext. Calls** and press **OK**.



Set volume (1–6).



Scroll to the next line.



Select melody.



Press the display key to save the setting.

Same settings for all functions

In idle status:



→ **Ringer Settings** → **All**

▶ Set volume and ringer tone (see "Settings for individual functions").



Press the display key to confirm the prompt.



Press and **hold** (idle status).

Please note:


You can also set the call volume, the ringer tones and the advisory tones via the menu (see page 14).

Activating/deactivating the ringer tone

You can deactivate the ringer tone on your handset before you answer a call or when the handset is in idle status; the ringer tone can be deactivated permanently or just for the current call. The ringer tone cannot be re-activated while an external call is in progress.

Deactivating the ringer tone permanently

Press and **hold** the star key.

The  icon appears in the display.

Re-activating the ringer tone

Press and **hold** the star key.

Deactivating the ringer tone for the current call

Press the display key.

 
Activating/deactivating the alert tone

In place of the ringer tone you can activate an alert tone. When you get a call, you will hear a **short tone** ("Beep") instead of the ringer tone.







Press and **hold** the star key and **within 3 seconds:**



Press the display key. A call will now be signalled by **one** short alert tone. You will now see  in the display.


My stuff

My stuff on the handset manages sounds, which you can use as ringer tones, and pictures (CLIP pictures and screensavers), which you can use as caller pictures or as screensavers. Precondition: Calling line identification (CLIP). My stuff can manage the following media types:



Icon	Sound	Format
	Ringer tones	Standard
	Monophonic	Standard
	Polyphonic	.mid
	Picture (CLIP picture, screen-saver)	BMP (128 x 100 or 128 x 160 pixels)

The icon is displayed in front of the name in My stuff. Various mono- and polyphonic sounds and pictures are preconfigured on your handset.


You can listen to the available sounds and view the pictures.

The pre-configured pictures are labelled with . You cannot rename or delete them.

Playing back sounds/viewing CLIP pictures


  → **Screensavers / Caller Pictures / Sounds** (select entry)



Press the display key. Sounds are played back or pictures are displayed. Press the  key to switch between entries.




Press the display key. Playback of the sound or display of the picture ends.

While you are playing back sounds, you can also interrupt playback with the  key.



Press and **hold** (idle status).

Handset settings

If you have saved a picture in an invalid data format, you will see an error message after selecting the entry. Cancel the operation with . Use **Delete** to delete the picture.

Sounds: setting the volume

During playback:

Volume Press the display key.



Set volume.


Save

Press the display key.

Renaming/deleting a picture

You have selected an entry.

Options Open menu.

If a picture cannot be deleted () , these options are not available. Depending on the situation, you can select the following functions:

Delete Entry

The selected entry is deleted.

Delete List

All entries in the list that can be deleted are deleted.

Rename

Change the name (max. 16 characters) and press **Save**. The entry is saved with the new name.

Activating/deactivating advisory tones

Your handset uses "advisory tones" to tell you about different activities and statuses. The following advisory tones can be activated and deactivated independently of each other:

- ◆ **Key click:** Every key press is confirmed.
- ◆ **Acknowledge tones:**
 - **Confirmation tone** (ascending tone sequence): at the end of an entry/setting and when an SMS or a new entry arrives in or call history

- **Error tone** (descending tone sequence): when you make an incorrect entry
- **Menu end tone:** when scrolling at the end of a menu

- ◆ **Battery tone:** The batteries need to be charged.

In idle status:

 → **Advisory Tones**

- ▶ Change multiple line input:

Key Tones:

Select **On** or **Off**.

Confirm.:

Select **On** or **Off**.

Battery:

Select **On**, **Off** or **In Call**. The battery warning tone is only activated/deactivated and only sounds during a call.

- ▶ Save changes: (page 56).

You cannot deactivate the confirmation tone for placing the handset in the base station.



Please note:

You can also set the call volume, the ringer tones and the advisory tones via the menu (see page 14).

Setting the alarm clock

Precondition: The date and time have already been set (page 9).

Activating/deactivating the alarm clock and setting the wake-up time

 → 

- ▶ Change multiple line input:

Activation:

Select **On** or **Off**.

Time:

Enter the wake-up time in 4-digit format.

Occurance:

Select **Daily** or **Monday-Friday**.


Volume:

Set the volume (1–6).

Melody:


Select melody.

- ▶ Save changes: (page 56).

The  icon is shown in the display.

A wake-up call with selected ringer tone (page 42) is signalled on the handset.

The wake-up call sounds for 60 seconds.

 is shown in the display. If no key is pressed, the wake-up call is repeated twice at five minute intervals and then turned off.

During a call, the wake-up call is signalled by a short tone.

Deactivating the wake-up call/ repeating after a pause (snooze mode)

Precondition: A wake-up call is sounding.

OFF Press the display key. The wake-up call is deactivated.

or

Snooze Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition the wake-up call is deactivated completely.

Setting an appointment (calendar)

You can have your handset remind you of up to 30 appointments (volume and melody, see page 42).

Saving an appointment

Precondition: The date and time have already been set (page 9).



Select the day in the graphical calendar and press **OK**.

(Days on which appointments

have already been saved are highlighted in black.)

The list of saved appointments for the day is displayed. If you have already saved 30 appointments, you must first delete an existing appointment.

<New Entry>

Select and press **OK**.

- ▶ Change multiple line input:

Appointment:

Select **On** or **Off**.

Date:

Enter day/month/year in 8-digit format.

Time:

Enter hours/minutes in 4-digits format.

Notes:

Enter text (max. of 16 characters). The text appears as the appointment name in the list and will be displayed on the screen during the appointment reminder. If you do not enter any text, only the date and time of the appointment are displayed.

Save Press the display key.



Press and **hold** (idle status).

The appointment is marked with in the appointments list. The list of appointments is sorted by date.

An appointment reminder is signalled with the selected ringer tone (page 42). The appointment reminder sounds for 60 seconds. The entered text, date and time are displayed.

During a call, the appointment reminder is signalled by a short tone.

Managing appointments



Select the day in the graphical calendar and press **OK**. (Days on which appointments have already been saved are highlighted in black in the calendar.)



Select appointment for the day.

Options

Open menu
Back with

You have the following options:

View Entry

View selected appointment, open the **Options** menu for editing, deleting and activating/ deactivating.

Edit Entry

Edit selected appointment.

Delete Entry

Delete selected appointment.

Activate / Deactivate

Activate/deactivate the selected appointment.

Delete List

Delete **all** appointments.

Deactivating or accepting an appointment reminder

Precondition: An appointment reminder is sounding.

OFF

Press the display key to deactivate the appointment reminder.

Or:

SMS

Press display key to accept the appointment reminder with an SMS.

Displaying missed appointments and anniversaries

Missed appointments/anniversaries (page 21) are displayed in the **Missed Alarms** list if:

- ◆ You do not accept an appointment/ anniversary.
- ◆ The appointment/anniversary was signalled during a phone call.
- ◆ The handset is deactivated at the time of the appointment/anniversary.
- ◆ Automatic redial was activated at the time of an appointment/anniversary (page 22).

The most recent entry is at the head of the list.

If there is a new appointment/anniversary in the list, the display shows **Appoint.** Pressing the display key will also open the **Missed Alarms** list.

To open the list from the menu:



Missed Alarms

Select appointment/anniversary.

Information about the appointment/anniversary is displayed. A missed appointment is displayed with the appointment name and a missed anniversary is displayed with the last name and first name. The date and time will also be given.

Delete

Delete appointment

SMS

Write an SMS.



Press and **hold** (idle status).

If 10 entries are already stored in the list, the next appointment reminder will delete the oldest entry.

Setting your own area code

In order to transfer phone numbers (for example vCard), it is essential that your area code (international and local area code) is saved on the phone.


Some of these numbers are already pre-set.


 →  → **Handset** → **Area Codes**

Check that the (pre)set area code is correct.


► Change multiple line input:

 Select/change input field.



 Navigate in the input field.

 If necessary, delete number: press the display key.

 Enter number.

 Press the display key.


Example:

Area Codes	
International code:	00 - 35
Local area code:	0 - [814]
	

Restoring the handset to the factory settings

You can reset any individual settings and changes that you have made. Entries in the directory, the call-by-call list, the call history, the SMS lists and the handset's registration to the base station as well as the content of My stuff are retained.

 →  → **Handset** → **Reset Handset**

 Press the display key.

 Press and **hold** (idle status).

Base station settings

The base station settings are carried out using a registered Gigaset S67H handset.


Protecting against unauthorised access


Protect the system settings of the base station with a PIN known only by you. The system PIN must be entered when, for example, registering/deregistering a handset to/from the base station or when restoring the default settings.



Changing the system PIN

You can change the 4-digit system PIN set on the base station (default setting: 0000) to a 4-digit PIN known only by you.

 →  → **Base** → **System PIN**

 Enter the current system PIN and press **OK**.

 Enter new system PIN. For security the PIN is shown as four stars (****).

  Jump to the next line, re-enter new system PIN and press **OK**.

 Press and **hold** (idle status).

Resetting the system PIN

If you have forgotten your system PIN you can reset the base station to the original code **0000**:

Disconnect the power cord from the base station. Hold down the registration/paging key on the base station while reconnecting the power cable to the base station. Release the key after a while.


The base has now been reset and the system PIN **0000** set.

Please note:

All handsets are deregistered and must be re-registered.

Activating/deactivating music on hold



 →  → Base → Music on hold

Press **OK** to activate or deactivate music on hold ( = on).


Repeater support

With a repeater you can increase the range and reception strength of your base station. You will need to activate repeater mode. This will terminate any calls that are in progress at the time.

Precondition: A repeater is registered. Eco mode is disabled.

 →  → Base → Add. Features
→ Repeater Mode

Yes Press the display key.

When repeater mode is active, the menu item is marked with .

Please note:


Repeater support and eco mode (see page 12) rule each other out, i.e. both functions cannot be used at the same time.

Restoring the base station to the factory settings

When the settings are restored

- ◆ eco mode is disabled,
- ◆ handsets are still registered,
- ◆ the system PIN is not reset,
- ◆ the SMS information services are not reset.

 →  → Base → Base Reset

 Enter the system PIN and press **OK**.

Yes Press the display key.

Cancel the restoring process by pressing

 or the display key **No**.


 Press and **hold** (idle status)

Connecting the base station to PABX



The following settings are only necessary when your PABX requires them; see the PABX user guide.

You cannot send or receive SMS messages on PABXs that do not support Calling Line Identification.


Recall

The current setting is indicated by .

Setting recall



 →  → **Base** → **Add. Features**
→ **Recall**


 Select flashing time ( = on) and press **OK**.

 Press and **hold** (idle status).

Saving an access code (outside line code)

Precondition: You may have to enter an access code for external calls in your PABX, e.g. "0".


 →  → **Base** → **Add. Features**
→ **Access Code**

 Enter or change access code, max. 3 digits.

▶ Save changes: (page 56).


If an access code has been saved,


- ◆ The access code is prefixed automatically when you select from the following lists: numbers of the SMS centres, call history or answer machine list.
- ◆ The access code must be entered when dialling manually and when manually entering directory, emergency/quick dial numbers and SMS centre numbers.

- ◆ If you copy the recipient's number from the directory when sending an SMS, you have to delete the access code.
- ◆ An existing access code is deleted using .

Setting pauses

Changing pause after line seizure

You can change the length of pause that is inserted between pressing the talk key  and sending the number.

 Open menu.


Press keys.



Enter digit for the pause length (**1** = 1 sec.; **2** = 3 sec.; **3** = 7 sec.) and press **OK**.

Changing the pause after the recall key

You can change the length of the pause if your PABX requires this (refer to the user guide for your PABX).

 Open menu.

Press keys.



Enter a digit for the length of the pause (**1** = 800 ms; **2** = 1600 ms; **3** = 3200 ms) and press **OK**.

Changing a dialling pause (pause after access code)

Precondition: You have saved an access code (page 49).




Open menu.



Press keys.



Enter a digit for the length of the pause (1 = 1 sec.; 2 = 2 sec.; 3 = 3 sec.; 4 = 6 sec.) and press **OK**.

To insert a dialling pause: press  for 2 seconds. A P appears in the display.

Switching temporarily to touch tone dialling (DTMF)

If your PABX still operates with pulse dialling (DP), but you need touch tone dialling (DTMF) for a connection (e.g. to listen to the network mailbox) you must switch to touch tone dialling for the call.

Precondition: You are conducting a call or have already dialled an external number.



Press the star key.

After the call is ended, pulse dialling is automatically activated again.

Appendix

Care

- ▶ Wipe the base station, charging cradle and the handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

Never use a dry cloth. This can cause a build up of static.

Contact with liquid

If the handset has come into contact with liquid:


1. **Turn off the handset and remove the batteries immediately.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)**.
4. **Do not turn on the handset again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Questions and answers

 
If you have any questions about using your phone, visit us at www.siemens.com/gigasetcustomercare at any time. The table below contains a list of common problems and possible solutions.

The display is blank.

1. The handset is not turned on.
 - ▶ Press **and hold** the end call key .
2. The battery is almost flat.
 - ▶ Charge or replace the batteries (page 7).

The keys of a handset do not respond when pressed.

The keypad lock is activated.

- ▶ Press and **hold** the hash key  (page 10).

"Base station x" flashes on the display.

1. The handset is outside the range of the base station.
 - ▶ Move the handset closer to the base station.
2. The base station's range is reduced because eco mode is activated.
 - ▶ Deactivate eco mode (page 12) or reduce the distance between the handset and the base station.
3. The handset has been deregistered.
 - ▶ Register the handset (page 35).
4. The base station is not turned on.
 - ▶ Check the base station's mains adapter (page 7).

Base Search flashes in the display.

The handset is set to **Best Base** and no base station is turned on or within range.

- ▶ Move the handset closer to the base station.
- ▶ Check the base station's mains adapter (page 7).

Handset does not ring.

1. The ringer tone is deactivated.
 - ▶ Activate the ringer tone (page 43).
2. Call diversion set to **All Calls**.
 - ▶ Deactivate call diversion (page 17).

You cannot hear a ringer/dialling tone from the fixed network.

The phone cord supplied has not been used or has been replaced by a new cord with the wrong jack connections.

- ▶ Please always use the phone cord supplied or ensure that the jack connections are correct when purchasing from a retailer (page 7).

Error tone sounds after system PIN prompt.

You have entered the wrong system PIN.

- ▶ Reset the system PIN to 0000 (page 47).


Forgetting the system PIN.

- ▶ Reset the system PIN to 0000 (page 47).

Call charges are not displayed.

1. Your network provider does not support this feature.
2. There are no metering pulses.
 - ▶ Ask your network provider to transmit the metering pulses.

The other party cannot hear you.

You have pressed the  (INT) key. The handset is "muted".

- ▶ Activate the microphone again (page 16).

The number of the caller is not displayed despite CLIP.

Calling Line Identification is not enabled.

- ▶ **The caller** should ask the network provider to release Calling Line Identification (CLI).

You hear an error tone when keying an input (a descending tone sequence).

Action has failed/invalid input.

- ▶ Repeat the operation.
Watch the display and refer to the user guide if necessary.

You cannot listen to messages on the network mailbox.

Your phone system is set for pulse dialling.

- ▶ Set your phone system to touch tone dialling.

Service (Customer Care)

You can get assistance easily when you have technical questions or questions about how to use your device by using our online support service on the Internet at:

<http://www.siemens.com/gigasetcustomercare>

This site can be accessed at any time wherever you are. It will give you 24/7 support for all our products. It also a list of FAQs and answers plus user guides for you to download. You will also find frequently asked questions and answers in the **Questions and Answers** section of this user guide in the appendix.

If the device needs to be repaired, please contact one of our Customer Care Centers:

Abu Dhabi.....	97 12 62 23 800	Malaysia.....	603 77124304
Argentina.....	0800-888-9878	Malta.....	+353 21 4940 632
Australia.....	1300 665 366	Mexico.....	01 80 07 11 00 03
Austria .05 17 07 50 04 (0,065 Euro/Min.)		Netherlands	
Bahrain.....	97 31 73 11 173	0900-3333102 (0,25 Euro/min.)
Belgium.....	0 78 15 66 79	New Zealand.....	08 00 27 43 63
Bosnia Herzegovina.....	033 276 649	Norway.....	22 70 84 00
Brazil.....		Oman.....	96 82 47 09 281
Grande Capitais e Regiões Metropolitanas:		Poland.....	0 801 140 160
.....	4003 3020	Portugal.....	808781223
.....	(US\$ 0,59)	Romania.....	02 12 04 60 00
Demais localidades:.....	0800 707 1248	Russia.....	8 (495) 228 1312
.....	(US\$ 0,59)	Serbia.....	01 13 07 00 80
Bulgaria.....	02 873 94 88	Singapore.....	62 27 11 18
Canada.....	701-355-3984	Slovak Republic	
China.....	0 21 400 670 6007	02 59 68 22 66
Croatia.....	016 10 53 81 (0,23 Kun)	Slovenija.....	0 14 74 63 36 (6,30 Tolar)
Czech Republic.....	233 032 727	South Africa.....	08 60 10 11 57
Denmark.....	35 25 86 00	Spain.....	902 103935
Dubai.....	97 14 39 69 944	Sweden.....	08 750 99 11
Egypt.....	202 7623441	Switzerland	
Finland.....	09 23 11 34 25	0848 212 000 (0,08 SFr./Min.)
France.....	01 56 38 42 00	Taiwan.....	02 23 96 10 06
Germany.01805 333 222 (0,14 Euro/Min.)		Thailand.....	02 722 1118
Greece.....	801 11 11 11 6 (0,026 Euro)	Turkey.....	0 21 64 59 98 59
Hungary.....	06 14 71 24 44 (27 Ft)	Ukraine.....	+380-44-451-71-72
Ireland.....	18 50 77 72 77	United Arab Emirates.....	0 43 66 03 86
Italy.....	199 15 11 15	United Kingdom.....	0 84 53 67 08 12
Kuwait.....	96 52 44 4200	USA.....	1-866 247-8758
Latvia.....	7 50 11 18	(toll free)
Luxembourg.....	40 66 61 56 40		

Please have your record of purchase ready when calling.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

Authorisation

This device is intended for analogue phone lines in your network.

Country-specific requirements have been taken into consideration.

We, Siemens Home and Office Communication Devices GmbH & Co. KG, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address:

<http://www.siemens.com/gigasetdocs>.



Specifications

Recommended batteries

Technology: Nickel-metal-hydride (NiMH)
 Size: AAA (Micro, HR03)
 Voltage: 1.2 V
 Capacity: 600 – 1200 mAh

We recommend the following battery types, because these are the only ones that guarantee the specified operating times, full functionality and long service life:

- ◆ Sanyo NiMH 800
- ◆ GP 850 mAh
- ◆ Yuasa Technologies AAA 800

The device is supplied with two recommended batteries.

Handset operating times/charging times

The operating time of your Gigaset depends on the age of the batteries and the way they are used. (All times are maximum possible times and apply only when the display backlight is deactivated.)

	Capacity (mAh) approx.			
	600	800	1000	1200
Standby time (hours)	130	180	220	265
Talktime (hours)	7	10	12	14
Operating time for 1.5 hour call each day (hours)	70	90	115	135
Charging time, charging cradle (hours)	6	9	11	13
Charging time, base station (hours)	5	7	8	10

At the time of going to print, batteries up to 900 mAh were available and had been tested in the system. Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is regularly updated:

www.siemens.com/gigasetcustomercare

Base station power consumption

In standby mode: approx. 1.2 watt

During a call: approx. 1 watt

General specifications



DECT standard	is supported
GAP standard	is supported
No. of channels	60 duplex channels
Radio frequency range	1880–1900 MHz
Duplex method	Time multiplex, 10 ms frame length
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel
Range	up to 300 m outdoors, up to 50 m indoors
Base station power supply	230 V ~/50 Hz
Environmental conditions in operation	+5 °C to +45 °C; 20% to 75% humidity





Notes on the user guide

This section explains the meaning of certain typographical conventions that are used in this user guide.

Example of a menu input

The steps you need to perform are shown in abbreviated form in the user guide. This is illustrated below using the example of "Setting the contrast for the display". The things you have to do are explained in the boxes.



 →  → Display

- ▶ With the handset in idle status, press on the **right** of the control key () to open the main menu.
- ▶ With the / control key, select the  icon.



Settings appears in the display header.


- ▶ Press the display key **OK** to confirm the **Settings** function.

The **Settings** submenu is displayed.


- ▶ Press on the bottom of control key () repeatedly until the **Display** menu function is selected.
- ▶ Press  or press the display key **OK** to confirm the selection.

Contrast Select and press **OK**.

- ▶ Press on the bottom of control key () repeatedly until the **Contrast** menu function is selected.
- ▶ Press  or press the display key **OK** to confirm the selection.

 Select contrast and press the display key **Save**.

- ▶ Press on the right or left of the control key to set the contrast.
- ▶ Press the display key **Save** to confirm the selection.

 Press and **hold** (idle status).

- ▶ Press and hold the end call key until the handset returns to idle status.

Example of multiple line input

In many situations you can change settings or enter data in several lines of a display.

In this user guide icons are used to guide you step by step through multiple line input. This is illustrated below using the example of "Setting the date and time". The things you have to do are explained in the boxes.

You will see the following display (example):



Date:

Enter the day, month and year in 8-digit format.

The second line is marked with [] to show it is active.

- ▶ Enter the date using the digit keys.

Time:

Enter hours/minutes in 4-digit format.

- ▶ Press the [] key.

The fourth line is marked with [] to show it is active.

- ▶ Enter the date using the digit keys.

- ▶ Save the changes.

- ▶ Press the display key **Save**.
- ▶ Then press and **hold** the [] key.

The handset switches to idle status.

Writing and editing text

The following rules apply when writing a text:

- ◆ Control the cursor with [] [] [] [] .
- ◆ Characters are inserted on the left of the cursor.
- ◆ Press the star key [* Δ] to show the table of special characters. Select the required character, press the display key **Insert** to insert the character at the cursor position.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

Writing an SMS/name (without predictive text)

Press the relevant key several times to enter letters/characters.

Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1. sp	[] ¹⁾	[] ²⁾	1							
2. abc	a	b	c	2	ä	á	à	â	ã	ç
3. def	d	e	f	3	ë	é	è	ê		
4. ghi	g	h	i	4	ï	í	ì	î		
5. jkl	j	k	l	5						
6. mno	m	n	o	6	ö	ñ	ó	ò	ô	õ
7. pqr	p	q	r	s	7	ß				
8. tuv	t	u	v	8	ü	ú	ù	û		
9. wxyz	w	x	y	z	9	ÿ	ý	æ	ø	å
0. +	.	,	?	!	0					

- 1) Space
- 2) Line break

When you press and **hold** a key, the characters of that key appear in the display and are highlighted one after the other. When you release the key, the highlighted character is inserted into the input field.

Setting upper/lower case or digits

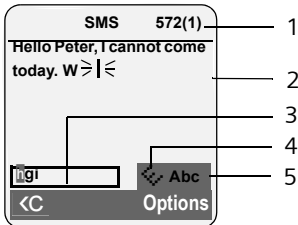
Press the hash key **[#↔]** **briefly** to switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc" (upper case: 1st letter upper case, all others lower case). Press the hash key **[#↔]** **before** entering the letter.

You can see in the display whether upper case, lower case or digits is selected.

Writing SMS (with predictive text)

EATONI predictive text helps you when you are writing SMS messages.

Each key between **[0+]** and **[9wxyz]** is assigned several letters and characters. These appear in a selection line immediately under the text panel (over the display keys) as soon as you press a key. The letter you are most likely looking for is shown in reversed highlights and is at the beginning of the selection line. It is copied into the text panel.



- 1 Remaining number of characters, in brackets: SMS part 1-n
- 2 SMS text
- 3 Selection line
- 4 EATONI is activated
- 5 Upper/lower case or digits

If this letter is the one you want, confirm it by pressing the next key. If it does not match the one you want, press the hash key **[#↔]** **briefly** until the letter you are looking for is reverse highlighted in the display line and then transferred to the text field.

If you press and **hold** the hash key **[#↔]** you switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc".

Deactivating/activating predictive text

Precondition: You are writing an SMS.

Options Press the display key.

Predictive Text

Select and press **OK** (**[✓]** = on).



Press the end call key **briefly** to return to the text field. Enter the text.

Accessories

Gigaset Handsets

Upgrade your Gigaset to a cordless PABX:

Gigaset handset S67H

- ◆ Illuminated graphical colour display (65 k colours)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ringer tones
- ◆ Directory for around 250 entries
- ◆ Picture CLIP
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ Headset socket
- ◆ Room monitor

www.siemens.com/gigasetS67H



Gigaset Handset SL37H

- ◆ Illuminated graphical colour display (65 k colours)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ringer tones
- ◆ Directory for around 250 entries
- ◆ Picture CLIP
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ PC interface, e.g. for managing directory entries, ringer tones and screensavers
- ◆ Headset socket
- ◆ Bluetooth
- ◆ Room monitor
- ◆ Walky-talky function

www.siemens.com/gigasetSL37H



Gigaset Handset SL56

- ◆ Illuminated graphical colour display (65 k colours)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ringer tones
- ◆ Directory for around 250 entries
- ◆ Picture CLIP
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ Voice dialling
- ◆ PC interface, e.g. for managing directory entries, ringer tones and screensavers
- ◆ Headset socket
- ◆ Bluetooth

www.siemens.com/gigasetSL56

**Gigaset Handset S45**

- ◆ Illuminated colour display (4096 colours)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ringer tones
- ◆ Directory for around 150 entries
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ Headset socket
- ◆ Room monitor

www.siemens.com/gigasetS45

**Gigaset Handset E45**

- ◆ Dust and splashproof casing
- ◆ Illuminated colour display (4096 colours)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ringer tones
- ◆ Directory for around 150 entries
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ Headset socket
- ◆ Room monitor

www.siemens.com/gigasetE45



Accessories

Gigaset repeater

The Gigaset repeater can be used to increase the reception range of your Gigaset handset to the base station.

www.siemens.com/gigasetrepeater



Gigaset HC450 – door intercom for cordless phones

- ◆ Use the intercom from your cordless phone – no need for a fixed home phone
- ◆ Intuitive user functions using the softkeys (open door, switch on entry light)
- ◆ Simple to configure using the handset menu
- ◆ Divert to outside phone numbers (intercom feature)
- ◆ Simple to install and register with the Gigaset system
- ◆ Replaces existing call button – no further cable is needed
- ◆ Supports the existing doorbell and standard door opener
- ◆ Configuration options for the second ringer key (separate intercom call, activating interior lighting, or function such as first ringer key)

www.siemens.com/GigasetHC450



All accessories and batteries are available from your phone retailer.



Only use original accessories. This will avoid possible health risks and damage to property, and also ensure that all the relevant regulations are complied with.

Index

A

- Access code
 - for a PABX 49
- Access protection 47
- Accessories 58
- Acknowledge tones 44
- Activating
 - advisory tones 44
 - appointment 45
 - call acceptance 41
 - handset 10
 - internal listening in 37
 - keypad lock 10
 - room monitor 39
- Advisory tones 44
- Alarm clock 44
- Alert tone 43
- Anniversary 21
 - deactivating 22
 - missed 22, 46
 - saving in directory 21
- Appointment 45, 46
- Appointment/anniversary
 - display missed 46
- Appointments
 - activating/deactivating 46
 - deleting 46
 - managing 46
- Area code
 - setting own dialling code 47
- Assigning a key 39
- Assigning numerical keys 39
- Authorisation 54
- Automatic
 - call acceptance 15, 41
 - last number redial 22
 - network provider preselection 24

B

- Base station
 - changing 36
 - connecting 7
 - connecting and installing 6
 - connecting to PABX 49
 - range 7
 - restoring to factory settings 48

- setting 47
 - system PIN 47
- Battery
 - charging 1, 9
 - display 1, 9
 - fitting 7
 - icon 1, 9
 - recommended batteries 54
 - tone 44
- Beep, see Advisory tones
- Best base station 36
- Birthday, see Anniversary
- Bluetooth connection
 - setting own area code 47

C

- Calendar 45
- Call
 - accepting 15
 - disconnecting (toggling) 17
 - ending 15
 - external 15
 - internal 36
 - party listening in 37
 - transferring (connect) 36, 38
- Call acceptance 41
- Call diversion 17
- Call duration 15
- Call history 23
- Call waiting
 - accepting/rejecting 17
 - activating/deactivating 17
 - internal call 37
- Call-by-call 19
 - numbers 19, 24
- Call-by-call list
 - key 1
- Calling Line Identification 15
- Care of the telephone 51
- Changing
 - destination number 39
 - dialling mode 49
 - display language 40
 - earpiece volume 42
 - handsfree volume 42
 - internal number of a handset 38
 - name of a handset 38
 - pause time 49
 - ringer tone 42
 - system PIN 47

Index

Character set 27, 29
Charge status display 1
CLI, CLIP 15
CLIP picture 15, 19, 43
Conference 17
Configuring the network mailbox 34
Confirmation tone 44
Connecting, base station to PABX 49
Consultation 17
Consultation call (internal) 37
Control key 1, 10
Correcting incorrect entries 12
Customer Care 53

D

Deactivating
 advisory tones 44
 appointment 45
 appointment reminder 46
 call acceptance 41
 handset 10
 internal listening in 37
 keypad lock 10
 preselection 25
 room monitor 39
Delete key 10
Deleting
 characters 12
Deregistering (handset) 36
Destination number (room monitor) . . 39
Dialling
 call-by-call list 20
 directory 20
 quick dial 39
 with quick dial 20
Dialling pause 50
 entering 1
Directory 19
 copying number from text 21
 managing entries 20
 opening 10
 order of entries 20
 saving anniversary 21
 saving entry 19
 saving the sender's number
 (SMS) 29
 sending entry/list to handset 21
 using to enter numbers 21
Disconnecting waiting caller
 (toggle) 17

Display
 backlight 41
 changing display language 40
 contrast 40
 in idle status 11
 memory (directory/call-by-call) . . . 20
 missed appointments/
 anniversaries 46
 network mailbox report 34
 number (CLI/CLIP) 15
 screensaver 41
 setting 40
 wrong language 40
Display keys 1, 10
 assigning 39
Draft message list (SMS) 27

E

Earpiece mode 16
Earpiece volume 42
EATONI (predictive text) 57
Eco mode 12
E-mail address 28
 copying from the directory 21
End call key 1, 15
Ending, call 15
Ending, see deactivate
Entry
 saving (network mailbox) 34
 saving, changing (preselection) . . . 25
 selecting (menu) 55
 selecting from directory 20
Error tone 44
Example
 menu input 55
 multiple line input 56

F

Fast access
 network mailbox 34

G

Group call 36

H

Handset
 activating/deactivating 10
 advisory tones 44
 changing internal number 38
 changing name 38
 changing the number 38

- changing to a different base station 36
- changing to best reception 36
- contact with liquid 51
- deregistering 35, 36
- display backlight 41
- display language 40
- earpiece volume 42
- handsfree volume 42
- idle status 11
- list 10
- locating 36
- muting 16
- paging 36
- registering 35
- registering to a different base station 36
- restoring to factory settings 47
- screensaver 41
- setting 39
- setting up 7
- signal strength 7
- transferring a call 36
- using room monitor 38
- using several 35
- Handset operating time
 - in room monitor mode 38
- Handsfree key 1
- Handsfree talking 16
- Hash key 1, 10
- Headset socket 9
- Hearing aids 4
- Hold music 16, 48
 - setting 48
- I**
- Icon
 - alarm clock 45
 - battery 9
 - display 10
 - for new messages 23
 - keypad lock 10
 - new SMS 28
 - ringer tone 43
- Idle status (display) 11
- Idle status, returning to 11
- Incoming message list (SMS) 28
- Incorrect input (correction) 12
- Information services (SMS) 32
- Input language (SMS) 27
- Installation, base station 6
- Internal
 - consulting 37
 - listening in 37
 - making calls 36
- Internal call 36
 - call waiting 37
- K**
- Key 1 (fast access) 1
- Keypad lock 10
- Keys
 - call-by-call list 1
 - control key 1, 10
 - delete key 10
 - display keys 1, 10
 - end call key 1, 15
 - fast access 1
 - handsfree key 1
 - hash key 1, 10
 - message key 1
 - on/off key 1
 - quick dial 20
 - recall key 1
 - star key 1
 - talk key 1, 15
- L**
- Language, display 40
- Last number redial 22
- Linking, see SMS
- Liquid 51
- List 19
 - call history 23
 - call-by-call list 19
 - handsets 10
 - missed calls 24
 - network mailbox 23
 - SMS draft message list 27
 - SMS incoming message list 28
 - SMS list 23
- Listening in to call 37
- Locating, handset 36
- Lock
 - activating/deactivating keypad protection 10

M

Mailbox ID, see SMS
 Mailboxes, see SMS
 Mains adapter 4
 Making calls
 accepting a call 15
 external 15
 internal 36
 Making cost-effective calls 24
 Manual last number redial 22
 Medical appliances 4
 Memory
 directory/call-by-call 20
 Menu
 end tone 44
 menu guidance 11
 menu input 55
 opening 10
 overview 13
 Message key
 open list 28
 opening lists 23
 Messages
 key 1
 Microphone 1
 Missed
 anniversary 46
 appointment 46
 calls 24
 Multiple line input 56
 Muting
 handset 16
 My stuff 43

N

Name
 of a handset 38
 Network provider (numbers list) 19
 Network provider preselection,
 automatic 24
 Network services 17
 Notification by SMS 30
 Number
 as destination for room monitor 39
 copying from an SMS text 29
 copying from directory 21
 copying to directory 21
 displaying caller's number (CLIP) 15
 entering network mailbox number 34
 entering with directory 21

 saving in the directory 19
 Numbers list
 network provider 19

O

On/Off key 1
 Order in directory 20
 Outside line code 49

P

PABX
 connecting base station 49
 pauses 49
 saving access code 49
 setting dialling mode 49
 setting recall 49
 SMS 32
 switch to touch tone dialling 50
 Pack contents 6
 Paging 36
 Paging key 1
 Pause 49, 50
 Phone jack assignment 7
 Picture
 deleting 44
 renaming 44
 Picture CLIP 19, 43
 PIN change
 system PIN 47
 Power consumption 54
 Predictive text 57
 Preselection 24
 deactivating 25
 Protecting the phone against
 access 47

Q

Questions and answers 51
 Quick dial 19, 39

R

Range 7
 Recall 49
 Recall key 1
 pause after 49
 Reception booster, see Repeater
 Registering (handset) 35
 Registration key 1
 Reminder call 22
 Repeater 48
 Ringback 17

- Ringer tone
 - changing 42
 - setting volume 42
- Room monitor 38
- S**
- Saving (access code) 49
- Screensaver 41
- Searching in directory 20
- Sending
 - directory entry to handset 21
- Sensitivity (room monitor) 39
- Service 53
- Setting
 - date 9
 - screensaver 41
 - time 9
- Setting up
 - handset 7
- Shortcut 13
- Signal strength 7
- SMS 26
 - active send service centre 26
 - changing mailbox 31
 - deleting 27
 - draft message list 27
 - forwarding 29
 - incoming message list 28
 - information services 32
 - input language 27
 - linked 26
 - mailbox ID 30
 - mailboxes 30
 - notification by SMS 30
 - notification number 30
 - notification type 30
 - PIN protection 30
 - reading 27
 - receiving 28
 - replying to and forwarding 29
 - rules 26
 - saving number 29
 - self help with error messages 33
 - sending to a personal mailbox 31
 - sending to an e-mail address 28
 - status report 27
 - to a PABX 32
 - troubleshooting 33
 - writing 26, 56
- SMS centre
 - changing number 31
 - setting 31
- SMS list 23
- Snooze mode 45
- Sound, see Ringer tone
- Special functions 49
- Specifications 54
- Star key 1
- System settings 47
- T**
- Talk key 1, 15
- Text message, see SMS
- Toggleing 17
- Touch tone dialling 50
- Troubleshooting 51
- Troubleshooting (SMS) 33
- U**
- Unknown 15
- Unknown caller 15
- V**
- Viewing the network mailbox report 34
- VIP (directory entry) 20
- Volume
 - earpiece 42
 - earpiece volume 42
 - handset handsfree volume 42
 - loudspeaker 42
 - ringer tone 42
 - setting 42
- W**
- Warning tone, see Advisory tones
- Writing (SMS) 26
- Writing, editing text 56