



Technical Data

45 Amp Switches

Brief product description:

The subtle design will blend with any décor - suitable for domestic or commercial installations.

Features:

- Stylish modern profile
- Covers to conceal fixing screws
- Colour coded terminals for easy installation
- 2 earth terminals
- Flush Neon Indicator on 870, 872 & 874
- Supplied with spacer adaptor plate

Product Images



870



871




874



875



872

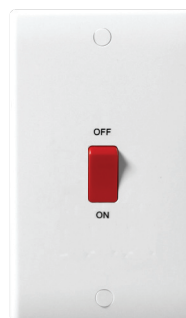


873

Technical Specifications

Standard(s)	BS 4177 (870, 871 products)
	BS EN 60669 (872, 873, 874, 875 products)
Rating	45 Amp 250V~
Switch Type	Double pole
Contact Gap	3.0mm minimum
Terminal Capacity - L & N	4 x 4.0mm ² 3 x 6.0mm ² 1 x 16.0mm ²
RoHS Directive	No
WEEE Directive	No
Mounting Box Depth(Min)	47mm
Fixing Centres	60.3mm (874, 875 products)
	120.6mm (870, 871 products)
	120.6mm vertical (872, 873 products)
Size	146.5mm x 86mm x 31.8mm (870, 871 products)
	146.5mm x 86mm x 29.3mm (872, 873 products)
	86mm x 86mm x 29.3mm (874, 875 products)

45 Amp Switches

Line Diagrams

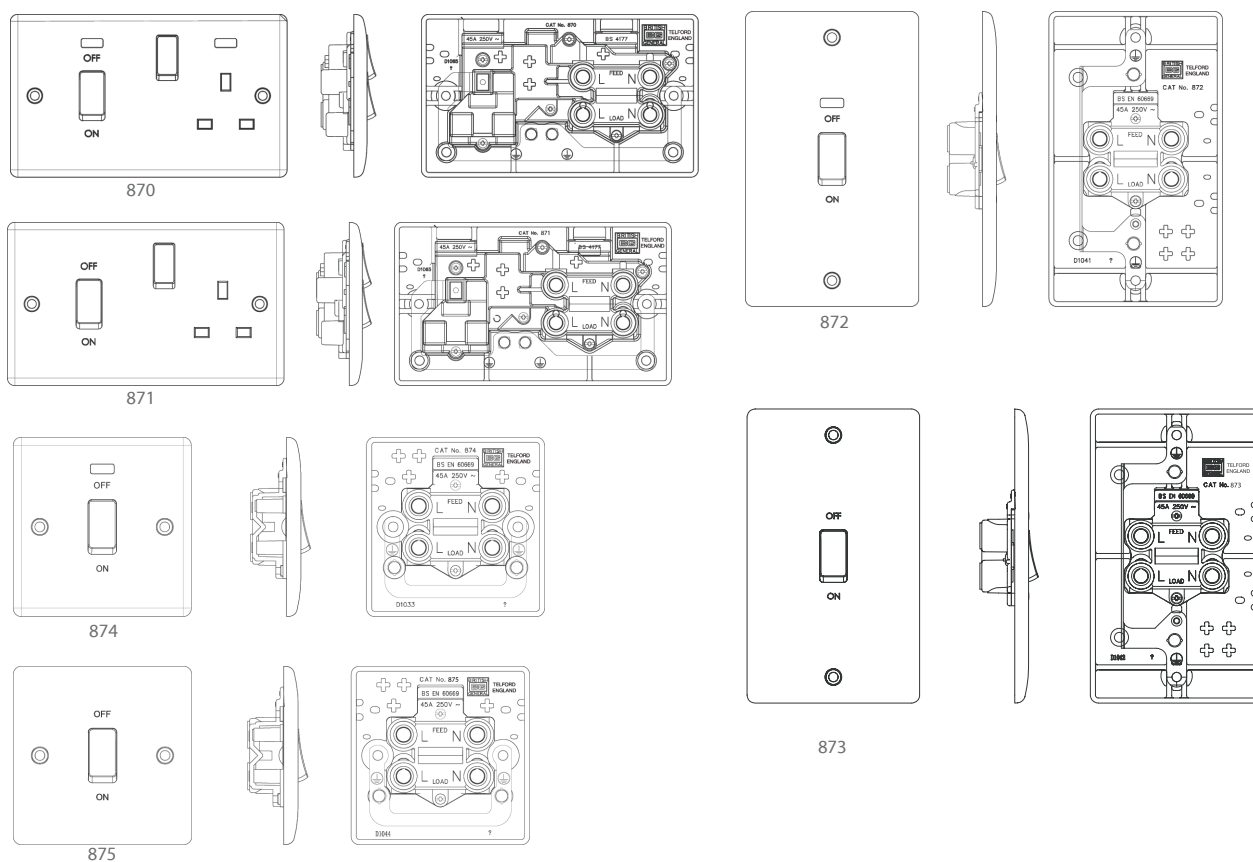

Packaging Information

Cat No.	Description	Packaging Type			Pack Quantity			Barcode		
		Product	Inner Box	Outer Box	Each	Inner Box	Outer Box	Individual	Inner Box	Outer Box
870	45A CCU + Neon	Nexus PolyBag	Nexus Inner	Nexus Outer	1	5	50	5050765001755		
871	45A CC	Nexus PolyBag	Nexus Inner	Nexus Outer	1	5	50	5050765001786		
872	45A Sw + Neon	Nexus PolyBag	Nexus Inner	Nexus Outer	1	5	50	5050765001816		
873	45A Sw	Nexus PolyBag	Nexus Inner	Nexus Outer	1	5	50	5050765001847		
874	45A Sw + Neon	Nexus PolyBag	Nexus Inner	Nexus Outer	1	10	100	5050765001878		
875	45A Sw	Nexus PolyBag	Nexus Inner	Nexus Outer	1	10	100	5050765001908		

Weights & Dimensions

Cat No.	Description	Dimension (W x L x H) cm			Weight (g)			CMB (m³)	
		Product	Inner Box	Outer Box	Each	Inner Box	Outer Box	Outer Box	
870	45A CCU + Neon	9.2 x 15.2 x 3.53	14.5 x 15 x 9.2	30 x 49.5 x 16	119.5	1102	11500	xxxxxxxx	
871	45A CC	9.2 x 15.2 x 3.53	14.5 x 15 x 9.2	30 x 49.5 x 16	129	1406	11200	xxxxxxxx	
872	45A Sw + Neon	9.2 x 3.53 x 15.2	15 x 18 x 9.2	39 x 49.5 x 16	134	1450	11300	xxxxxxxx	
873	45A Sw	9.2 x 3.53 x 15.2	15 x 18 x 9.2	39 x 49.5 x 16	144	1500	11400	xxxxxxxx	
874	45A Sw + Neon	9.2 x 9.2 x 3.53	15 x 18 x 9.2	31 x 49.5 x 16	157	1324	13900	xxxxxxxx	
875	45A Sw	9.2 x 9.2 x 3.53	15 x 18 x 9.2	31 x 49.5 x 16	112	1324	13800	xxxxxxxx	

45 Amp Switches

Installation Information

Safety Warning

Before use please read carefully and use in accordance with these safety wiring instructions.

Before commencing any electrical work ensure the supply **is switched off at the mains**. Either by switching off the consumer unit or by removing the appropriate fuse.

Wiring should be in accordance with the latest edition of the IEE regulations (BS 7671).

Wire Identification – Twin & Earth Cable

EARTH = Green/Yellow Slewing

NEUTRAL = Black (pre Apr 04) / Blue (after Apr 04)

LIVE = Red (pre Apr 04) / Brown (after Apr 04)



Technical Helpline: 0845 194 7584

If in doubt consult a competent electrician.

The ends of the individual conductors should have the insulation removed by approx. 12mm. Any bare earth conductors should be sleeved to within 12mm of the ends. (These details are for general information only and conductor lengths may need to be trimmed in certain installations).

General Installation Instructions

- 1) If using the new product to replace an old one, note the cable connections and wire up new product in the same way as the old one, with Earthing as stated in these instructions.
- 2) Ensure the mounting box (metal or patress) for either flush or surface mounting is the appropriate size for the product.
- 3) Route the cable through the most suitable entry point of the mounting box. If a metal box is used, a protective cable grommet should be used.
- 4) Cables should be prepared so a sufficient conductor length reaches the terminals. Strip the ends of the individual conductors so that an adequate length enters the terminals.
- 5) Carefully arrange the wiring to lie along the edges of the product or box, keeping the central area clear.
- 6) To assist with the correct installation please consult the appropriate wiring diagram on this leaflet.
- 7) When connecting the new accessory ensure that only the bare end of the wire enters the terminal, and no bare wires are visible.

Always tighten the terminal screws securely, but do not overtighten.

An earth connection should always be made between the mounting box earth terminal, and the accessory earth terminal, where fitted. If this earth wire is bare, it is essential that it is sheathed with a length of green/yellow sleeving.

8) Carefully position the accessory into the wall box, ensuring that no wires are trapped between the plate and the wall. Do not overtighten the screws. (Fit screw covers + clip-on)

9) Once work has been completed correctly, replace the fuse for the circuit, switch the power back on, and test.

The product is now ready for use.


* Note - If your installation uses a four lug metal mounting box, remove the top and bottom lugs or bend fully back.

45 Amp Double Pole Cooker Control Unit

This product has no cable entry, and should only be used for "hard" wired installations. Connect the cables as shown in the diagram.

NOTE

This product must be connected to a separate 45 Amp protected radial circuit.

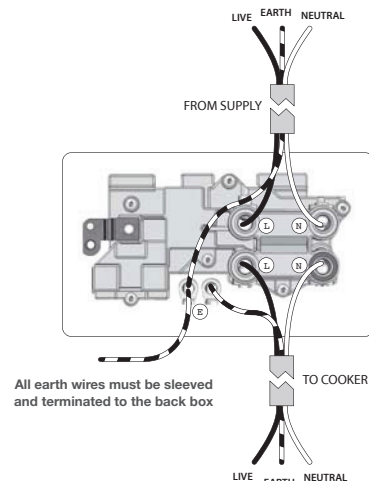


45 Amp Double Pole Switch - Double Plate

This product has no cable entry, and should only be used for "hard" wired installations. Connect the cables as shown in the diagram.

NOTE

This product must be connected to a separate 45 Amp protected radial circuit.

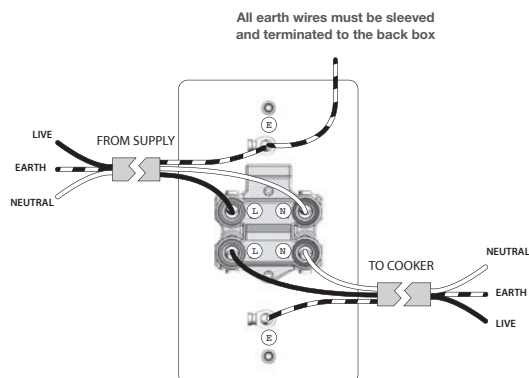


45 Amp Double Pole Switch - Single Plate

This product has no cable entry, and should only be used for "hard" wired installations. Connect the cables as shown in the diagram.

NOTE

This product must be connected to a separate 45 Amp protected radial circuit.

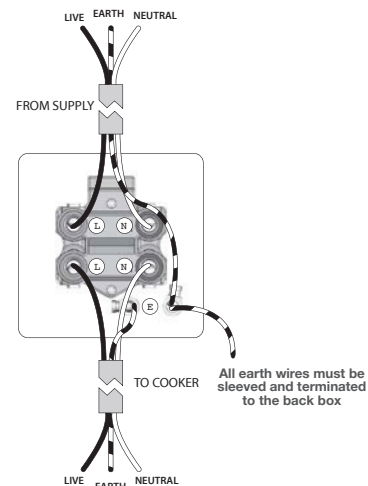



Technical Data

45 Amp Double Pole Switches


Brief product description:

A standard range of white moulded wall accessories offering superb quality and exceptional value.

Features:

- A standard design - suitable for domestic or commercial installations.
- Colour coded terminals for easy installation
- 2 earth terminals
- Flush Neon Indicator on 970, 972, 974 & 976

Product Images

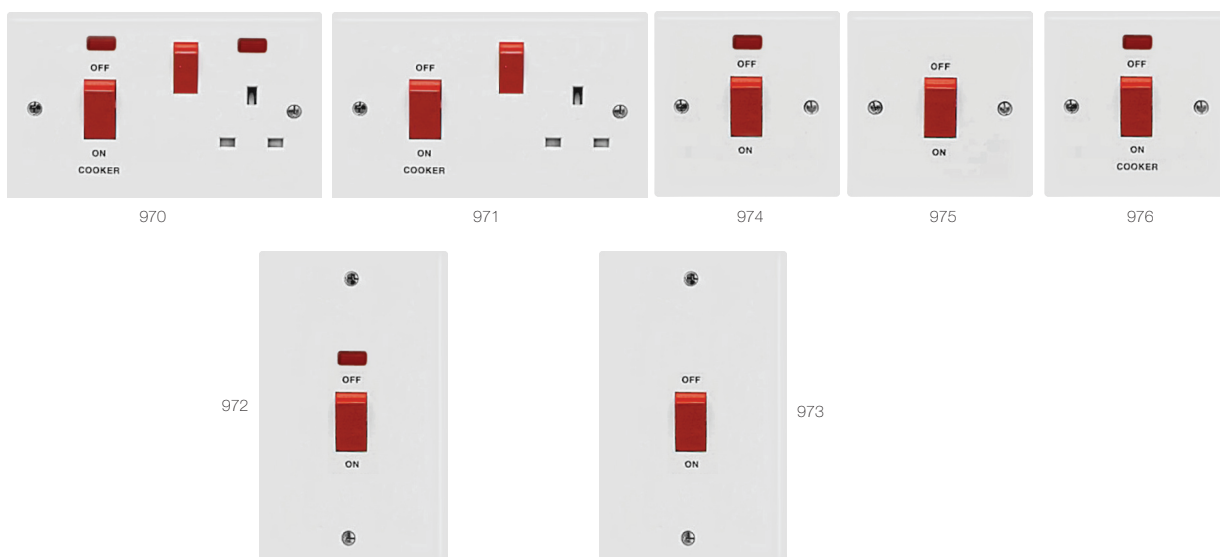

Technical Specifications

Standard(s)	BS 4177 (970, 971 products)
	BS EN 60669 (972, 973, 974, 975 products)
Rating	45 Amp 250V~
Switch Type	Double pole
Contact Gap	3.0mm minimum (972, 973, 974, 975 products)
Terminal Capacity - L & N	4 x 4.0mm ² 3 x 6.0mm ² 1 x 16.0mm ²
Terminal Capacity - Earth	3 x 4.0mm ² 2 x 6.0mm ² 1 x 16.0mm ²
RoHS Directive	No
WEEE Directive	No
Mounting Box Depth(Min)	47mm
Fixing Centres	60.3mm (974, 975 products)
	120.6mm (970, 971 products)
	120.6mm vertical (972, 973 products)
Size	146.5mm x 86mm x 31.8mm (970, 971 products)
	146.5mm x 86mm x 29.3mm (972, 973 products)
	86mm x 86mm x 29.3mm (974, 975 products)

45 Amp Double Pole Switches

Packaging Information

Cat No.	Description	Packaging Type			Pack Quantity			Barcode		
		Product	Inner Box	Outer Box	Each	Inner Box	Outer Box	Individual	Inner Box	Outer Box
970	45A CCU + Neon	Plain Bag	Plain Inner	Plain Outer	1	5	50	/	5021166970094	5021166970087
971	45A CC	Plain Bag	Plain Inner	Plain Outer	1	5	50	/	5021166971091	5021166971084
972	45A Sw + Neon	Plain Bag	Plain Inner	Plain Outer	1	5	50	/	5021166972098	5021166972081
973	45A Sw	Plain Bag	Plain Inner	Plain Outer	1	5	50	/	5021166973095	5021166973088
974	45A Sw + Neon	Plain Bag	Plain Inner	Plain Outer	1	10	100	/	5021166974092	5021166974085
975	45A Sw	Plain Bag	Plain Inner	Plain Outer	1	10	100	/	5021166975099	5021166975082
976	45A Sw + Neon	Plain Bag	Plain Inner	Plain Outer	1	10	100	/	5021166976096	5021166976089

Weights & Dimensions

Cat No.	Description	Dimension (W x L x H) cm			Weight (g)			CMB (m³)
		Product	Inner Box	Outer Box	Each	Inner Box	Outer Box	Outer Box
970	45A CCU + Neon	14.7 x 8.8 x 3.5	15.5 x 19 x 9.7	31.8 x 51 x 19.8	1	1000	12280	0.03211164
971	45A CC	14.7 x 8.8 x 3.5	15.5 x 19 x 9.7	31.8 x 51 x 19.8	1	1000	12300	0.03211164
972	45A Sw + Neon	8.8 x 14.7 x 3.5	15.5 x 19 x 9.7	31.8 x 51 x 19.8	21	1050	10500	0.03211164
973	45A Sw	8.8 x 14.7 x 3.5	15.5 x 19 x 9.7	31.8 x 51 x 19.8	8	800	10500	0.03211164
974	45A Sw + Neon		15.3 x 15.5 x 9.2	31.7 x 49 x 16.3	13	1300	14300	0.02531879
975	45A Sw		15.3 x 15.5 x 9.2	31.7 x 49 x 16.3	12	1200	13340	0.02531879
976	45A Sw + Neon		15.3 x 15.5 x 9.2	31.7 x 49 x 16.3	13	1300	14500	0.02531879

Installation Information

Safety Warning

Before use please read carefully and use in accordance with these safety wiring instructions.

Before commencing any electrical work ensure the supply **is switched off at the mains**. Either by switching off the consumer unit or by removing the appropriate fuse.

Wiring should be in accordance with the latest edition of the IEE regulations (BS 7671).

Wire Identification – Twin & Earth Cable

EARTH = Green/Yellow Slewing

NEUTRAL = Black (pre Apr 04) / Blue (after Apr 04)

LIVE = Red (pre Apr 04) / Brown (after Apr 04)



Technical Helpline: 0845 194 7584

If in doubt consult a competent electrician.

The ends of the individual conductors should have the insulation removed by approx. 12mm. Any bare earth conductors should be sleeved to within 12mm of the ends. (These details are for general information only and conductor lengths may need to be trimmed in certain installations).

General Installation Instructions

- 1) If using the new product to replace an old one, note the cable connections and wire up new product in the same way as the old one, with Earthing as stated in these instructions.
- 2) Ensure the mounting box (metal or patress) for either flush or surface mounting is the appropriate size for the product.
- 3) Route the cable through the most suitable entry point of the mounting box. If a metal box is used, a protective cable grommet should be used.
- 4) Cables should be prepared so a sufficient conductor length reaches the terminals. Strip the ends of the individual conductors so that an adequate length enters the terminals.
- 5) Carefully arrange the wiring to lie along the edges of the product or box, keeping the central area clear.
- 6) To assist with the correct installation please consult the appropriate wiring diagram on this leaflet.
- 7) When connecting the new accessory ensure that only the bare end of the wire enters the terminal, and no bare wires are visible.

Always tighten the terminal screws securely, but do not overtighten.

An earth connection should always be made between the mounting box earth terminal, and the accessory earth terminal, where fitted. If this earth wire is bare, it is essential that it is sheathed with a length of green/yellow sleeving.

8) Carefully position the accessory into the wall box, ensuring that no wires are trapped between the plate and the wall. Do not overtighten the screws. (Fit screw covers + clip-on)

9) Once work has been completed correctly, replace the fuse for the circuit, switch the power back on, and test.

The product is now ready for use.

* Note - If your installation uses a four lug metal mounting box, remove the top and bottom lugs or bend fully back.

45 Amp Double Pole Switches


Installation Information

45 Amp Double Pole Cooker Control Unit

This product has no cable entry, and should only be used for "hard" wired installations. Connect the cables as shown in the diagram.

NOTE

This product must be connected to a separate 45 Amp protected radial circuit.

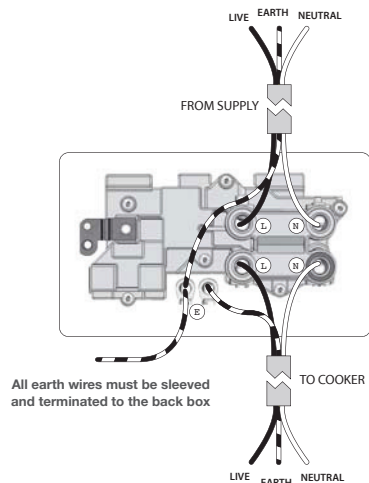


45 Amp Double Pole Switch - Double Plate

This product has no cable entry, and should only be used for "hard" wired installations. Connect the cables as shown in the diagram.

NOTE

This product must be connected to a separate 45 Amp protected radial circuit.

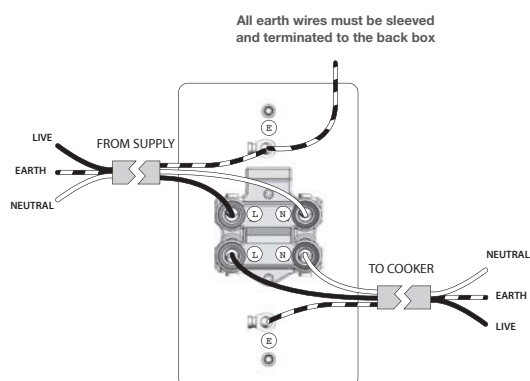

45 Amp Double Pole Switch - Single Plate

This product has no cable entry, and should only be used for "hard" wired installations. Connect the cables as shown in the diagram.

NOTE

This product must be connected to a separate 45 Amp protected radial circuit.

