

Bluetooth Car Stereo

Bilstereo med Bluetooth



Art.no.
38-3385

Model
SM-8366UBR

Ver. 201002

clas ohlson

Bluetooth Car Stereo

Art. No. 38-3385 Model SM-8366UBR

Please read the entire instruction manual before using the product and save it for future reference. We reserve the right for any errors in text or images and any necessary changes made to technical data. If you have any questions regarding technical problems please contact Customer Services.

Safety

Read the entire manual before installing!

N.B.

- Incorrect installation invalidates the warranty!
- Cutting the cables invalidates the warranty.
- If you do not have any existing ISO connectors use the included ISO harness for installation.

Product description

Car stereo with:

- CD player
- Bluetooth
- MP3 playback capabilities
- WMA playback
- USB and SD memory card connections
- FM radio with RDS
- Removable front panel
- Power: 4 x 40 W



Installation

Dash mounting in your existing (DIN) frame



- Only use the included or recommended mounting accessories for correct installation.
- Do not install the car stereo in a way that interferes with the driver's visibility or that may pose a physical danger to the passenger or driver during quick deceleration.
- Avoid installation where the car stereo may be exposed to direct sunlight, extreme heat or vibrations.
- If the installation angle exceeds 30° the device's proper functioning can not be guaranteed.



1. Remove the mounting frame from the stereo by inserting the included keys, releasing the holding pins, and pull the frame out from the stereo.
2. Insert the mounting frame into your car's dash space and fold out the locking flaps (2) to hold the car stereo in position in the mounting space (1).
3. Thread the car's ISO harness through the mounting frame.
4. Connect the ISO connectors and antenna and try all functions.
5. Insert the car stereo into the mounting frame so the holding pins on the sides are aligned correctly.

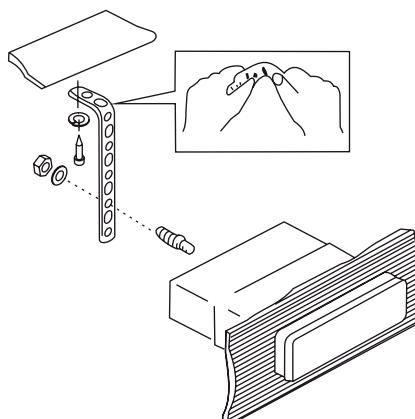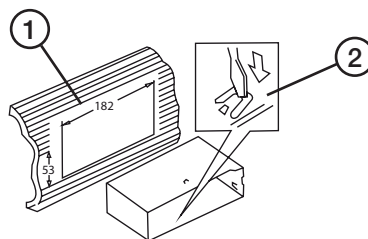

Removal

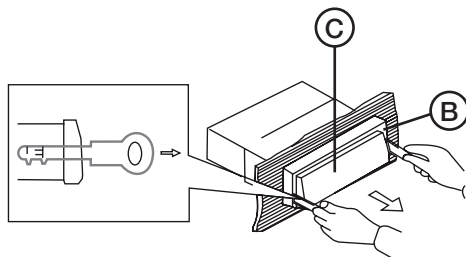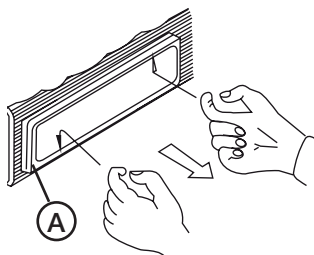


1. Remove the front panel and remove the outer frame (A) carefully with your fingers at the places marked in the figure (b).
2. Insert the included keys in the space between the mounting frame (B) and the car stereo (C) . Push the keys in until a "click" sound is heard.
3. Carefully pull out the keys to remove the stereo.
4. Disconnect the ISO and antenna connectors.

Removable front panel


Removal

1. Turn off the device with the ON/OFF button.
2. Press the panel release button (1).
3. Carefully remove the front panel.

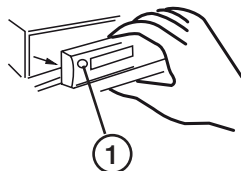


Attachment

1. Attach the front panel with the right side first as shown by arrow A and B in the figure.
2. Press in the front panel's left side carefully until a "click" sound is heard.

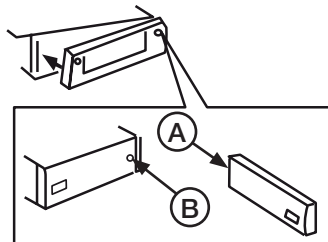

Connections


The car stereo has the following connections: Aerial, ISO quick connectors, 5 channel speaker output (front, rear, sub-w).

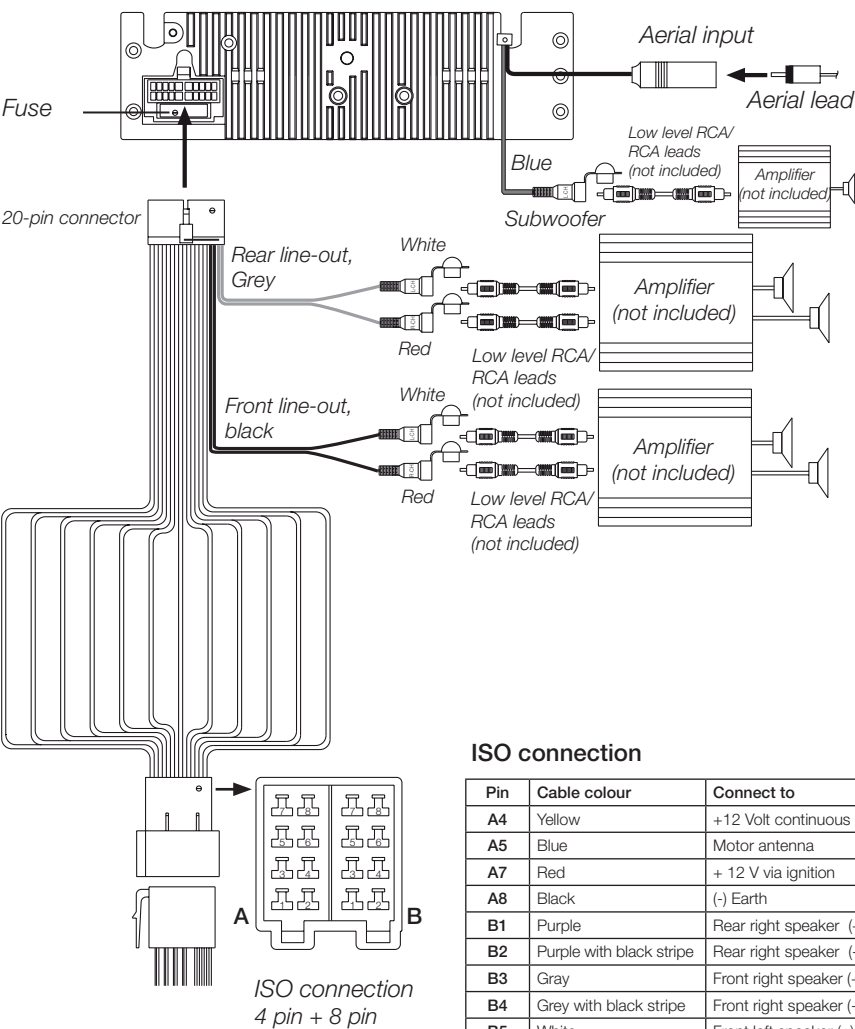

ISO connection

Pin	Cable colour	Connect to
A4	Yellow	+12 Volt continuous
A5	Blue	Motor antenna
A7	Red	+ 12 V via ignition
A8	Black	(-) Earth
B1	Purple	Rear right speaker (+)
B2	Purple with black stripe	Rear right speaker (-)
B3	Gray	Front right speaker (+)
B4	Gray with black stripe	Front right speaker (-)
B5	White	Front left speaker (+)
B6	White with black stripe	Front left speaker (-)
B7	Green	Rear left speaker (+)
B8	Green with black stripe	Rear left speaker (-)

Basic functions

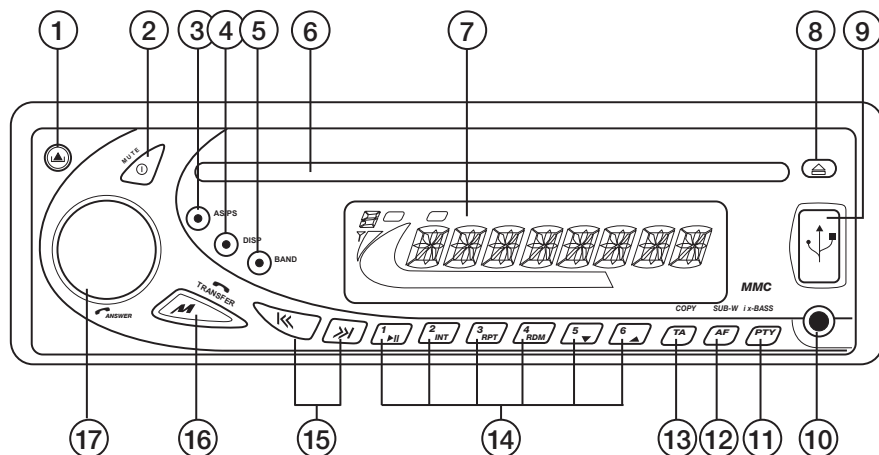

1. **▲ Panel lock** – Press to release the front panel.
2. **ⓘ Power** – ON/OFF button.
3. **ID3/AS/PS** – Displays ID-3 tags. Selects AS/PS setting in radio mode.
4. **MENU/DISP** – Selects display mode (frequency, track, playback time, time, etc.).
5. **CLEAR/BAND** – Selects radio bandwidths (AM/FM).
6. **Disc tray**
7. **Display**
8. **▲ EJECT** – Press to remove/insert a CD.
9. **USB** – USB memory connection.
10. **AUX** – (external sound input). Connection for external sound sources, e.g. MP3 players.

11. PTY Programme type

Categories for different types of programme that makes it possible to search for desired categories of information.

Press the required number of times to choose the desired mode: PTY Music Group → PTY Speech Group → PTY Off. The current PTY code will be shown on the display.

- Press any button from [M1] to [M6] to choose between different PTY codes:

Buttons	Music type	Programme type
M1	Pop, Rock	News, information
M2	Popular music	Sports, Education
M3	Classical	Culture
M4	Jazz, Country	Weather, Finance, Children's programmes
M5	National, Oldies	Religion, Debate
M6	Folk music	Travel

Choosing PTY causes the radio to search for a matching programme on the current frequency band.

12. AF Alternative frequency

Displays all receivable FM frequencies that transmit the same station. The radio will automatically switch to the strongest transmission.

- Press to turn on/off AF mode. "AF" is indicated on the display when this function is activated.

13. TA Traffic announcement

Has the same functions as MENU/DISP.

14. M1 – M6 Station memory

Press to jump to the saved frequency.

Saving stations into memory: 1. Select the desired frequency/station with the tuner (15).
2. Press and hold the desired memory button for approx. 2 seconds to save the frequency/station.

15. I◀◀ / ▶▶I Switches tracks/Searches for stations

- Push to automatically scan for a station.
- Hold depressed to select manual search. Push required number of times to browse the frequency band.

16. MODE/TRANSFER

- Press MODE in order to select an audio source: Radio, CD, USB, SD/MMC, BT-Audio or external (AUX In).

17. Volume control/Equalizer

- Adjusts the volume.
- Press the volume control knob (17) to reach menu mode and navigate using I◀◀ / ▶▶I (15): VOL > BAS > TRB > BAL > FAD (other settings addressed later in this manual).
- Adjust the selected setting by turning the volume control. There is 5 second window in order to enter a setting.

18. SD/MMC memory card connection (behind the front panel)

Releasing the front panel allows for SD/MMC card insertion.

19. RESET (reset button)


Resets the device to factory settings. Located on the car stereo behind the front panel.

Dual function buttons

2. **MUTE**. Turns off the volume completely.
11. **iX-Bass**. Hold depressed to activate the iX-Bass feature. iX-Bass icon will appear on the display. Press again to turn off this feature.
12. **Subwoofer**. Hold depressed to activate the subwoofer function. The Sub-w icon will appear on the display. Press again to turn off this function.
13. **COPY**. Used for copying files.
14. **PLAY/PAUSE**. Starts and pauses playback.
16. **TRANSFER**. Used for receiving calls.

AUX-INPUT (10)

Used to connect external audio sources. Pressing MODE selects AUX mode. Pressing again returns to the previous mode.

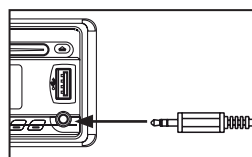

Menu commands

The following menu commands are accessible in the same way as the audio settings.

- Press the volume control knob (17) to reach menu mode and navigate using **◀◀ / ▶▶** (15). When the desired function is reached use the volume control knob (17) to make your selection. After 5 seconds it will revert back to the previous mode.

Synchronising (PAIR HF)

Used to synchronise your mobile phone or other Bluetooth device to the stereo.

(RE-CON)

Manual Bluetooth reconnection.

Ringtone volume (BT VOL)

Used to adjust the ringtone volume. The pre-installed setting is 20. Use the volume control knob (17) to adjust between 00 and 38.

Setting the time (CLK)

The factory setting is set to 12.00. Minutes are adjusted by turning the volume control knob (17) clockwise. Hours are adjusted by turning the volume control knob (17) anticlockwise.

AREA (EUR/RUS/USA/LAT)

Selects the region for correct frequency band setting when setting the frequency.

DISTANT/LOCAL

Switches between receiving EON information from strong to weaker stations.

REG

Selects whether regional broadcasts/programmes will be received or not.

TA

Turns the traffic announcement on/off.

Power-on volume level setting (P-VOL)

The volume level is preset to 12 when the stereo is turned on. In order to programme in another level, select VOLUME LEVEL and turn the volume control knob. You have 5 seconds to make your selection.

Button tones (BEEP)

The stereo is preset with the button tones activated. In this mode, turn the volume control knob to select BEEP TONE Off to turn deactivate the button tones.

Radio

- Press [CLEAR/BAND] (5) to switch between [FM1], [FM2], [FM3] and [MW](AM).
- To switch to manual search, depress and hold **I◀◀** or **▶▶I**. You have a 3 second window to set desired frequency using **I◀◀** or **▶▶I**.
- To scan automatically press **I◀◀** or **▶▶I** to scan to the next station.
- Press [M1] to [M6] (14) in order to select a preset station from memory.
- To save a current radio station, depress one of the preset station buttons [M1] to [M6] (14) for 3 seconds.
- AUTOMATICALLY STORE/PRESET SCAN (AS/PS).

AS (auto save): Automatically selects 6 strongly transmitted stations. Depress ID3/AS/PS (3) for 3 seconds. A-STORE will begin flashing on the display. Saved stations will flash on the display during scanning. The old stations will now be replaced with the newly scanned stations.

PS (preset scan): Depress ID3/AS/PS (3) for less than 3 seconds. The radio will pause for 10 seconds at each stored station. Current stations will flash on the display during scanning. Press again to listen to the chosen station. When the stereo has gone through the preset stations 1-6 the scanning will automatically stop.

STEREO

The stereo automatically receives stereo signals. The ST icon will show in the display. In those cases where only a mono-signal can be received the ST icon will disappear from the display.

RDS FUNCTIONS

This car stereo is equipped with the following RDS functions.

1. **AF** Alternative frequency – Automatically switches to the same station sending on an alternative frequency. Provides uninterrupted listening.
 2. **CT** Automatic time setting.
 3. **EON** Allows the stereo to temporarily jump to stations carrying vital traffic information.
 4. **PI** Unique code used to identify the station's country of origin, etc.
 5. **PS** Displays the radio station's name.
 6. **PTY** Programme type.
 7. **REG** Regional broadcasts/programme.
 8. **TA** Traffic announcements.
 9. **TP** Traffic programme.
- **AF function**
Press [AF] (12) for less than 3 seconds to activate the AF function. When this function is activated the AF icon will appear on the display. If the signal is weak the stereo will automatically switch to another station with a stronger signal on the same network. The stereo is preset with AF activated.

- **TA function (traffic announcements)**

Press the volume control and browse with **I◀◀** or **▶▶I** in the menu until TA appears and then turn the knob to set TA standby mode. The TA icon will appear on the display for 5 seconds. In this mode the stereo will receive traffic announcements regardless of which mode it is set to. "TRAFFIC INFO" will appear on the display before each announcement. You can turn off a current message manually by pressing TA (13). The stereo will then return to TA standby mode. An audible beep indicates that the traffic announcement reception has been broken. "Lost TP, TA" will then appear on the display.

- **PTY (refer to point 11 under Basic functions)**

CD player

1. Insert a CD into the CD slot with the label facing up.
2. The playback starts automatically beginning with the first track.
3. Quick presses on **I◀◀** or **▶▶I** (15) selects the previous or next track. Depress and hold **I◀◀** or **▶▶I** to quick search backwards or forwards within a track.
4. Use [M1] to [M6] (14) to control playback:
 - a. [1 ▶/II] PAUSE – Press to pause playback.
 - b. [2 INT] INTRO SCAN – Press to play the first 10 seconds of every track.
 - c. [3 RPT] REPEAT – Repeats the current track.
 - d. [4 RDM] RANDOM – Press for random playback.
5. Press **▲** (8) if to remove/insert a CD.

CD playback of MP3/WMA files

1. Insert a CD containing MP3/WMA files into the CD slot with the label facing upwards.
2. "READING" will appear on the display shortly followed by "Fxx Txx" before playback automatically begins from the first file. Fxx=Number of folders and Txx=Number of files.
3. Press [M5] **▼** or [M6] **▲** to select the desired folder on the CD.
4. Quick presses on **I◀◀** or **▶▶I** [15] selects the previous or next track. Press and hold **I◀◀** or **▶▶I** to quick search back or forward in a track.
5. Use [M1] to [M6] (14) to control playback:
 - a. [1 ▶/II] PAUSE – Press to pause playback.
 - b. [2 INT] INTRO – Press to play the first 10 seconds of every track.
 - c. [3 RPT] REPEAT – Repeats the current track.
 - d. [4 RDM] RANDOM – Press for random playback.
6. Press repeatedly on the button [ID3/AS/PS] (3) to show the MP3 information*, also known as the ID3-TAG, in the following order: TITEL → ARTIST → ALBUM NAME.
* requires that this information is already saved on the file.
7. Press [M6] **▲** (8) if to remove/insert a CD.

MP3/WMA file or folder search

Searching by file/track numbers

Press [CLEAR/BAND] (5). "NUMBER" will show on the display. Use the volume control knob (17) to select the desired file/track number. Confirm by pushing in the volume control knob (17).

Browsing through files and folders

- Press [CLEAR/BAND] (5) twice. "FILE" will show on the display. Turn the volume control knob to navigate the available folders and files.
- Press the volume control knob (17) for less than 3 seconds in order to access subfolders or files.
- Confirm by pressing the volume control knob (17).
- While browsing press [ID3/AS/PS] (3) or turn the volume control knob (17) anticlockwise to reach the upper level of a folder.


ID3 information

If any file contains ID3 information such as album title, song, artist, etc. this will automatically appear on the display. You can also view this information manually by pressing AS/PS (3).


USB

Note: The same principles apply here as with CD playback of MP3/WMA files. Refer to that section for more information.

Inserting/removing a USB drive

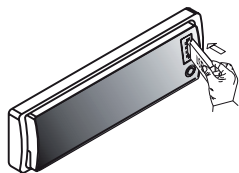

Insert a USB drive.

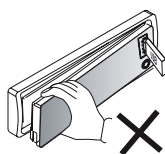

Warning: *Never remove the front panel (1) with a USB drive still connected.*


WARNING:

Remember to turn off the power to the stereo or change modes before removing the USB drive. Never try to remove the USB when it is playing. It can damage the memory.

SD/MMC memory cards

Note: The same principles apply here as with CD playback of MP3/WMA files. Refer to that section for more information.


Inserting/removing SD/MMC memory cards

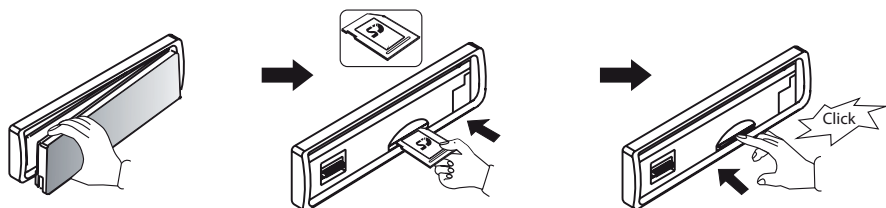

Remove the front panel (1).

Insert a memory card with the label facing upwards.

Insert the card into the slot until a click is heard.

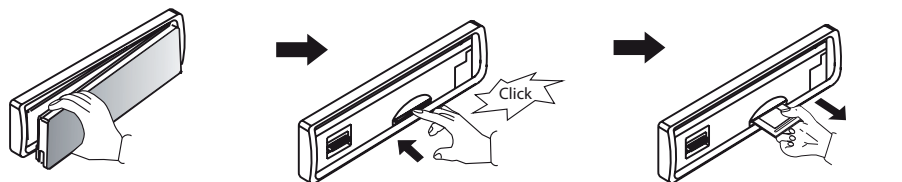

Remove the front panel (1).

Insert the card into the slot until a click is heard.

Remove the memory card.

Copying audio files

MP3 and WMA files are supported for file transfer.

Copying MP3/WMA files from CD

1. Start playback of a file and depress and hold TA (COPY) (13) to activate file transfer.
2. The display will show **C>>USB**. Turn the volume control knob (17) to select between **C>>USB / C>>CARD**.
3. Once the storage media has been selected press the volume control knob (17) to confirm and start file transfer. If no button is pressed within 10 seconds the device will revert back to the previous mode.
4. If the memory card is full **MEM FULL** will be displayed. The device will then revert back to the previous mode.

5. After pressing the volume control knob (17) playback will cease and file transfer will begin.
6. File transfer progress will be shown on the display.
7. When transfer is complete **COPY OK** will be shown on the display. The transferred files will automatically be saved with the following filenames "MY_MP3" or "MY-WMA" on the chosen storage media.
8. To stop file transfer press and hold [TA] (COPY) (13) again. **STOP 01** will show on the display. Files that are not completely transferred will be deleted.

Transferring MP3/WMA files between storage media

Select the desired storage media with [MODE/TRANSFER] (16) and begin playback of the desired file you wish to transfer.

1. Start playback of a file and depress and hold [TA] (COPY) (13) to activate file transfer.
2. The display will show **C>>USB**. Turn the volume control knob (17) to select between **C>>USB / C>>CARD**.
3. Once the storage media has been selected press the volume control knob (17) to confirm and start file transfer. If no button is pressed within 10 seconds the device will revert back to the previous mode.
4. If the memory card is full **MEM FULL** will be displayed. The device will then revert back to the previous mode.
5. After pressing the volume control knob (17) playback will cease and file transfer will begin.
6. File transfer progress will be shown on the display.
7. When transfer is complete **COPY OK** will be shown on the display. The transferred files will automatically be saved with the following filenames "MY_MP3" or "MY-WMA" on the chosen storage media.
8. To stop file transfer press and hold [TA] (COPY) (13) again. **STOP 01** will show on the display. Files that are not completely transferred will be deleted.

Deleting files

Files from USBs and memory cards can be deleted. Files from a CD cannot. There are different methods available for deleting files.

1. Deleting during playback

- Depress and hold [CLEAR/BAND] (5) to reach ERASE mode.
- The display will show **ERASEXXX** (XXX is the current track).
- Press the volume control knob (17) shortly to reach ERASE mode.
- Turn the volume control knob (17) to select **✓** or **N** to cancel. If no button is pressed within 5 seconds the device will revert back to the previous mode.
- When **✓** appears on the display, press the volume control knob (17) again to confirm deletion of the file being played.
- Once the volume control knob (17) has been pressed, playback will cease and **ERASEOK** will appear on the display. The next file will then begin playback.

2. Deleting in file search mode

File numbers/files can be searched and deleted in file search/navigation mode.

- In file search/navigation mode depress and hold [CLEAR/BAND] (5) to reach ERASE mode.
- The display will show **ERASEXXX** (XXX is the current track).
- Press the volume control knob (17) shortly to reach ERASE mode.
- Turn the volume control knob (17) to select **✓** or **N** to cancel. If no button is pressed within 5 seconds the device will revert back to the previous mode.
- When **✓** appears on the display, press the volume control knob (17) again to confirm deletion of the file being played.
- Once the volume control knob (17) has been pressed, playback will cease and **ERASEOK** will appear on the display. The next file will then begin playback.

Organising folders and files

The stereo has a feature that allows folders and files to be arranged exactly as they would on a computer.

Folders

The device automatically creates folders on the USB/SD/MMC storage media.

MY_MP3: Used to save all MP3 files from a USB drive or memory card.

MY_WMA: Used to save all WMA files from a USB drive or memory card.

MY_AUX: Used to save all files from the AUX LINE IN source.

Files

The device will automatically create file names followed by a folder name. For example a file transferred from a CD will be given the filename "CD0001.MP3". This file will be created and automatically stored in a folder.

Bluetooth handsfree

Instructions for Bluetooth handsfree.

1. First make sure that your mobile supports Bluetooth.
2. Make sure that your mobile is synchronised to the device you will be using.
3. "BT60A" is the name of the device and will also be displayed on your mobile.
4. For the best results hold the telephone within a 3 metre range from the device.
5. Certain brands, for example Sony Ericsson have a "Power Saving Mode". Do not use this function as it can interfere with the Bluetooth Handsfree.
6. For the best results do not wander more than 1 metre away from the device when making/receiving calls.
7. To finish a Bluetooth call turn it off manually on your mobile or select disconnect or select "disconnect" in the system menu.
8. Certain brands of mobiles like Nokia support "IN BAND RING TONE", which means that the ringtone used in your mobile can also be used in the device. Otherwise a standard ringtone is heard in the device.
9. In order to avoid an echo effect, the volume on the device should be set to under 30.
10. If any function does not work properly, a SOFT-RESET may be in order. This is done by removing the stereo's front panel and waiting 1 minute before replacing it. Replace the front panel and try again. If necessary you may also do a full reset by pressing RESET (19) found behind the front panel.

Synchronising

Synchronising the device to your mobile

1. Enter the menu and select PAIRING (synchronising).
2. When **PAIR HF** appears in the display, press the volume control knob (17) to activate pairing mode.
3. Press [CLEAR/BAND] (5) whenever you wish to cancel.
4. Search for Bluetooth devices on your mobile (refer to your mobile phone's manual).
5. "BT60A" will appear. Select "BT60A" and enter 1234 as the password.
6. **PAIRFAIL** will flash for 3 seconds if synchronisation is unsuccessful. The device will then revert back to the previous mode.

Bluetooth reconnect system

The device has an automatic reconnect system. In certain cases it is necessary to do this manually.

1. Enter the menu and select RE-CON.
2. **RE-CON** will show on the display. Press MODE/TRANSFER [16] to activate automatic reconnect mode.
3. **WAIT >>>** will appear on the display first and then **OK**.

Incoming calls

Answering incoming calls

1. During incoming calls the caller ID will show in the display. If the caller is anonymous **PHONE IN** will show on the display. Press volume control knob (17) to answer an incoming call.
2. Anything that is playing on the stereo will be muted during an incoming call.
3. The volume control knob (17) can be used for volume adjustment.
4. Press [CLEAR/BAND] (5) to end the call. Anything that was playing on the stereo prior will return.

Refusing an incoming call

1. Press [CLEAR/BAND] (5) to refuse a call.

Making a call

1. Make a normal call with your mobile. When you hear a ring signal **CALL** will appear.
2. Anything that is playing on the stereo will be muted.
3. The volume control knob (17) can be used for volume adjustment.
4. Depress and hold [CLEAR/BAND] (5) to end the call. Anything that was playing on the stereo prior will return.

Transferring a call to your mobile

1. During a current call depress and hold [MODE/TRANSFER] (16) in order to transfer the call from the stereo to your mobile. This will take approximately 3 seconds. Your stereo will be muted and "MUTE" will appear on the display. Repeat the same procedure in order to transfer the call to your stereo.
2. Anything that was playing on the stereo will continue to be muted. Press ON/OFF/ MUTE (2) to turn on the volume again.

Bluetooth Audio Streaming A2DP (Advanced Audio Distribution Profile)

It is possible to stream audio from your mobile (if A2DP is supported) to the stereo. Refer to the section on Synchronising on how to get started.

Note: If your mobile has both HFP (Hands Free Profile) and A2DP then both will be synchronised simultaneously. You will not need to synchronise this separately.

Transferring music from your mobile to your stereo

1. Synchronise your mobile to the stereo.
2. Press [MODE/TRANSFER] (16) until "BT AUDIO" appears in the display.
3. If synchronisation is successful "BT AUDIO" will appear in the display. You will now be able to transfer music from your mobile to your stereo.

Your regular telephone functions will continue to work even in this mode.

Remote control

1. ON/OFF

Turns the power on/off

2. EJECT

Ejects the disc

3. MENU/DISP

Selects display mode
(frequency, track, playback
time, time, etc.)

4. MODE

Sets the desired mode: CD,
USB, etc.

5. MUTE

Mutes the stereo

6. + Increases the volume

7. - Decreases the volume

8. ►►I

Jumps to the next track/fast searches in a track/scans for stations.

9. I◄◄

Jumps to the previous track/fast searches in a track/scans for stations.

10. AUDIO/ENTER

Redials the last number dialled.

11. BAND/ERASE/SEARCH

Selects AM/FM/searches folders and files.

12. PAU/M1

Pause/preset radio station.

13. INT/M2

Intro/preset radio station.

14. RPT/M3

Repeat/preset radio station.

15. RDM/M4

Random playback/preset radio station.

16. F-DN/M5

Browses down a folder level/preset radio station.

17. F-UP/M6

Browses up a folder level/preset radio station.

18. AF/SUB-W

Selects AF mode for the radio/subwoofer.

19. AS/PS/ID3


Selects AS/PS setting in radio mode. Displays ID-3 tags.

20. TA/COPY

Selects TA mode for the radio/copies files.

21. PTY/X-BASS

Selects PTY mode for the radio/bass boost

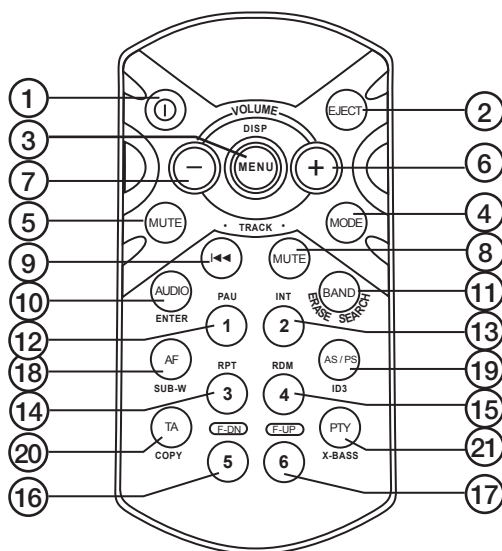

Care and maintenance

Use a soft damp cloth to wipe the product. Never use solvents or strong detergents.

Troubleshooting guide

Problem	Possible cause	Solution
The device does not start.	The car's ignition is not turned on.	Turn on the ignition.
	The fuse is broken.	Check and change the fuse.
The disc cannot be played.	The disc is wrong.	Try another disc.
	The disc is not properly inserted.	Insert the disc with the text up.
	The disc is dirty.	Clean the disc.
	The car's interior is too hot.	Wait until the car has cooled down.
	Condensation on the lens.	Turn off the device and wait an hour.
No sound.	The volume is turned down.	Adjust the volume.
	The speakers are not connected properly.	Check the connections.
The buttons do not work.	The micro processor may need to be reset.	Press "Reset" behind the front panel.
	The front panel is loose.	Attach the front panel properly.
The sound disappears.	The device is angled too much (max 30°).	Adjust the installation.
	The disc is dirty or faulty.	Clean or replace the CD.
No radio reception.	Antenna cord is not connected.	Check the connections.
	The signals are too weak.	Choose another frequency/station.
The display will show ERROR 1.	The micro processor may need to be reset.	Press "Reset" behind the front panel.
An echo is heard during calls.	The volume is set too high.	Reduce the volume to under 30.
The clock displays no time ("NO CLOCK").	The clock is set automatically by the RDS information The radio station may not be transmitting RDS information or the reception is too weak.	Switch to a stronger signal.

Disposal

Follow local ordinances when disposing of this product. If you are unsure of how to dispose of this product, please contact your municipality.

Specifications

FM

Frequency Range:	87.5 – 108 MHz
Signal-to-noise ratio	50 dB

CD player

Signal-to-noise ratio	70 dB
Frequency response	5 – 20,000 Hz

Bluetooth

Range	3 metres (unobstructed)
-------	-------------------------

General

Operating voltage	11 – 14 V DC
Polarity	Negative earth
Speaker impedance	4 Ohms
Output	4 x 40 W

Bilstereo med Bluetooth

Art.nr 38-3385 Modell SM-8366UBR

Läs igenom hela bruksanvisningen före användning och spara den sedan för framtida bruk. Vi reserverar oss för ev. text- och bildfel samt ändringar av tekniska data. Vid tekniska problem eller andra frågor, kontakta vår kundtjänst (se adressuppgifter på baksidan).

Säkerhet

Läs igenom hela bruksanvisningen innan montering!

OBS!

- Vid felaktig inkoppling upphör garantin att gälla!
- Om kablarna på bilstereon klipps upphör garantin att gälla.
- Om platsen för montering saknar ISO-kontakter, använd de medföljande lösa ISO-kontakterna med kabel för montering.

Produktbeskrivning

Bilstereo med:

- CD-spelare
- Bluetooth
- Uppspelning av MP3
- Uppspelning av WMA
- Anslutning för USB-minne och SD-minneskort
- FM-radio med RDS
- Löstagbar stöldfront
- Effekt 4 x 40 W



Installation

Montering i monteringsram (DIN)



- Använd endast medföljande eller rekommenderade monteringsstillbehör för korrekt installation.
- Installera inte bilstereon så att den skymmer förarens sikt eller så att den kan skada förare eller passagerare vid eventuell snabb inbromsning.
- Undvik att installera bilstereon på sådant sätt att den utsätts för direkt solljus, stark värme eller starka vibrationer.
- Om installationsvinkeln överstiger mer än 30° kan apparatens funktioner ej garanteras.



1. Ta av monteringsramen från stereon (tryck in de medföljande nycklarna så att spärrarna släpper, och dra ramen bakåt).
2. Tryck in den lösa monteringsramen i bilens uttag och vik ut några av låsflikarna (2) så att de låser fast monteringsramen i monteringshålet (1).
3. Dra fram bilens ISO-kontakter genom monteringsramen.
4. Anslut ISO-kontakterna och antennen och prova alla funktioner.
5. Tryck in bilstereon i monteringsramen så att spärrarna på sidorna kommer i läge.

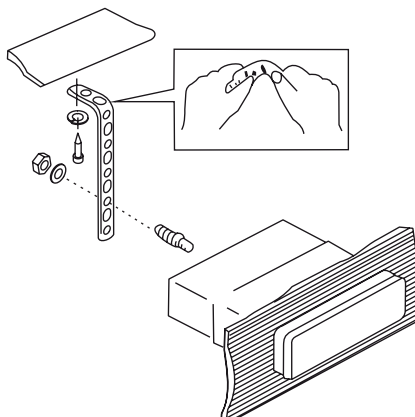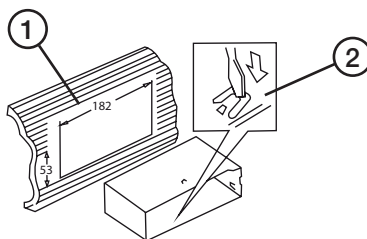

Borttagning av bilstereon

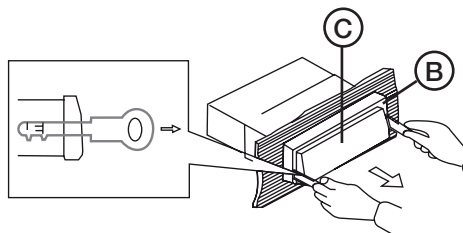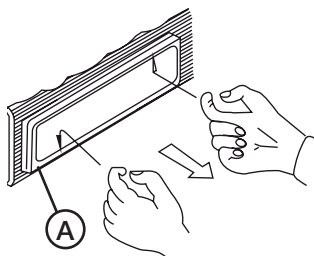


1. Ta bort frontpanelen och avlägsna den yttre ramen (A) försiktigt med fingrarna vid markeringarna enligt bilden.
2. Sätt i de medföljande nycklarna i springorna mellan monteringsramen (B) och bilstereon (C). Nycklarna ska tryckas in tills ett klickljud hörs.
3. Dra försiktigt i nycklarna och bilstereon för att avlägsna bilstereon.
4. Ta bort ISO-kontakterna och antennkontakten.

Löstagbar frontpanel

Ta bort frontpanelen


Panelspärr

1. Stäng av apparaten med AV/PÅ-knappen.
2. Tryck in panelspärren (1).
3. Ta bort frontpanelen försiktigt.

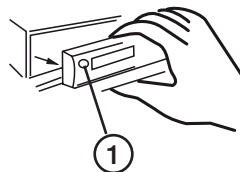


Sätta dit frontpanelen

1. Sätt dit frontpanelen med den högra sidan först med pilen A mot pilen B enligt figuren.
2. Tryck försiktigt på frontpanelens vänstra sida tills ett klickljud hörs.

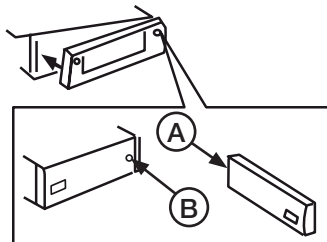

Anslutningar


Bilstereoapparaten har följande anslutningar: Antennanslutning, snabbkoppling ISO, 5-kanals lågnivåutgång (fram, bak, sub-w).

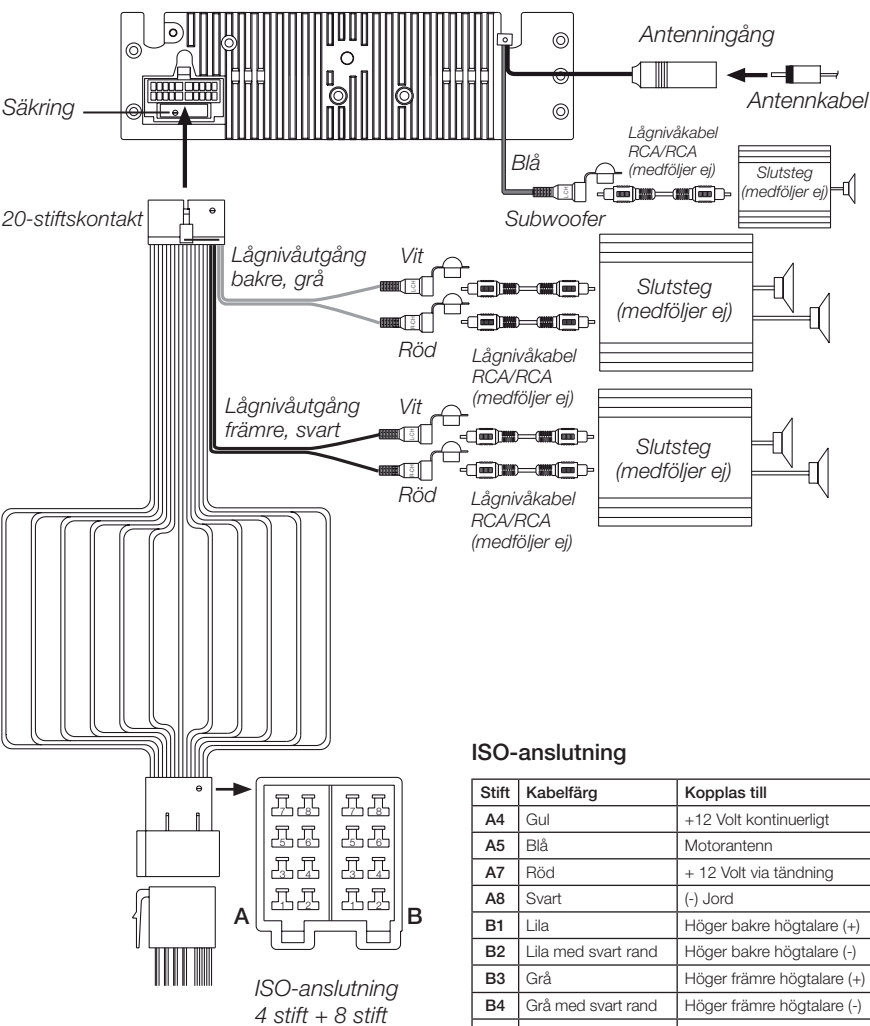

ISO-anslutning

Stift	Kabelfärg	Kopplas till
A4	Gul	+12 Volt kontinuerligt
A5	Blå	Motorantenn
A7	Röd	+ 12 Volt via tändning
A8	Svart	(-) Jord
B1	Lila	Höger bakre högtalare (+)
B2	Lila med svart rand	Höger bakre högtalare (-)
B3	Grå	Höger främre högtalare (+)
B4	Grå med svart rand	Höger främre högtalare (-)
B5	Vit	Vänster främre högtalare (+)
B6	Vit med svart rand	Vänster främre högtalare (-)
B7	Grön	Vänster bakre högtalare (+)
B8	Grön med svart rand	Vänster bakre högtalare (-)

Grundfunktioner

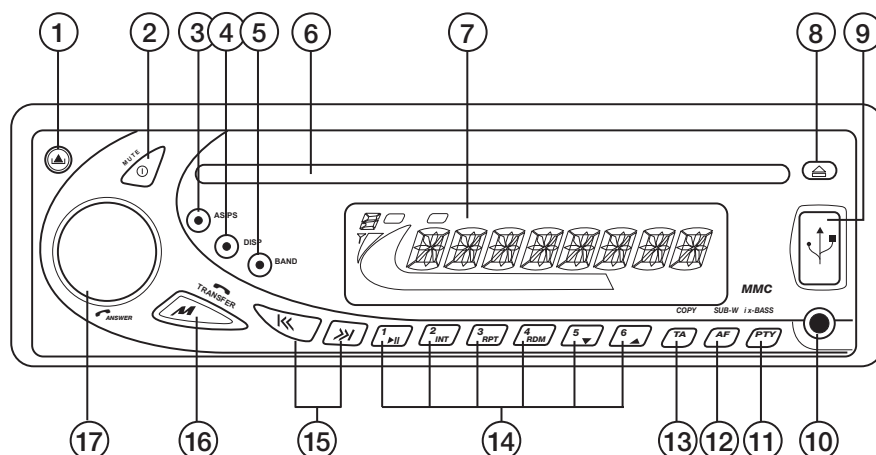

1. **Panelspärr** – Tryck på knappen för att lossa frontpanelen.
2. **Strömbrytare** – Av/På-knapp
3. **ID3/AS/PS** – Visar ID-3 tag/ väljer AS/PS-läge på radion.
4. **MENU/DISP** – Ändrar visningsläge i displayen (frekvens, spår, speltid, klocka etc.).
5. **CLEAR/BAND** – Växla mellan olika radioband.
6. **Skivfack**
7. **Display**
8. **EJECT** –Tryck för att ta ur CD-skivan.
9. **USB** – Anslutning för USB-minne.
10. **AUX** – (extern ljudingång), anslutning för extern ljudkälla, t.ex. MP3-spelare.
11. **PTY** – Programtyp
 Koder för olika typer av program som gör det möjligt att söka önskad information.
 Tryck upprepade gånger för att välja läge: *PTY Music Group* → *PTY Speech Group* → *PTY Off*. Aktuell PTY-kod visas på displayen.
 - Tryck på någon av knapparna [M1] till [M6] för att välja bland de olika PTY-koderna:

Knapp	Musiktyp	Programtyp
M1	Pop, rock	Nyheter, information
M2	Populärmusik	Sport, utbildning
M3	Klassiskt	Kultur
M4	Jazz, country	Väder, finans, barnprogram
M5	Nationell, äldre musik	Religion, debatt
M6	Folkmusik	Reseprogram

När du valt PTY-kod söker radion igenom frekvensbandet för att försöka hitta en station som har matchande program.

12. AF Alternativ frekvens

Visar alla hörbara FM-stationer som sänder samma information. Radion byter automatiskt till den starkaste sändaren.

- Tryck för att slå på eller av AF-läget. "AF" visas i displayen när funktionen är aktiverad.

13. TA

Denna knapp har samma funktion som MENU/DISP.

14. M1 – M6 Stationsminnen

Tryck på en minnesknapp för att snabbt ta fram den lagrade frekvensen.

Lagra frekvenser:

1. Välj önskad frekvens med frekvensväljaren (15).
2. Tryck och håll in önskad minnesknapp i ca 2 sekunder för att lagra frekvensen.

15. I◀◀ - ▶▶I Byt spår/Sök frekvens

- Tryck för att automatiskt söka station.
- Tryck och håll in för att välja manuell sökning. Tryck sedan upprepade gånger för att välja frekvens uppåt/nedåt.

16. MODE/TRANSFER

- Tryck på MODE-knappen för att välja vilken ljudkälla som ska användas, Radio, CD, USB, SD/MMC, BT-Audio eller extern ljudkälla (AUX In).

17. Volymratt/Equalizer

- Vrid för att justera ljudvolymen.
- Tryck på volymratten (17) för att komma in i menyn och navigera med I◀◀ /▶▶I (15) : VOL → BAS → TRB → BAL → FAD (övriga inställningar tas upp längre fram i bruksanvisningen).
- Justera vald ljudinställning med volymratten. Vänta sedan 5 sekunder så sparas inställningarna automatiskt.

18. Anslutning för SD/MMC-minneskort (bakom frontpanelen)

Tag loss frontpanelen och sätt i ett SD-kort i anslutningen.

19. RESET (återställningsknapp)


Återställer apparaten till fabriksinställningar. Knappen är placerad på bilstereon bakom frontpanelen.

Knappar med dubbla funktioner

2. **① MUTE.** Tystar ljudet helt.
11. **iX-Bass.** Ett långt tryck på knappen aktiverar iX-Bass-funktionen. iX-Bass-symbolen visas i displayen. Tryck igen för att stänga av funktionen.
12. **Subwoofer.** Ett långt tryck på knappen aktiverar subwoofer-funktionen. Sub-w-symbolen visas i displayen. Tryck igen för att stänga av funktionen.
13. **COPY.** Används för kopiering av filer.
14. **PLAY/PAUSE.** Startar och pausar uppspelning.
 - (2) INT – Intro.
 - 3) RPT – Repeat.
 - (4) RDM – Random
 - (5-6) ▼ och ▲ - Bläddring bland mappar vid MP3-uppspelning.
16. **TRANSFER.** Tryck för att svara på ett samtal.

AUX-INGÅNG (10)

Anslut den externa ljudkällan till ingången på fronten. Tryck sedan på MODE-knappen för att välja AUX-läge. Tryck igen för att återgå till föregående läge.



Menyfunktioner

Följande menyfunktioner är tillgängliga och nås på samma sätt som ljudinställningarna.

- Tryck på volymratten (17) för att komma in i menyn och navigera med ◀◀◀ / ▶▶▶ (15). När den önskade funktionen visas, justera med volymratten (17) inom 5 sekunder. Efter 5 sekunder sparas inställningarna automatiskt.

Länkning (PAIR HF)

Denna funktion används för att länka din mobiltelefon eller annan Bluetooth-apparat med bilstereon.

(RE-CON)

Manuell återkoppling av Bluetooth-anslutning.

Ringvolym på inkommande samtal (BT VOL)

Enheten kan ha en förinställd ringvolym. Standardinställningen är 20. Använd volymratten (17) för att justera mellan 00 och 38 i ringvolym.

Ställa in klockan (CLK)

Klockan är förinställd på 12.00. Justera minuterna genom att vrida volymratten (17) medsols. Justera timmarna genom att vrida volymratten (17) motsols.

AREA (EUR/RUS/USA/LAT)

Välj område för rätt decimaler vid frekvensinställning.

DISTANT/LOCAL

Växla mellan att ta emot EON-information från endast starka eller svagare radiostationer.

REG

Välj om regionala sändningar/program ska mottas eller ej.

TA

Trafikmeddelande på eller av.

Volymläge vid påslagning av bilstereon (P-VOL)

Volymen är förinställd på 12 när radion slås på. För att programmera en annan nivå, välj VOLUME LEVEL och vrid på volymratten inom 5 sekunder.

Knappljud (BEEP)

Bilstereon är förinställd med knappljud på. I detta läge, vrid volymratten till BEEP TONE Off för att stänga av knappljudet.

Lyssna till radion

- Tryck på [CLEAR/BAND]-knappen (5) för att växla mellan FM1, FM2, FM3 och MW (AM).
- För att växla till manuellt sökläge, tryck och håll in **◀◀** eller **▶▶**. Ställ sedan inom 3 sekunder in önskad frekvens med knapparna **◀◀** och **▶▶**.
- För automatisk sökning tryck på **◀◀** eller **▶▶** för att komma till nästa station.
- Tryck på en av minnesknapparna [M1] till [M6] (14) för att snabbt ta fram en lagrad frekvens från minnet.
- För att spara den radiostation du lyssnar på, håll ned en minnesknapp av [M1] till [M6] (14) i 3 sekunder.
- AUTOMATICALLY STORE/PRESET SCAN (AS/PS).

AS (spara automatiskt): Väljer automatiskt 6 st. starka stationer. Håll ned ID3/AS/PS-knappen (3) i 3 sekunder. A-STORE blinkar i displayen. Lagrade stationer blinkar i displayen under sökningen. De nya stationerna ersätter de gamla lagrade.

PS (förinställd sökning): Håll ned ID3/AS/PS-knappen (3) i mindre än 3 sekunder. Radion pausar i 10 sekunder för varje förinställd radiokanal. Aktuell station blinkar i displayen under pågående sökning. Tryck på knappen igen för att lyssna på önskad station. När bilstereon har gått igenom minnesplats 1-6 så avslutas sökningen automatiskt.

STEREO

Bilstereon tar automatiskt emot stereosignalen. ST-ikonen visas då i displayen. I de fall då det bara kan tas emot monosignal försvinner ikonen.

RDS FUNKTIONER

Bilstereon är utrustad med följande RDS funktioner.

1. **AF:** Alternativ frekvens gör att du behåller samma kanal om du åker in i t.ex. ett annat län och frekvensen ändrar sig.
 2. **CT:** Automatisk klockinställning.
 3. **EON:** Tillåter bilstereon att tillfälligt och automatiskt gå in på andra stationer för trafikmeddelanden.
 4. **PI:** Unik kod för att identifiera stationen beroende på land etc.
 5. **PS:** Namn på radiostationen i displayen.
 6. **PTY:** Programtyp.
 7. **REG:** Regionala sändningar/program.
 8. **TA:** Trafikmeddelande.
 9. **TP:** Trafikprogram.
- **AF-funktion**
Tryck på [AF]-knappen (12) i mindre än 3 sekunder för att välja om AF-funktionen ska vara aktiv. När funktionen är aktiverad visas symbolen AF i displayen. Om signalen är svag så byter bilstereon automatiskt till en annan station i samma nätverk. Bilstereon är förinställd med AF aktiverat.

- **TA-funktion (trafikmeddelande)**

Tryck på volymratten och bläddra med **◀◀** eller **▶▶** i menyn tills TA visas och vrid sedan på volymratten för att slå på TA standbyläge. TA-ikonen visas i displayen i 5 sekunder. I detta läge mottas trafikmeddelanden oavsett vilket läge bilstereon är inställt i. "TRAFFIC INFO" visas i displayen före ett meddelande. Det går att avsluta meddelandet genom att trycka på TA-knappen (13). Bilstereon återgår till TA standbyläge. Ett pipljud indikerar att trafikmeddelandet avbröts och displayen visar "Lost TP, TA".

- **PTY (se punkt 11 i grundfunktioner)**

CD-uppspelning

1. Sätt i en CD-skiva i CD-facket med etiketten vänd uppåt.
2. Uppspelningen startar automatiskt från det första spåret.
3. Tryck kort på **◀◀** eller **▶▶** [15] för att välja föregående eller nästa spår. Tryck och håll in **◀◀** eller **▶▶** för att snabbspola bakåt eller framåt i spåret.
4. Använd funktionsknapparna [M1] till [M6] (14) för att styra uppspelningen:
 - a. [1 ▶/II] PAUSE – Tryck för att pausa uppspelningen.
 - b. [2 INT] INTRO SCAN – Tryck för att spela upp de 10 första sekunderna på alla spår.
 - c. [3 RPT] REPEAT – Repetition av aktuellt spår.
 - d. [4 RDM] RANDOM – Tryck för att välja slumpvis uppspelning.
5. Tryck på **▲** (8) om du vill ta ur CD-skivan.

MP3/WMA-uppspelning från CD-skiva

1. Sätt i en CD-skiva innehållande MP3-filer i CD-facket med etiketten vänd uppåt.
2. Displayen visar en kort stund "READING" och sedan " Fxx Txx" innan uppspelningen startar automatiskt från den första filen. Fxx=antalet mappar och Txx=antal filer.
3. Tryck på knapparna [M5] ▼ eller [M6] ▲ för att välja önskad mapp på CD-skivan.
4. Tryck kort på **◀◀** eller **▶▶** [15] för att välja föregående eller nästa spår. Tryck och håll **◀◀** eller **▶▶** in för att snabbspola bakåt eller framåt i spåret.
5. Använd funktionsknapparna [M1] till [M6] (14) för att styra uppspelningen:
 - a. [1 ▶/II] PAUSE – Tryck för att pausa uppspelningen.
 - b. [2 INT] INTRO – Tryck för att spela upp de 10 första sekunderna på alla spår.
 - c. [3 RPT] REPEAT – Repetition av aktuellt spår.
 - d. [4 RDM] RANDOM – Tryck för att välja slumpvis uppspelning.
6. Tryck upprepade gånger på knappen ID3/AS/PS (3) för att visa MP3-informationen*, s.k. ID3-TAG, i följande ordning: TITEL → ARTIST → ALBUMNAMN
* Krävs att information finns sparad på filen.
7. Tryck på [M6] ▲ (8) om du vill ta ur CD-skivan.

MP3/WMA söka efter fil eller mapp

Söka direkt efter filnummer

Tryck på [CLEAR/BAND]-knappen (5). "NUMBER" visas i displayen. Vrid på volymratten (17) för att komma till önskat nummer. Avsluta med att trycka ned volymratten (17) för att bekräfta valet.

Navigera i mappar och filer

- Tryck två gånger på [CLEAR/BAND]-knappen (5). "FILE" visas i displayen. Vrid på volymratten för att navigera mellan de mappar och filer som finns tillgängliga.
- Tryck på volymratten (17) i mindre än 3 sekunder för att komma in i undermappar eller filer.
- Bekräfta val genom att trycka ned volymratten (17).
- Under navigering, tryck på [ID3/AS/PS]-knappen (3) eller vrid på volymratten (17) motsols för att komma tillbaka till toppen på foldern.


ID3 information i displayen

Om någon fil innehåller ID3-information som till exempel albumtitel, låt, artist, etc. så visas det automatiskt i displayen. Det går också att använda [AS/PS] (3) för att se informationen manuellt.


Uppspelning från USB

Observera! Tillvägagångssättet är likadant som för "MP3/WMA-uppspelning från CD-skiva. Se det avsnittet för info.

Sätta i och ta bort USB enhet

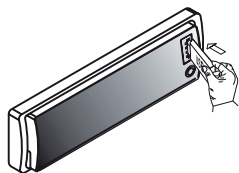

Sätt i USB-minnet.

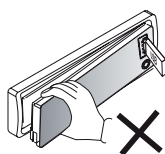

Varning: Ta aldrig bort frontpanelen (1) när ett USB-minne är inkopplat.


VARNING:

Kom alltid ihåg att stänga av strömmen till bilstereon eller byta till annat läge innan USB-enheten tas bort. Försök aldrig ta bort USB-enheten när en låt spelas, det kan skada minnet.


Uppspelning från minneskort

Observera! Tillvägagångssättet är likadant som för "MP3/WMA-uppspelning från CD-skiva. Se det avsnittet för info.


Sätta i och ta bort SD-eller MMC-minne

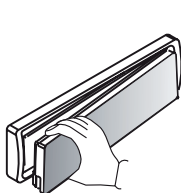


Ta bort frontpanelen (1).

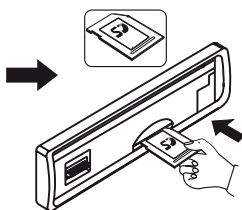


Sätt i minneskortet med texten uppåt.

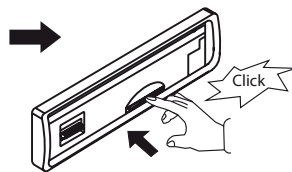


Tryck in kortet tills ett klickljud hörs.

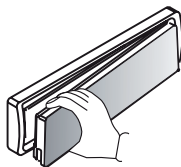

Ta bort frontpanelen (1).

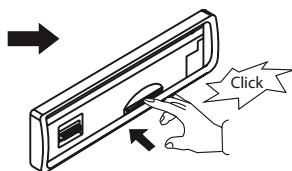

Tryck in minneskortet tills ett klickljud hörs.

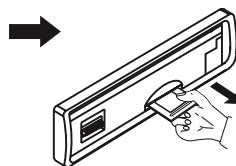

Ta ur minneskortet.

Kopiera musikfiler

Musikfiler som stöder kopiering är MP3 och WMA.

Kopiera MP3-eller WMA-filer från CD

1. Spela upp en musikfil och tryck och håll ned [TA] (COPY)-knappen (13) för att aktivera överflyttningsläge.
2. Displayen visar **C>>USB**, vrid på volymratten (17) för att välja mellan **C>>USB** →, **C>>CARD**.
3. När valet av lagringsmedia har gjorts, tryck på volymratten (17) för att bekräfta och starta överföringen. Om ingen annan knapp trycks ned inom 10 sekunder återgår enheten automatiskt till föregående läge.
4. Om till exempel SD-kortet är fullt visas **MEM FULL**. Enheten återgår automatiskt till föregående läge.

5. Efter att volymratten (17) har tryckts ned stannar uppspelningen och överflyttningen startar.
6. Under överföringen visas i displayen hur mycket som utförts.
7. När överföringen är klar visas **COPY OK**. Den överflyttade filen sparas automatiskt ned i "MY_MP3" eller "MY-WMA" på lagringsmediats minne.
8. För att stoppa överföringen tryck och håll ned [TA] (COPY)-knappen (13) igen. **STOP OI** visas i displayen. Filer som inte flyttats över helt raderas.

Flytta MP3-eller WMA-filer mellan lagringsmedia

Välj lagringsmedia med [MODE/TRANSFER]-knappen (16) och spela upp filen du vill flytta.

1. Spela upp en musikfil och tryck och håll ned [TA] (COPY)-knappen (13) för att aktivera överflyttningsläge.
2. Displayen visar **C>>USB**, vrid på volymratten (17) för att välja mellan **C>>USB** →, **C>>CARD**.
3. När valet av lagringsmedia har gjorts, tryck på volymratten (17) för att bekräfta och starta överföringen. Om ingen annan knapp trycks ned inom 10 sekunder återgår enheten automatiskt till föregående läge.
4. Om till exempel SD-kortet är fullt visas **MEM FULL**. Enheten återgår automatiskt till föregående läge.
5. Efter att volymratten (17) har tryckts ned stannar uppspelningen och överflyttningen startar.
6. Under överföringen visas i displayen hur mycket som utförts.
7. När överföringen är klar visas **COPY OK** i displayen. Den överflyttade filen sparas automatiskt ned i "MY_MP3" eller "MY-WMA" på lagringsmediats minne.
8. För att stoppa överföringen tryck och håll ned TA (COPY)-knappen (13) igen. **STOP OI** visas i displayen. Filer som inte flyttats över helt raderas.

Radera filer (ERASING)

Det går att radera filer från USB-minne eller minneskort. Det går dock inte att radera spår på CD. Det finns olika metoder för att radera.

1. Radera under uppspelning

- Tryck och håll ned [CLEAR/BAND]-knappen (5) för att komma in i ERASE-läge.
- Displayen visar **ERASExxx**. (xxx motsvarar aktuellt spår).
- Tryck snabbt på volymratten (17) för att komma in i ERASE-läge.
- Vrid på volymratten (17) för att välja **F** eller välj **N** för att avbryta. Om ingen annan knapp trycks ned inom 5 sekunder återgår enheten automatiskt till föregående läge.
- När **F** visas i displayen, tryck på volymratten (17) igen för att bekräfta radering av den fil som spelas.
- Efter att volymratten (17) har tryckts ned så stannar uppspelningen och **ERASEOK** visas i displayen. Nästa låt spelas sedan upp.

2. Radera i filsökningsläge/navigeringsläge

Det går att välja filnummer/filnamn och radera i filsökningsläge/navigeringsläge.

- I filsöknings/navigeringsläge, tryck och håll ned [CLEAR/BAND]-knappen (5) för att komma in i ERASE-läge.
- Displayen visar **ERASExxx**. (xxx motsvarar aktuellt spår).
- Tryck snabbt på volymratten (17) för att komma in i ERASE-läge.
- Vrid på volymratten (17) för att välja **F** eller välj **N** för att avbryta. Om ingen annan knapp trycks ned inom 5 sekunder återgår enheten automatiskt till föregående läge.
- När **F** visas i displayen tryck på volymratten (17) igen för att bekräfta radering av den fil som spelas.
- Efter att volymratten (17) har tryckts ned stannar uppspelningen och **ERASEOK** visas i displayen. Nästa låt spelas sedan upp.

Organisera mappar och filer

Stereon har en funktion som gör att mappar och filer ordnas precis som på en dator.

Mappar

Enheten skapar automatiskt mappar på USB/SD/MMC-lagringsmedia.

MY_MP3: för att spara alla MP3-filer.

MY_WMA: för att spara alla WMA-filer.

MY_AUX: för att spara alla filer från AUX LINE IN.

Filer

Enheten skapar automatiskt filnamn följt av foldernamn. Till exempel på en musikfil överflyttad från en CD ger filnamnet "CD0001.MP3". Den skapas och sparas automatiskt i en mapp.

Användning av Bluetooth handsfree

Användarguide för Bluetooth.

1. Kontrollera först att din mobiltelefon stödjer Bluetooth.
2. Se till att mobiltelefonen är länkad med enheten innan användning.
3. "BT60A" är enhetens namn som även visas i mobiltelefonen.
4. För bästa resultat, håll inte mobiltelefonen mer än 3 meter från enheten.
5. Vissa märken som till exempel Sony Ericsson har "Power Saving Mode" (energisparläge). Använd inte det eftersom det kan försämra funktionen.
6. Prata inte längre än 1 meter från enheten för bästa resultat.
7. För att avsluta ett samtal via Bluetooth med enheten, stäng av manuellt på mobiltelefonen eller välj "disconnect" på enheten.
8. Vissa märken av mobiltelefoner som till exempel Nokia stödjer "IN BAND RING TONE", vilket betyder att den ringsignalen du har på mobiltelefonen också fungerar i enheten. Annars används en standardsignal.
9. För att undvika eko under ett samtal bör volymen vara inställd under 30 på enheten.
10. Om någon funktion inte fungerar som det ska, kan man göra en SOFT-RESET av enheten genom att ta bort frontpanelen från bilstereon och vänta 1 minut. Sätt sedan tillbaka frontpanelen och försök igen. Det går även att göra en full återställning genom att trycka på [RESET]-knappen (19) bakom frontpanelen.

Länkning

Länka Bluetoothsystemet med användarens mobiltelefon och enheten

1. Gå in i menyn och välj PAIRING-läge (länkning).
2. När **PAIR HF** visas i displayen, tryck på volymratten (17) för att aktivera länkings-läge.
3. Tryck på [CLEAR/BAND] (5) när som helst för att avbryta.
4. Sök efter bluetoothenheter på mobiltelefonen (se mobiltelefonens bruksanvisning).
5. "BT60A" visas. Välj "BT60A" och skriv in lösenordet **1234**.
6. Om länkningen misslyckades blinkar **PAIR FAIL** i 3 sekunder . Enheten återgår automatiskt till föregående läge.

Återkoppling av Bluetoothsystemet

Enheten har en automatisk återkopplingsfunktion. I vissa fall måste man återkoppla manuellt.

1. Gå in i menyn och välj RE-CON-läge.
2. **RE-CON** visas i displayen. Tryck på MODE/TRANSFER-knappen (16) för att aktivera automatiskt återkopplingsläge.
3. **WAIT >>>** visas i displayen och sedan **OK**.

Inkommande samtal

Svara på ett inkommande samtal

1. Vid inkommande samtal visas telefonnumret i displayen. Om det är ett anonymt samtal visas **PHONE IN** i displayen. Tryck snabbt på volymratten-knappen (17) för att svara på samtalet.
2. Det som spelas upp i bilstereon tystnar vid ett inkommande samtal.
3. volymratten (17) används för att justera ljudnivån.
4. Tryck på [CLEAR/BAND]-knappen (5) för att avsluta. Det som spelas upp i bilstereon startar igen.

Neka ett inkommande samtal

1. Tryck på [CLEAR/BAND]-knappen (5) för att avböja ett samtal.

Ringa ett samtal

1. Använd mobiltelefonen för att ringa ett samtal. När uppringningen sker visas **CALL**.
2. Det som spelas upp i bilstereon tystnar när man ringer ett samtal.
3. volymratten (17) används för att justera ljudnivån.
4. Tryck på och håll in [CLEAR/BAND]-knappen (5) för att avsluta. Det som spelas upp i bilstereon startar igen.

Flytta ett samtal till mobiltelefonen

1. Under ett samtal tryck och håll in [MODE/TRANSFER]-knappen (16) för att flytta samtalet från bilstereon till mobiltelefonen. Det tar cirka 3 sekunder. Ljudet tystnar på bilstereon och "MUTE" visas i displayen. Upprepa samma procedur för att åter överföra samtalet till bilstereon.
2. Det som spelas upp i bilstereon förblir tyst. Tryck på [ON/OFF/MUTE]-knappen (2) för att slå på ljudet igen.

Bluetooth Audio Streaming A2DP (Advanced Audio Distribution Profile)

Det går att streama musik från mobiltelefonen (om den stöder A2DP) till bilstereon. Se avsnittet om länkning för information hur man kommer igång.

Observera! Om mobiltelefonen har både HFP (Hands Free Profile) och A2DP länkas de samtidigt. Man behöver alltså inte göra en separat länkning.


Lyssna på musik från en mobiltelefon i bilstereon

1. Länka samman mobiltelefonen med bilstereon.
2. Tryck på MODE/TRANSFER-knappen (16) tills "BT AUDIO" visas i displayen.
3. Om länkningen fungerar visas "BT AUDIO" i displayen och musiken kan spelas upp.

Telefonfunktionerna fungerar även när du befinner dig i detta läge.

Fjärrkontrollen

1. **ON/OFF**
Slår på eller av strömmen
2. **EJECT**
Tar ut skivan
3. **MENU/DISP**
Ändrar visnings läge i displayen (frekvens, spår, speltid, klocka etc.)
4. **MODE**
Ställer in önskat läge, till exempel CD, USB, etc.
5. **MUTE**
Tystar ljudet i bilstereon
6. **+** Höjer volymen
7. **-** Sänker volymen
8. **▶▶I**
Går till nästa spår/spolar framåt i spår/söker radiostation

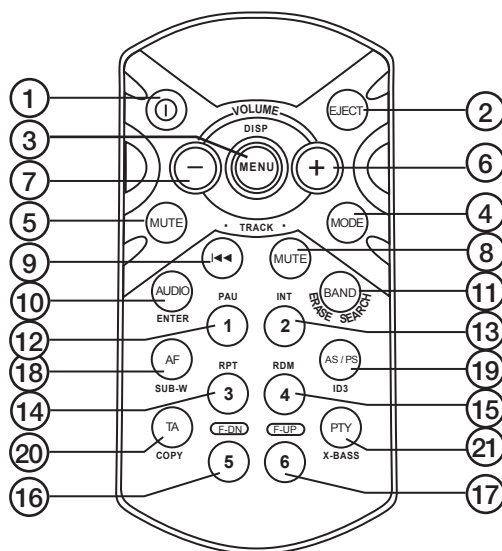

9. **I◀◀** Går till föregående spår/spolar bakåt i spår/söker radiostation
10. **AUDIO /ENTER** Återuppringning av senast slagna nummer.
11. **BAND/ERASE/SEARCH** Väljer AM/FM/söker mappar och filer
12. **PAU/M1** Paus/förinställd radiostation
13. **INT/M2** Intro/förinställd radiostation
14. **RPT/M3** Repetition/förinställd radiostation
15. **RDM/M4** Slumpmässig uppspelning/förinställd radiostation
16. **F-DN/M5** Bläddrar nedåt i mapp/förinställd radiostation
17. **F-UP/M6** Bläddrar uppåt i mapp/förinställd radiostation
18. **AF/SUB-W** Väljer AF-läge på radion/subwoofer
19. **AS/PS/ID3** Väljer AS/PS-läge på radion/visar ID-3 tag
20. **TA/COPY** Väljer TA-läge på radion/kopierar fil
21. **PTY/X-BASS** Väljer PTY-läge på radion/extra basljud

Skötsel och underhåll

Torka av bilstereon med en mjuk lätt fuktad trasa. Använd aldrig lösningsmedel eller starka rengöringsmedel.

Felsökningsschema

Felsymptom	Möjlig orsak	Åtgärd
Enheter startar ej.	Bilens tändning är inte påslagen.	Slå på bilens tändning.
	Säkringen är trasig.	Kontrollera och byt säkringen.
Skivan kan inte spelas upp.	Skivan är felaktig.	Prova med en annan skiva.
	Skivan felaktigt isatt.	Sätt i skivan med etiketten uppåt.
	Skivan är smutsig.	Rengör skivan.
	Temperaturen i bilen är för hög.	Vänta tills bilen svalnat.
	Kondens på linsen.	Låt enheten vara avslagen och vänta i minst en timme.
Inget ljud.	Volymen nedställd.	Justera volymen uppåt.
	Högtalarna är inte korrekt anslutna.	Se över anslutningarna.
Knapparna fungerar ej.	Mikroprocessorn kan behöva återställas.	Tryck på "Reset" bakom frontpanelen.
	Frontpanelen sitter löst.	Sätt fast frontpanelen riktigt.
Ljudet försvinner ibland.	Enheter lutar för mycket (max 30°).	Justera installationen.
	Skivan är smutsig eller felaktig.	Rengör eller byt skivan.
Ingen radio-mottagning.	Antennkabeln är inte ansluten.	Se över anslutningarna.
	Signalerna är för svaga.	Välj en annan frekvens/station.
Displayen visar ERROR 1.	Mikroprocessorn kan behöva återställas.	Tryck på "Reset" bakom frontpanelen.
Det ekar under ett samtal.	För hög volym inställd.	Sänk volymen till under 30.
Klockan visar ingen tid ("NO CLOCK").	Klockan ställs in automatiskt av RDS-informationen. Radiostationen sänder kanske inte RDS-information eller så är mottagningen för svag.	Byt till en starkare radiostation.

Avfallshantering

När du ska göra dig av med produkten ska detta ske enligt lokala föreskrifter. Är du osäker på hur du ska gå tillväga, kontakta din kommun.

Specifikationer

FM

Frekvensområde	87,5 – 108 MHz
Signalbrusförhållande	50 dB

CD-spelare

Signalbrusförhållande	70 dB
Frekvensåtergivning	5 – 20 000 Hz

Bluetooth

Räckvidd	3 meter (oblockerad)
----------	----------------------

Allmänt

Drivspänning	11 – 14 V DC
Polaritet	Minus till jord
Högtalarimpedans	4 Ohm
Uteffekt	4 x 40 Watt

Sverige

Kundtjänst	Tel: 0247/445 00 Fax: 0247/445 09 E-post: kundtjanst@clasohlson.se
Internet	www.clasohlson.se
Post	Clas Ohlson AB, 793 85 INSJÖN

Norge

Kundesenter	Tlf.: 23 21 40 00 Faks: 23 21 40 80 E-post: kundesenter@clasohlson.no
Internett	www.clasohlson.no
Post	Clas Ohlson AS, Postboks 485 Sentrum, 0105 OSLO

Suomi

Asiakaspalvelu	Puh: 020 111 2222 Faksi: 020 111 2221 Sähköposti: info@clasohlson.fi
Internet	www.clasohlson.fi
Osoite	Clas Ohlson Oy, Yrjönkatu 23 A, 00100 HELSINKI

Great Britain

	For consumer contact, please visit www.clasohlson.co.uk and click on customer service.
Internet	www.clasohlson.co.uk

clas ohlson