


Monteringsanvisning/Assembly instructions/Asennusohjeita  
Borrmall/Boremal/Boreskabelon/Drill template/Porausmalli

Karm/Ramme/Frame/Karmi

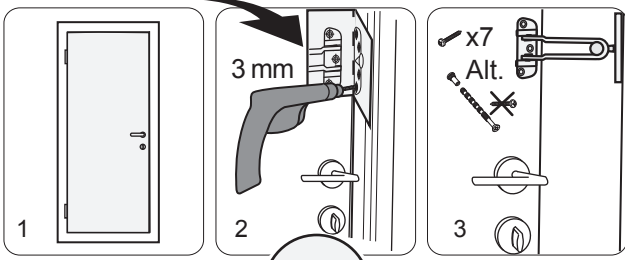


Karm/Ramme/Frame/Karmi



Vik /Fold / Taittaa 90°


Dörr/Dør/Door/Ovi

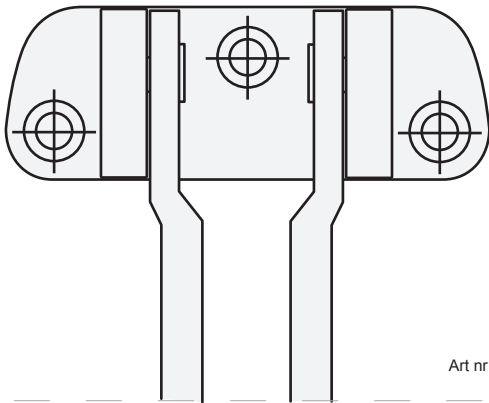

Art nr 15691 1112:2

Monteringsanvisning/Assembly instructions/Asennusohjeita  
Borrmall/Boremal/Boreskabelon/Drill template/Porausmalli

Karm/Ramme/Frame/Karmi

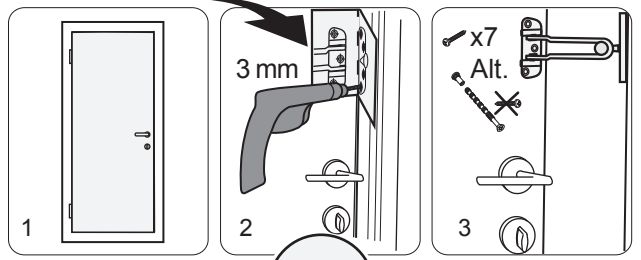


Karm/Ramme/Frame/Karmi



Vik /Fold / Taittaa 90°


Dörr/Dør/Door/Ovi

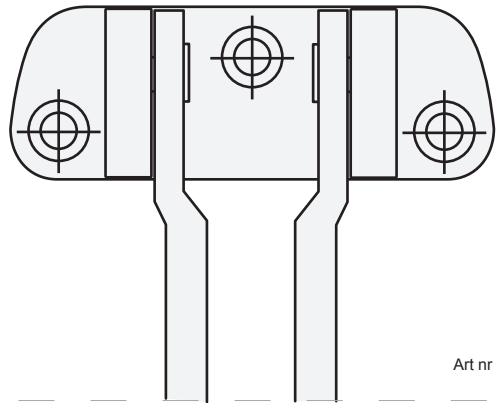

Art nr 15691 1112:2

Monteringsanvisning/Assembly instructions/Asennusohjeita  
Borrmall/Boremal/Boreskabelon/Drill template/Porausmalli

Karm/Ramme/Frame/Karmi

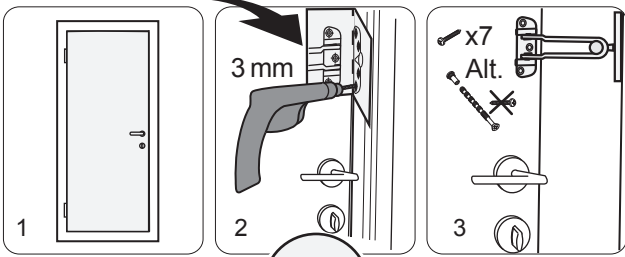


Karm/Ramme/Frame/Karmi



Vik /Fold / Taittaa 90°


Dörr/Dør/Door/Ovi

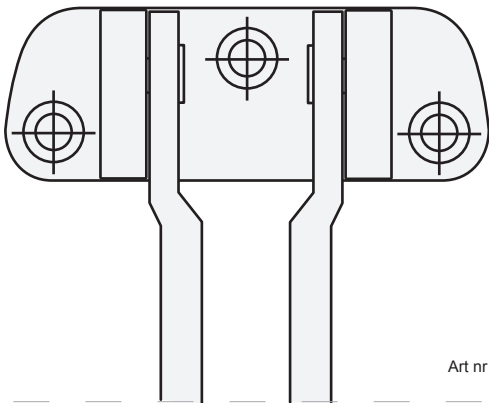

Art nr 15691 1112:2

Monteringsanvisning/Assembly instructions/Asennusohjeita  
Borrmall/Boremal/Boreskabelon/Drill template/Porausmalli

Karm/Ramme/Frame/Karmi

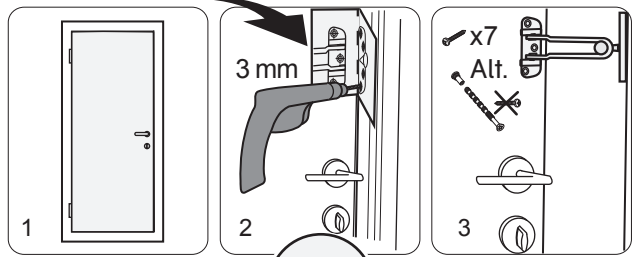


Karm/Ramme/Frame/Karmi



Vik /Fold / Taittaa 90°

Dörr/Dør/Door/Ovi

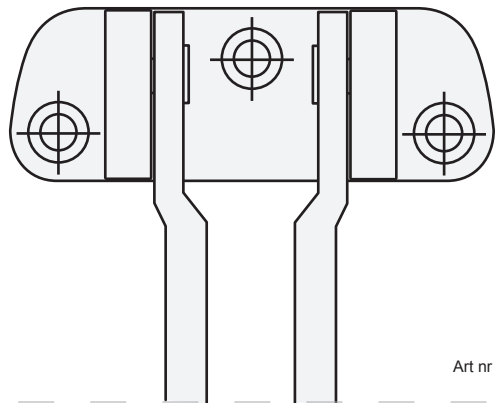

Art nr 15691 1112:2